




ABSODEX General Catalog

There is a reason why people choose us



A broad lineup of ABSODEX selectable according to applications/purposes

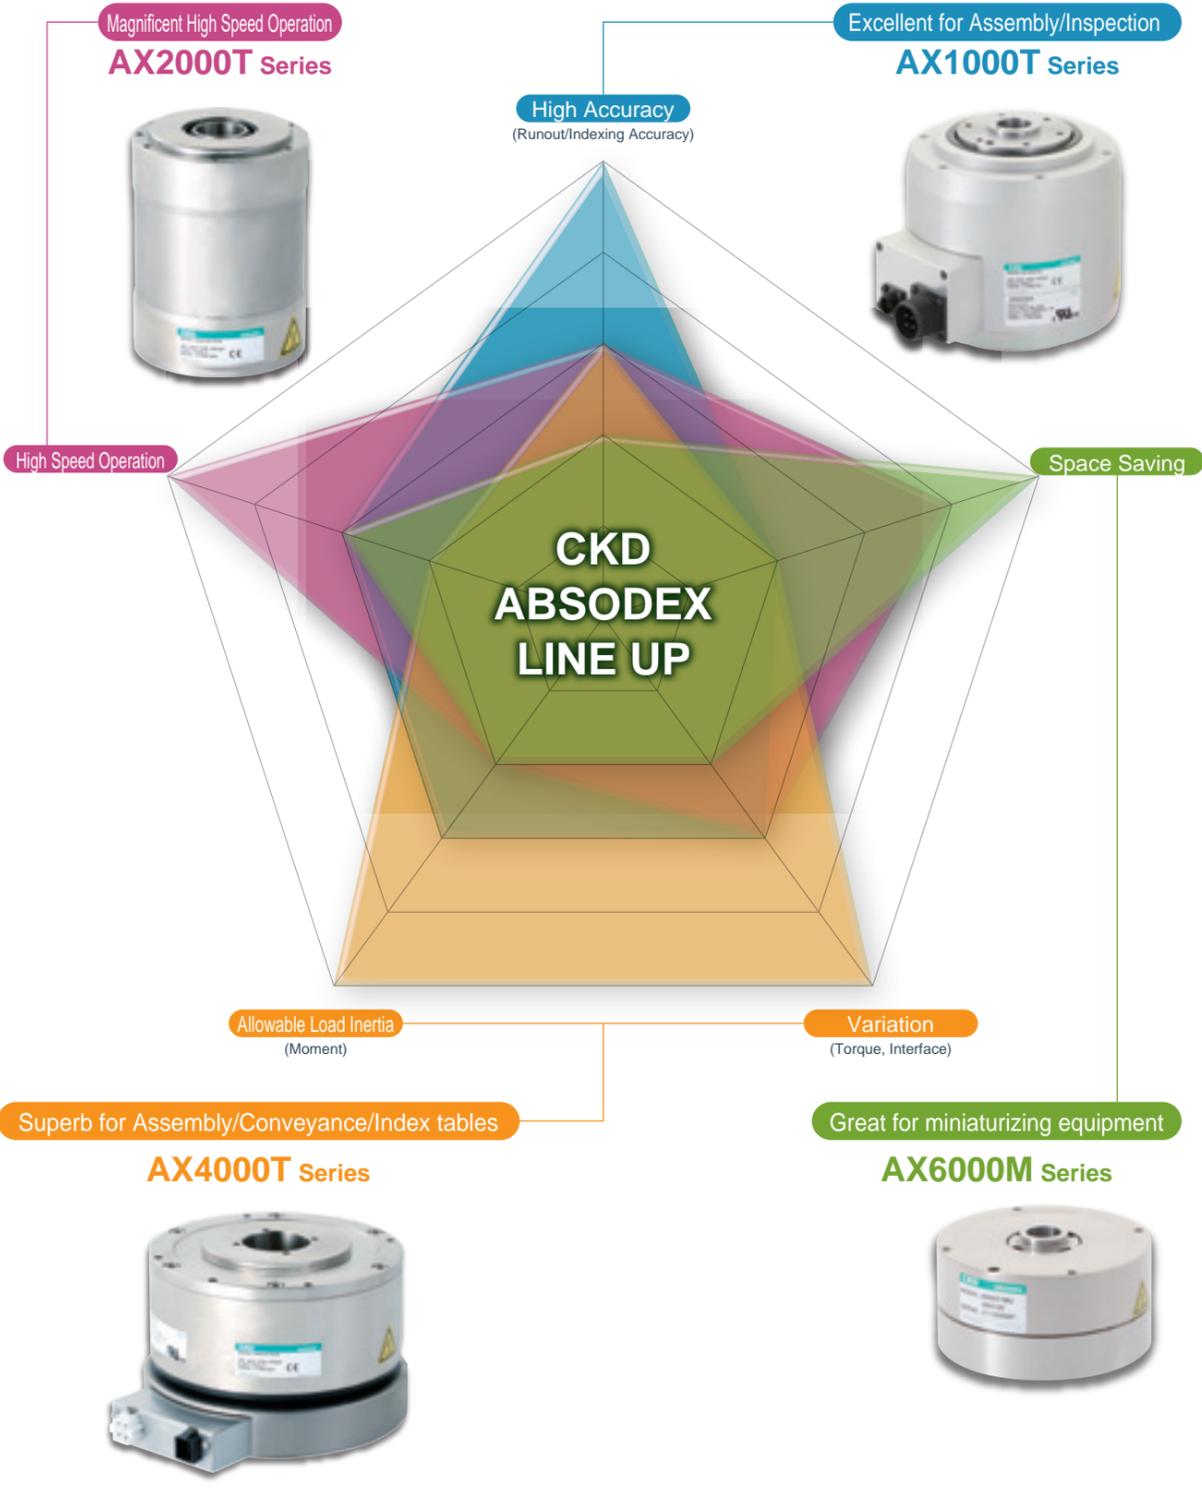

All actuators are absolute types

3 user friendly features of ABSODEX


Flexible Operation

With an abundant programming function realize the operation that you want.




Reduce Workload and Save Space

A simple design with 4 standard useful features.

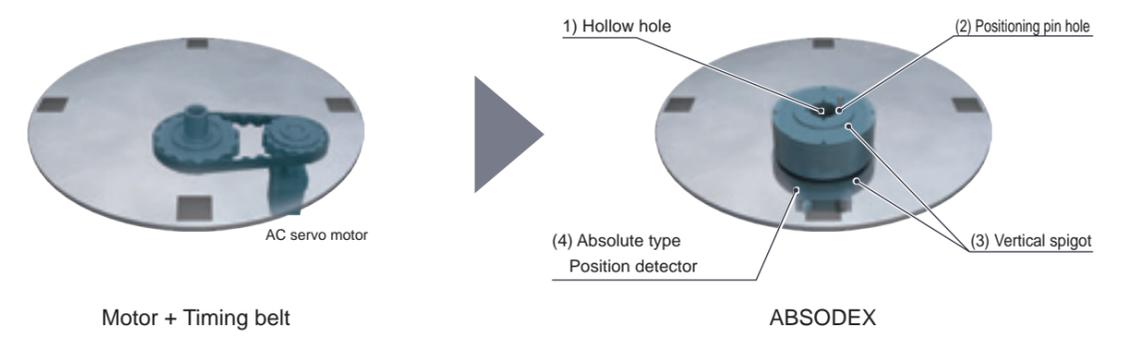

High reliability & maintenance-free

No more damaged or worn gears from a gearless design.

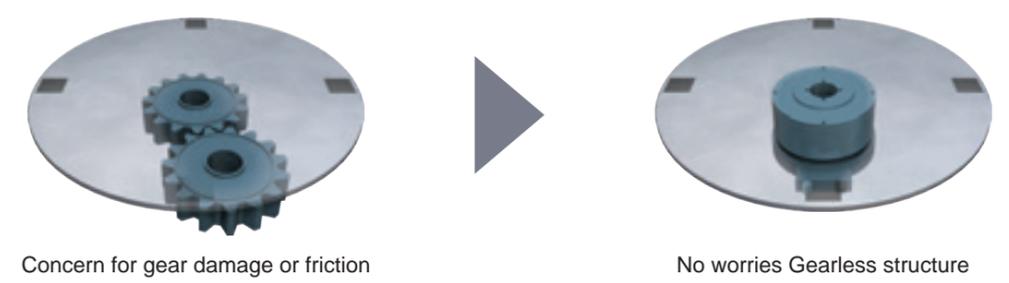


DRIVER

Compatibility

Freely combine compatible drivers and actuators

TS/TH driver
(AX1000T, 2000T, 4000T)

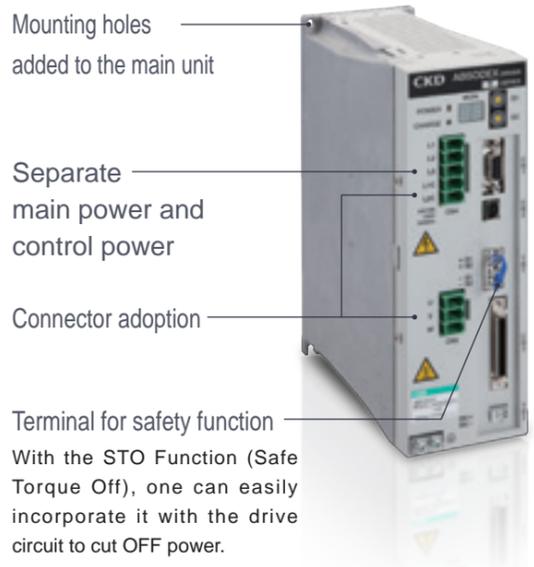


MU driver
(AX6000M)



For the IoT of equipment!

- Monitor function (TS/TH wiresaving serial communication)
- Network operation mode (TS/TH wiresaving serial communication)

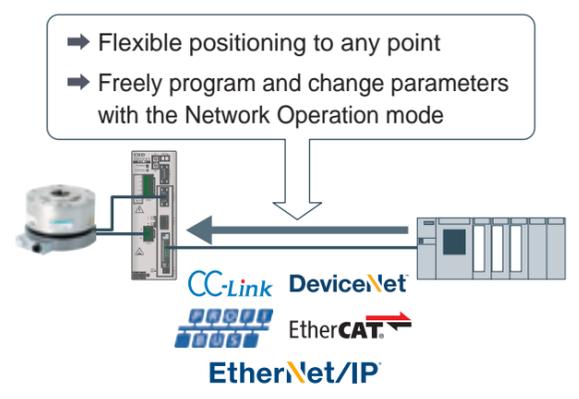

Great usability!

- No need of backup battery for holding absolute position
- Freely combine compatible drivers and actuators

Convenient functions that suit many applications

- Various functions for your usage!
- Segment position output function

SOFTWARE


Operation made easier

The AxTools is here to help you from operation settings to adjustments.

AX Tools is Easier than ever to use for both first-time and experienced users.

Intuitive operation with a simple and easy to use interface.

Free software

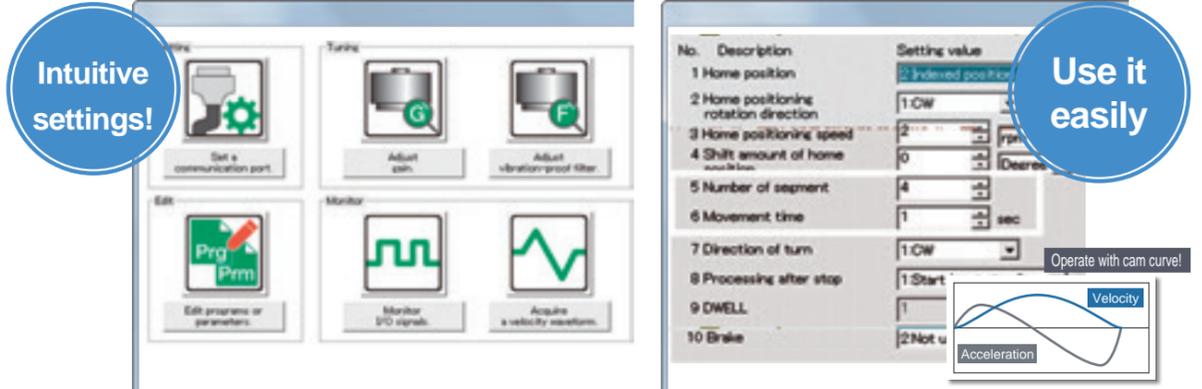

Desired conditions can be instantly implemented.

In equal segmental programming, only the number of partitions and travel times need to be input.

Industry's first! Equipped with an AI that Supports adjustments


Conventionally...

- Tuning relied on experts
- Uncertainty when performing startup overseas
- Determining the quality of adjustment results was difficult




Anyone can use it

Adjustments made by the AI

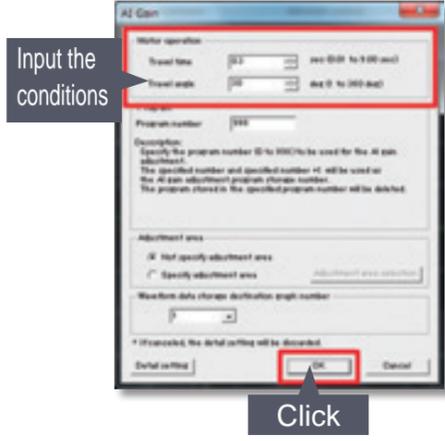

Data is acquired automatically and the most suited tuning is advised with a score

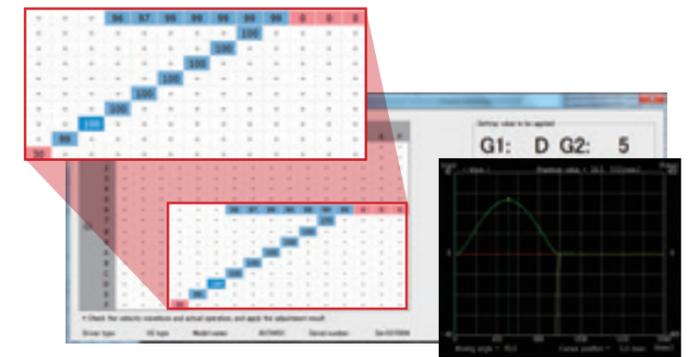


USE CASE

Case Study

Assembly, Inspection Machines


Conduct setup changes without time loss

Operation compatible with mass customized production

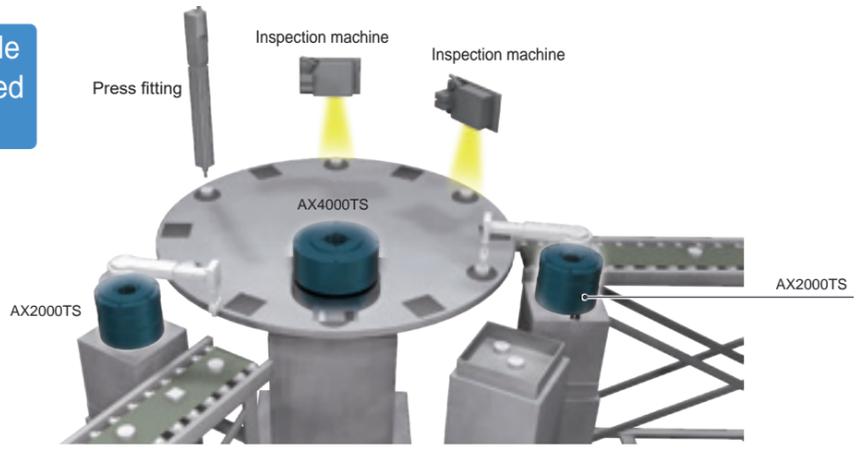


Electronic substrate conveyor

Rotate electronic substrates by 90°

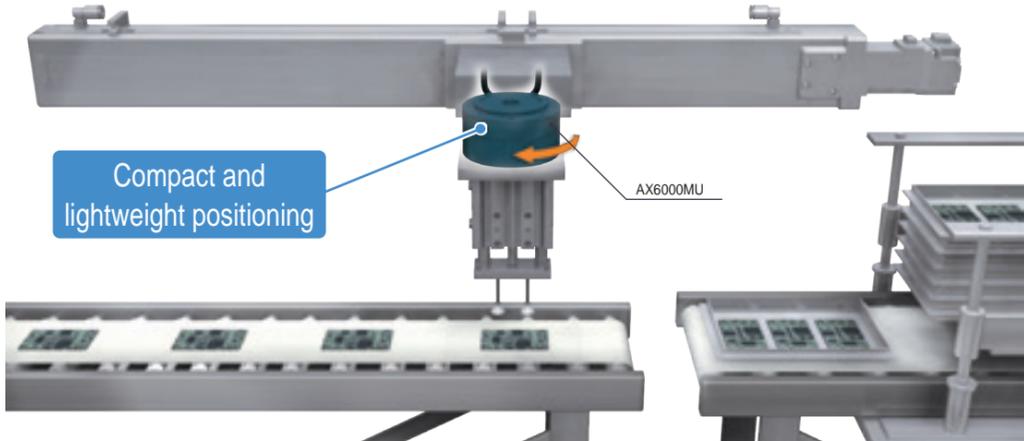

Pick and place device

Work is conveyed using an equipped parallel displacement mechanism.

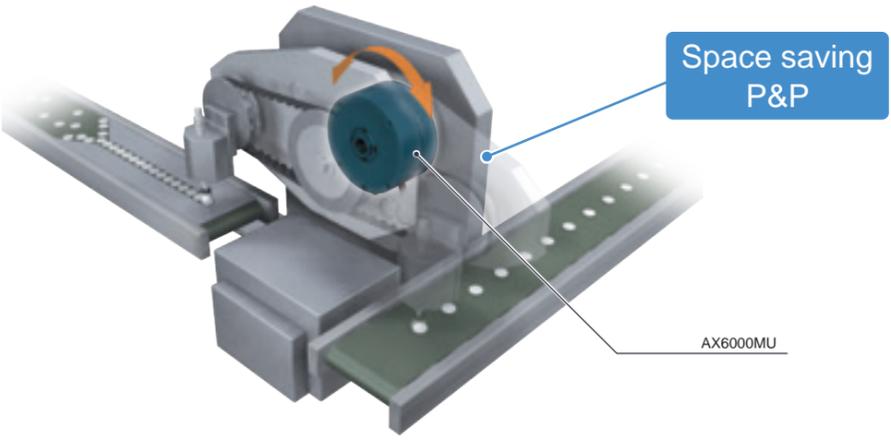

ABSODEX


Compact and easy to use

AX6000M Series



Industry's smallest and lightest!

*As of October 2016, CKD research

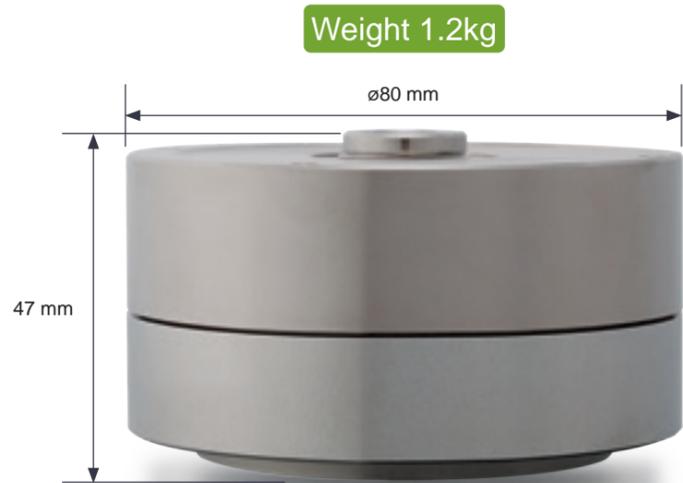

Ideal in these situations

- Conveying minute workpieces.
- Θ correction of movable parts.

Compatible with a Wide range of Needs

AX1000T/AX2000T/AX4000T Series



AX1000T Series

- 5 sizes lined up from 22 to 210 N·m
- Improved indexing accuracy and deflection of shaft/surface, allowing for precise positioning

Most suited for

- Precision measurements
- Inspection machines
- Assembly machines

AX2000T Series

- 3 sizes lined up from 6 to 18 N·m
- High speed operation, compact design

Most suited for

- Pick&Place
- Turn tables
- Assembly machines

AX4000T Series

- 8 sizes lined up from 9 to 1000 N·m
- Wide selection, supporting large inertial loads

Most suited for

- Pick and Place
- Turn tables
- Inspection machines
- Assembly machines

AX9000TS/TH Series



Safety Standards

Safety Standard Certification compatible (Safe Torque Off function)

International Standards

Compliant with UL/cUL (N.A. standards) and CE (European standards)



Support for domestic and international networks



Ideal for the IoT of equipment!!

- **Abundant monitoring functions**
The current status of ABSODEX can be monitored with extensive monitoring functions such as current position, speed, electronic thermal value, and alarm.
- **Monitor function also available for preventive maintenance!**
 - Torque load factor: Monitors current torque load factor.
 - Acceleration: Monitors current acceleration status.
- **Network operation mode (Direct value mode) added!**
The network operation mode allows flexible positioning from the host controller to any position.

CC-Link CC-Link is a registered trademark of Mitsubishi Electric Corporation.
 PROFIBUS PROFIBUS is a trademark of PROFIBUS User Organization.
 DeviceNet™ DeviceNet™ is a registered trademark of ODVA.
 EtherCAT® EtherCAT® is a patented technology, licensed by Beckhoff Automation GmbH in Germany.
 EtherNet/IP® EtherNet/IP® is a registered trademark of ODVA.

System configuration


AX1000T/2000T/4000T

● Basic setting items

1. Input a program from a PC or the dialog terminal.
2. Set necessary parameters in the same way.
3. Set the appropriate gain.

● Basic driving methods

1. Select a program to execute from PLC.
2. Input the start signal from the PLC.
3. After indexing is started, the driver outputs a positioning completion signal.

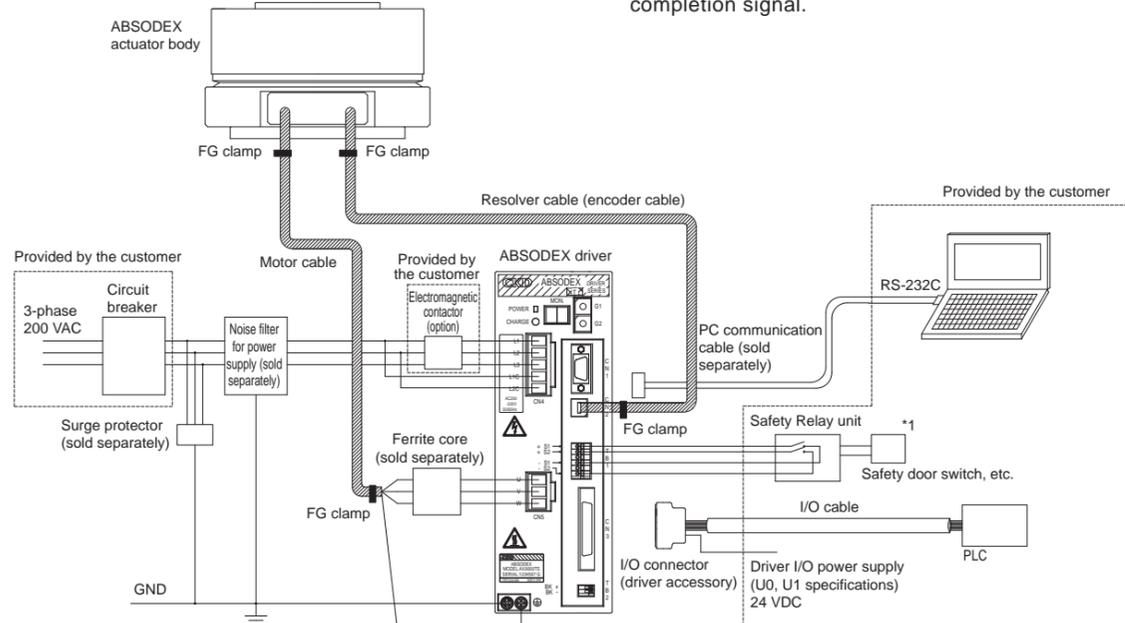

To comply with the CE marking, the parts shown below or overcurrent/short circuit protection Component is required. In addition, the driver must be installed within the switchboard. For details on the selection, installation and wiring methods of these components, refer to the instruction manual or technical data (ABSODEX AX series TS/TH type technical data).

| Part name | Application | Model No. | Manufacturer |
|-----------------|---|----------------|-------------------------------------|
| Noise filter | Three-phase/single-phase 200 to 230 VAC | 3SUP-EF10-ER-6 | Okaya Electric Industries Co., Ltd. |
| | Single-phase 100 to 115 VAC | NF2015A-OD | Soshin Electric Co., Ltd. |
| Ferrite core | Common | RC5060ZZ | Soshin Electric Co., Ltd. |
| Surge protector | Common | RSPD-250-U4 | Okaya Electric Industries Co., Ltd. |
| | | LT-C32G801WS | Soshin Electric Co., Ltd. |
| FG clamp*1 | Common | FGC-5,FGC-8 | Kitagawa Industries Co.,Ltd. |

*1) Use an FG clamp with a motor cable and resolverUsed to ground the shield of cable (encoder cable).

*2) Parts available for purchase from CKD Refer to the ABSODEX related parts model No. table (page 51).

Configuration (when set model No. is selected)

| | Name | Quantity |
|------------------|---|----------|
| Standard config. | Actuator | 1 |
| | Driver (with controller) | 1 |
| | Motor cable, resolver cable (encoder cable) | 1 each |

Accessories: I/O connector, connector for power supply, connector for motor cable

Note)For the notes on the connection method, make sure to read the instruction manual (technical data).

Note)For details, refer to the accessories supplied with the driver on page 45 (for AX9000TS/AX9000TH).

Programming tool

- Dialog terminal "AX0180" is available.
- The "AX Tools" configuration tool is available. ABSODEX programs are created, parameters set, and operation commands, etc., issued from the PC. The created program can be saved. The PC communication cable (model No.: AX-RS232C-9P) is required.

Note) The PC communication cable is designed specifically for ABSODEX. You cannot use a commercially available cable as it is. If used by mistake, the driver and PC may become damaged.

Note) Connect the dialog terminal and PC when adjusting only. During normal operation, disconnect the computer communication cable from CN1.

Note) When the PC recovers from the sleep mode, the USB-serial conversion cable may not be recognized, leading to communication errors.

* Please download and use the latest version of the setting tool "AX Tools" from our website.

System configuration


AX6000M

● Basic setting items

1. Input the program from the PC.
2. Set the required parameters.
3. Set the appropriate gain.

● Basic driving methods

1. Select a program to be executed from the PLC.
2. The start signal is input from the PLC.
3. After the drive operation, the positioning completion signal is output from the driver.

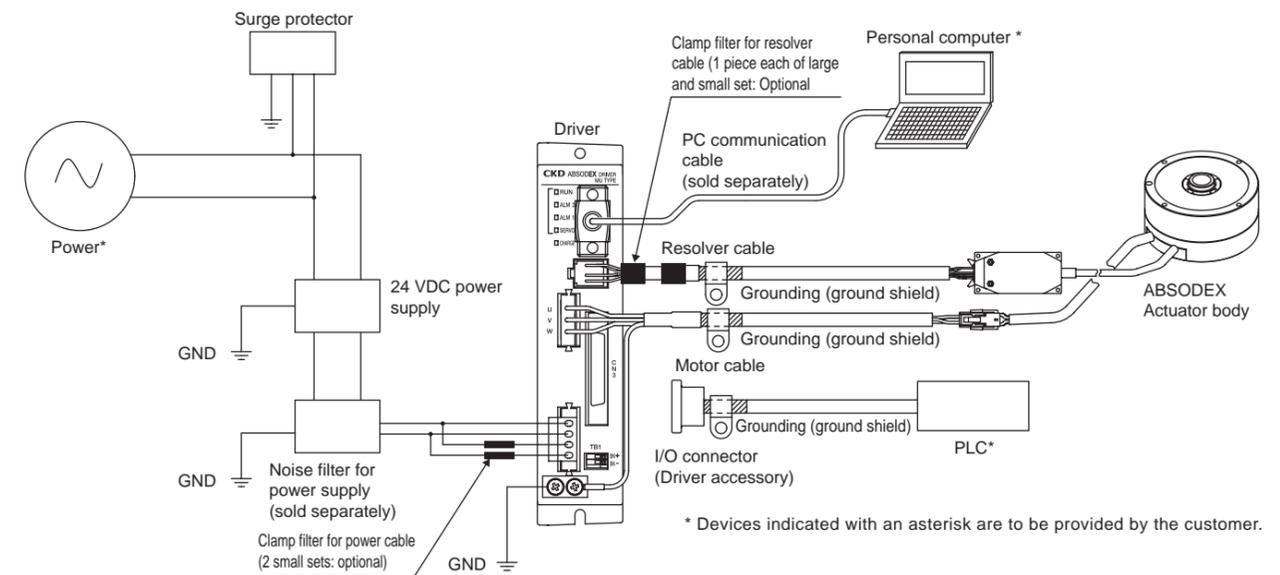

* Devices indicated with an asterisk are to be provided by the customer.

To comply with CE marking, the parts listed in the table below are required. For details on the installation and wiring method, refer to the instruction manual or technical data (ABSODEX MU type technical data).

| Specification parts | Model No. | Manufacturer |
|--|----------------|-------------------------------------|
| Noise filter | NF2015A-OD *1) | Soshin Electric Co., Ltd. |
| Surge protector | R/A/V-781BWZ-4 | OKAYA ELECTRIC INDUSTRIES CO., LTD. |
| | RSPD-250-Q4 | |
| | RSPD-250-U4 | Soshin Electric Co., Ltd. |
| FG clamp | FGC-5, FGC-8 | Kitagawa Industries Co.,Ltd. |
| Clamp filter for power cable (set of 2 pieces/small) | ZCAT2035-0930A | TDK |
| Clamp filter set for resolver cable | ZCAT2035-0930A | TDK |
| | ZCAT3035-1330 | |

Note 1) This product is specified for use with 250 VAC. It can also be used with 24 VDC.

Programming tool

- The "AX Tools" configuration tool is available. (Windows version, free of charge) ABSODEX programs are created, parameters set, and operation commands, etc., issued from the PC. The created program can be saved. The PC communication cable (model No.: AX-RS232C-9P) is required. Note) The PC communication cable is designed specifically for ABSODEX. You cannot use a commercially available cable as it is. If used by mistake, the driver and PC may become damaged. Note) Connect the computer communication cable only when performing adjustments. During normal operation, disconnect the computer communication cable from CN1.

Note) When the computer resumes from sleep state, the USB-serial conversion cable may not be recognized, causing communication errors to occur.

Note) Please download and use the latest version of the setting tool "AX Tools" from our website.

ABSODEX system table

| Type | Actuator Series | Torque (N·m) | | | | | | | | | | | | | |
|--------------------|---------------------------------|---|---|---|---|---|---|---|---|---|--|---|---|---|------|
| | | 1.2 | 3 | 6 | 9 | 12 | 18 | 22 | 45 | 75 | 150 | 210 | 300 | 500 | 1000 |
| Compact | AX6000M Series |  |  | | | | | | | | | | | | |
| | AX1000T Series (compact/middle) | | | | | |  |  |  | | | | | | |
| High response type | AX1000T Series (large) | | | | | | | | |  |  | | | | |
| | AX2000T Series | | |  | |  |  | | | | | | | | |
| | AX4000T Series (compact/medium) | | |  | | |  |  |  | | | | | | |
| | AX4000T Series (large) | | | | | | | | |  | |  |  |  | |
| | | | | | | | | | | | | | | | |

| Indexing Accuracy (sec) | Repeat Accuracy (sec) | Surface runout (mm) | Shaft runout (mm) | Driver series name | | | Features | Applications | Listed page |
|-------------------------|-----------------------|---------------------|-------------------|---|---|---|---|--|-------------|
| | | | | TS | TH | MU | | | |
| ±90 | ±10 | 0.03 | 0.05 |  |  |  | ● Small diameter (ø80) | ● P&P ● Sub table | 1 |
| ±15 | ±5 | 0.01 | 0.01 | ● | | | ● High accuracy (Indexing accuracy and output shaft runout accuracy) | ● Precision measurement ● Turntable ● Inspection machine ● Assembling machine | 11 |
| ±15 | ±5 | 0.01 | 0.01 | | ● | | | | |
| ±30 | ±5 | 0.03 | 0.03 | ● | | | ● High-speed rotation (300 rpm) ● Compact with small diameter ● Large hollow diameter (ø30) | ● P&P ● Turntable ● Assembling machine | 17 |
| ±30 | ±5 | 0.03 | 0.05 | ● | | | ● Supports large moments of inertia load ● Large hollow diameter and a variety of size options | ● Turntable ● Inspection machine ● Assembling machine ● P&P | 21 |
| ±30 | ±5 | 0.03 | 0.05 (0.08)*1 | | ● | | | | 29 |

*1 AX410WT

Characteristics of the driver
 Drivers can be commonly used for supported actuators. The controller function allows you to use an NC program to desirably set the actuator's rotation angle, movement time, timer, etc. M code output, encoder output, etc., are also available to connect to an external PLC, motion controller, etc.

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000T/S/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |



ABSODEX

AX6000M Series

Minimum size of 80 mm diameter

Compatible function allows free combination of driver, actuator, and cable

- Max. torque: 1.2, 3 N·m
- Supported driver: MU driver



Actuator specifications

| Item | | AX6001M | AX6003M |
|----------------------------------|-------------------|--|--------------|
| Max. output torque | N·m | 1.2 | 3.0 |
| Continuous output torque | N·m | 0.4 | 1.0 |
| Max. rotation speed | rpm | 240 (*1) | |
| Allowable axial load | N | 600 | |
| Allowable moment load | N·m | 5 | |
| Output shaft moment of inertia | kg·m ² | 0.00034 | 0.00059 |
| Allowable moment of load inertia | kg·m ² | 0.034 | 0.059 |
| Index accuracy (*3) | sec | ±90 | |
| Repeatability (*3) | sec | ±10 | |
| Output shaft friction torque | N·m | 0.13 | 0.22 |
| Resolution | P/rev | 540672 | |
| Motor insulation class | | Class A | |
| Motor withstand voltage | | 550 VAC 1 minute | |
| Motor insulation resistance | | 10 MΩ or more 500 VDC | |
| Operating ambient temperature | | 0 to 40°C | |
| Operating ambient humidity | | 20 to 85% RH, no condensation | |
| Storage ambient temperature | | -10 to 65°C | |
| Storage ambient humidity | | 20 to 90% RH, no condensation | |
| Atmosphere | | No corrosive gas, explosive gas, or dust | |
| Weight | kg | 1.2 (1.4) *2 | 1.8 (2.0) *2 |
| Output shaft runout (*3) | mm | 0.03 | |
| Output shaft surface runout (*3) | mm | 0.05 | |
| Degree of protection | | IP20 | |


*1: Use at a speed of 80 rpm or less during continuous rotation operation.

*2: The values in () are the actuator weight with the mounting base option.

*3: Refer to the "Glossary" on page 52 for index accuracy, repeatability, output shaft runout and output shaft surface runout.


Speed/maximum torque characteristics

● AX6001M
(rpm)

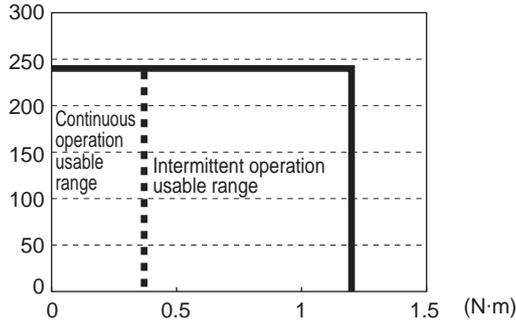


* The graph shows the characteristics when 24 VDC (ambient temperature: 25°C) is connected.

● AX6003M
(rpm)

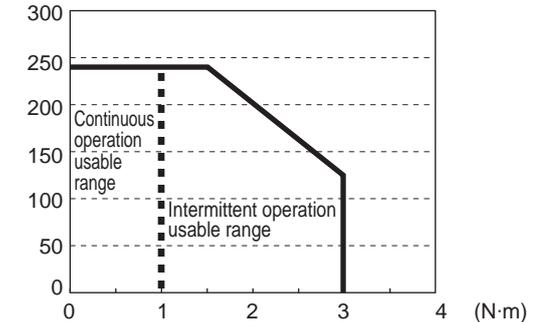


* The graph shows the characteristics when 24 VDC (ambient temperature: 25°C) is connected.

(Note) Moment load (simple formula)

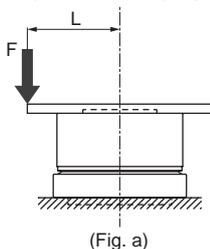

$M \text{ (N·m)} = F \text{ (N)} \times L \text{ (m)}$
M: Moment load
F: Load
L: Distance from the output shaft center

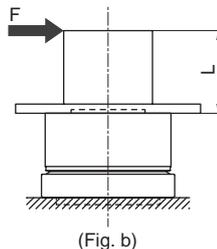


$M \text{ (N·m)} = F \text{ (N)} \times (L+0.02) \text{ (m)}$
M: Moment load
F: Load
L: Distance from the output shaft flange surface

⚠ Always read the safety precautions on pages 61 to 66 before use.

How to order

- Set model No. (actuator, driver, cable)

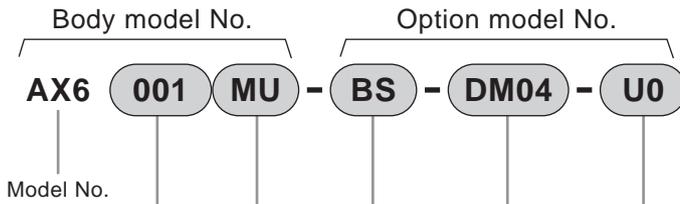

A Size (max. torque)

B Driver type

C Mounting base

D Cable length
*1

E Interface specifications

| Code | Description |
|-----------------------------------|----------------------------------|
| A Size (max. torque) | |
| 001 | 1.2 N·m |
| 003 | 3.0 N·m |
| B Driver type | |
| MU | MU driver |
| C Mounting base | |
| Blank | Standard (without mounting base) |
| BS | With mounting base |
| D Cable length | |
| DM00 | Without cable |
| DM02 | 2 m |
| DM04 | 4 m |
| DM06 | 6 m |
| DM08 | 8 m |
| DM10 | 10 m |
| E Interface specifications | |
| U0 | Parallel I/O (NPN) |
| U1 | Parallel I/O (PNP) |

⚠ Precautions for model No. selection

- *1: Cable is a movable cable. Refer to page 9 for dimensions of the cable. The lead-out cable is not movable.
- *2: **C** When the "BS" option with the mounting base is selected, the positioning pin hole on the bottom is not available. The surface is treated with electroless nickel plating.
- *3: Positioning pin holes may not be surface treated.
- *4: The surface part is treated with electroless nickel plating. The fixed section is made of stainless steel.

Actuator body discrete model No.

AX6 001 M - BS

A Size

C Mounting base

Driver discrete model No.

AX9000MU - U0

E Interface specifications

Cable discrete model No.

• Motor cable
AX-CBLM8 - DM04

• Resolver cable
AX-CBLR8 - DM04

D Cable length
(Note: "DM04" when cable length is 4 m)


Custom order products are CE and RoHS non-compliant. Contact CKD as needed.

AX6000M Series

Dimensions

● AX6001M


| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

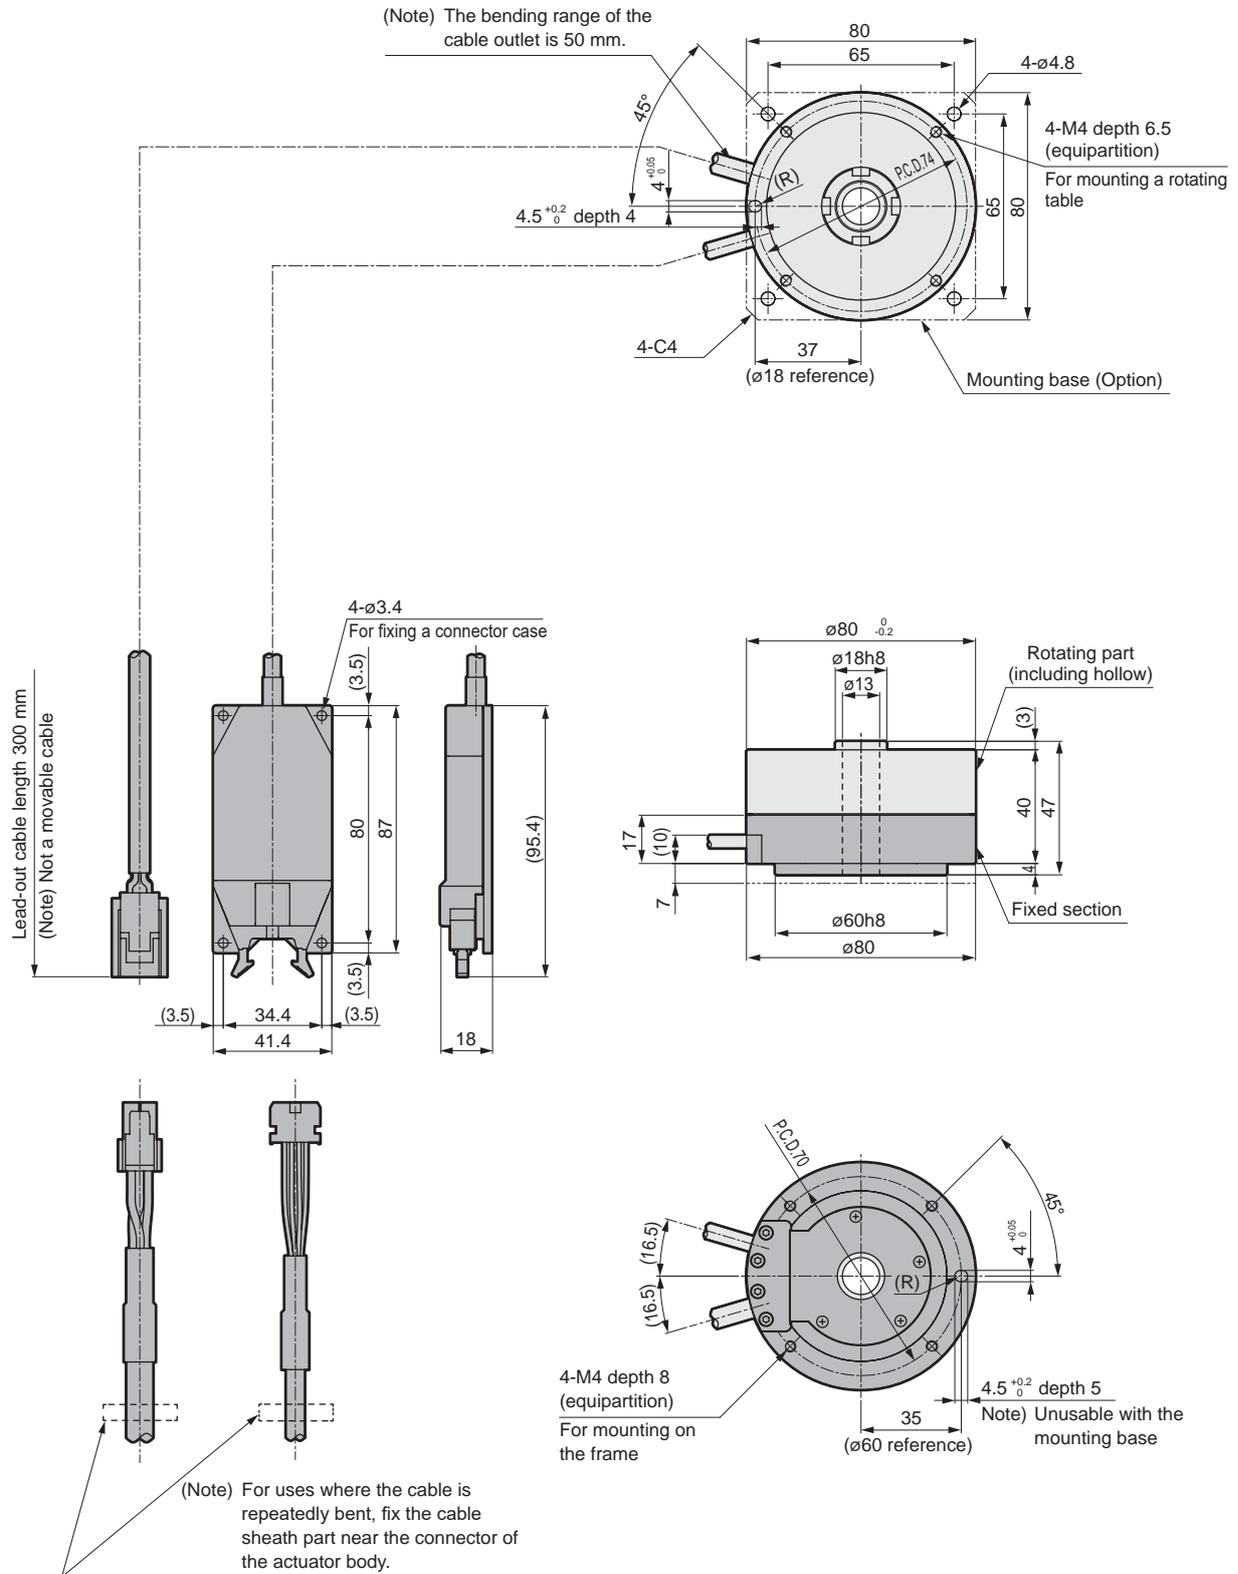

*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.

Dimensions

● AX6003M

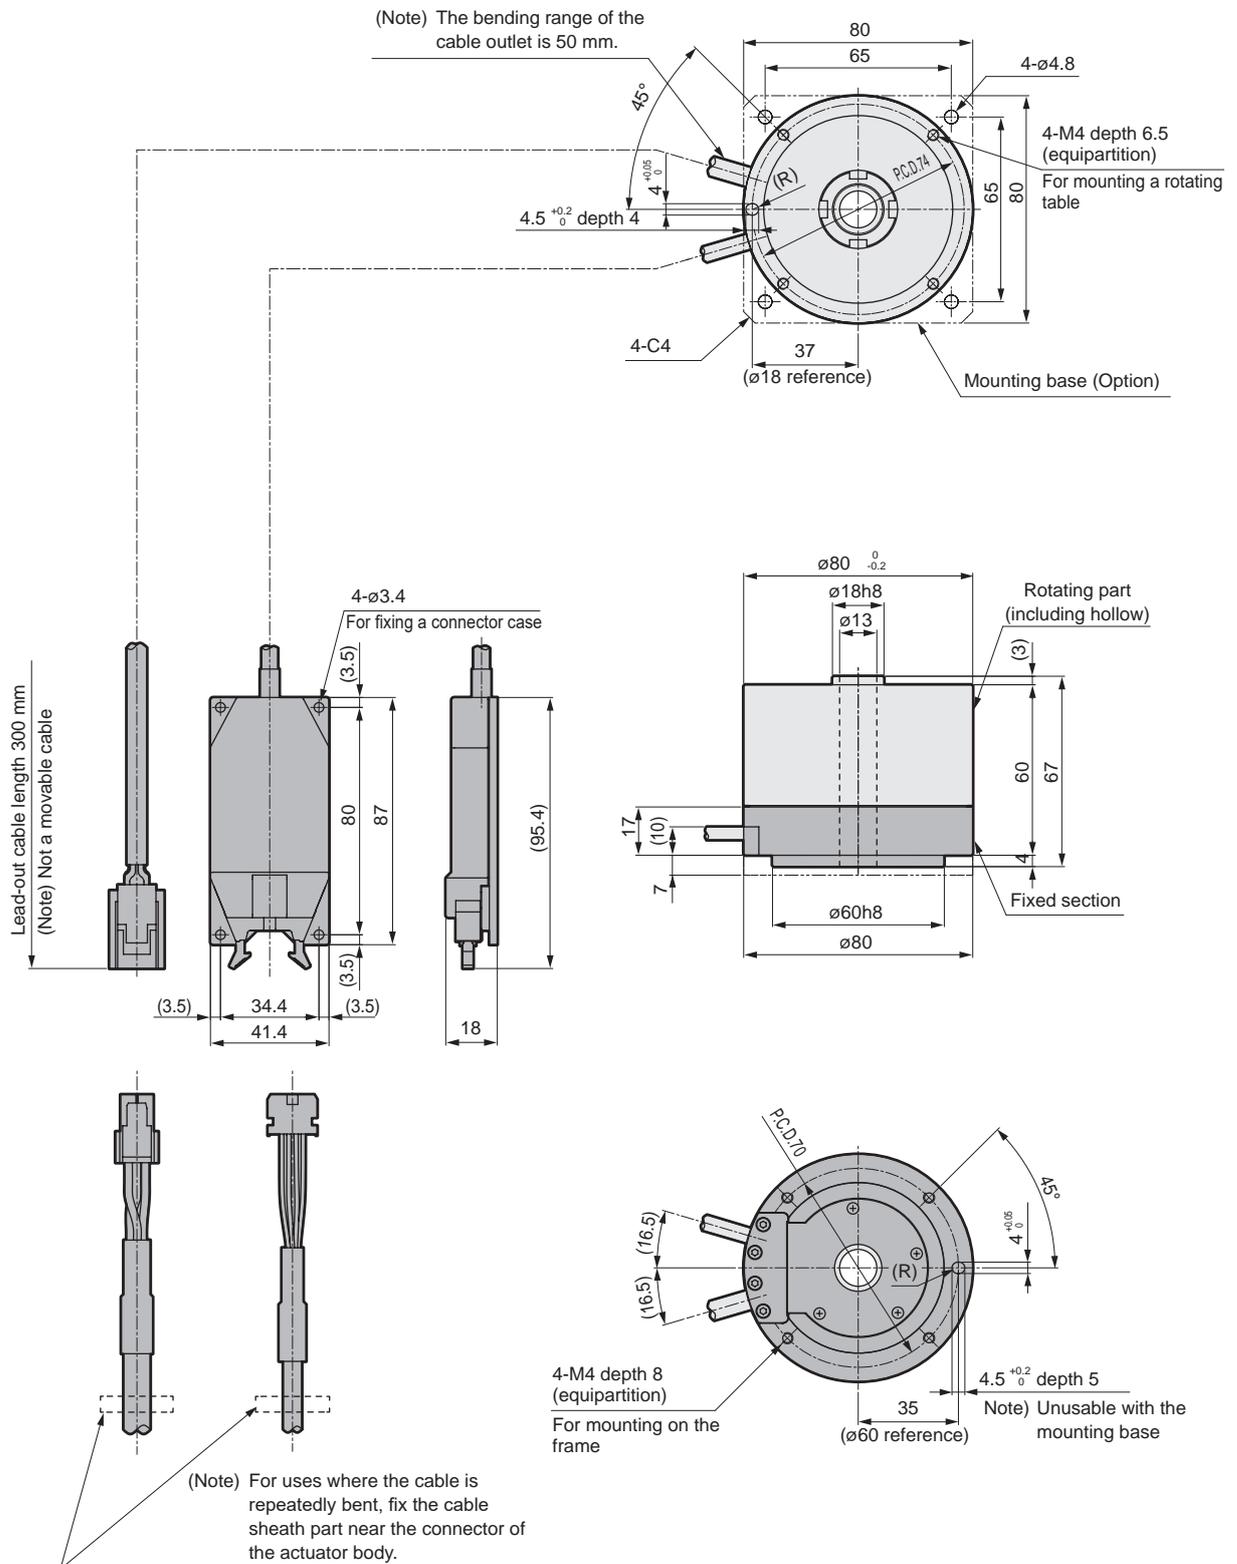

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.



ABSODEX (AX6000M Series)

MU driver

Interface specifications: Parallel I/O (NPN)
Parallel I/O (PNP)



Features

- Ultra-compact/lighter weight (resin body adopted)
- Easy wiring with connector

How to order

AX9000MU - U0

AX9000MU - U1

Interface specifications
U0: Parallel I/O (NPN)
U1: Parallel I/O (PNP)

General specifications

| Item | | Model |
|-------------------------------|-------------------|--|
| | | MU driver AX9000MU |
| Power supply voltage | Main power supply | 24 VDC ±10% |
| | Control power | 24 VDC ±10% |
| Structure | | Driver and controller integrated |
| Operating ambient temperature | | 0 to 50°C |
| Operating ambient humidity | | 20 to 90% RH (no condensation) |
| Storage ambient temperature | | -10 to 65°C |
| Storage ambient humidity | | 20 to 90% RH (no condensation) |
| Atmosphere | | No corrosive gas or dust |
| Anti-noise | | 1000 V (P-P), pulse width 1 µsec, rising, falling time 1 nsec impulse noise test, induction noise (capacitive coupling) |
| Vibration resistance | | 4.9 m/s ² |
| Weight | | Approx. 0.5 kg |
| Degree of protection | | IP2X |

Performance specifications

| Item | Description |
|-------------------------|--|
| No. of control axes | 1 axis, 540,672 pulses/1 rotation |
| Angle setting unit | ° (degree), pulse, indexing No. |
| Angle min. setting unit | 0.001°, 1 pulse |
| Speed setting unit | sec, rpm |
| Speed setting range | 0.01 to 100 sec/0.11 to 240 rpm |
| Equal divisions | 1 to 255 |
| Max. command value | 7-digit numeric input ±9,999,999 pulse |
| Timer | 0.01 sec to 99.99 sec |
| Programming language | NC |
| Programming method | Set data through RS-232C port with a PC. |
| Operation mode | Auto, MDI, jog, single block, servo OFF, pulse train input mode |
| Coordinates | Absolute, incremental |
| Acceleration curve | [5 types] Modified Sine (MS), Modified Constant Velocity (MC/MC2), Modified Trapezoid (MT), Trapezoid (TR) |
| Status display | RUN: Normal operating state |
| | ALM2: Alarm 2 state |
| | ALM1: Alarm 1 state |
| | SERVO: Servo state |
| | CHARGE: Charge state |
| Communication interface | RS-232C compliant |
| I/O signal | Refer to interface specification pages. |
| Program capacity | Approx. 6,000 characters (256) |
| Electronic thermal | Overheating protection for actuator |

Power capacity

| Actuator model No. | Driver model No. | Rated input current | Max. input current |
|--------------------|------------------|---------------------|--------------------|
| AX6001M, AX6003M | AX9000MU | 3.3 A | 10 A |

! Always read the safety precautions on pages 61 to 66 before use.

Custom order products are CE and RoHS non-compliant. Contact CKD as needed.

Actuator AX6000M
Drivers AX9000MU
Actuator AX1000T
Actuator AX2000T
Actuator AX4000T
Drivers AX9000TS/TH
Dialog terminal AX0180
Related parts model No. table

Parallel I/O (NPN)

CN3 Input signal

| Pin No. | Signal name | Logic | Determination |
|---------|---|----------|---------------|
| 1 to 2 | External power supply input +24 V ±10% | | |
| 3 to 4 | External power supply input GND | | |
| 5 | Program No. selection input (Bit 0) | Positive | Level |
| 6 | Program No. selection input (Bit 1) | Positive | Level |
| 7 | Program No. selection input (Bit 2) | Positive | Level |
| 8 | Program No. selection input (Bit 3) | Positive | Level |
| 9 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| 10 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| 11 | Reset input | Positive | Edge |
| 12 | Origin return directive input | Positive | Edge |
| 13 | Start input | Positive | Edge |
| 14 | Servo on input/Program stop input | Positive | Level Edge |
| 15 | Continuous rotation stop input | Positive | Edge |
| 16 | Answer input/Position deviation counter reset input | Positive | Edge |
| 17 | Emergency stop input | Negative | Level |
| 18 | Brake release input | Positive | Level |

CN3 pulse train input signal

| Pin No. | Signal name |
|---------|---------------------|
| 19 | PULSE/UP/A phase |
| 20 | -PULSE/-UP/-A phase |
| 21 | DIR/ DOWN/ B phase |
| 22 | -DIR/-DOWN/-B phase |


Input/output circuit specifications

| Description | 1 circuit current (mA) | Max. points (Circuit) | Max. current (mA) | Max. power consumption (mA) |
|-------------------------|------------------------|-----------------------|-------------------|-----------------------------|
| Input circuit | 4 | 14 | 56 | 746 |
| Output circuit | 30 | 18 | 540 | |
| Brake output (BK+, BK-) | 75 | 2 | 150 | |


* The maximum simultaneous output points of the output circuit are 14 points out of 18 points.

CN3 input/output circuit specifications


● Input circuit

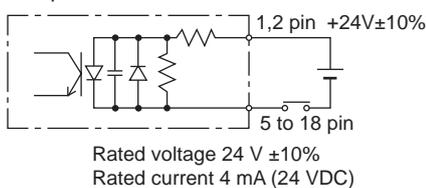


● Output circuit

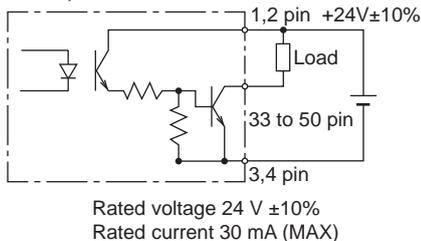

● Pulse train input circuit

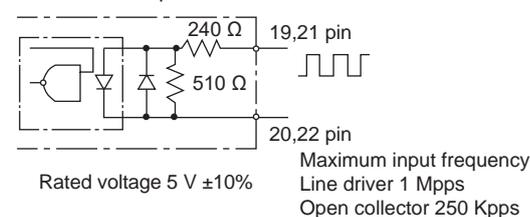

● Encoder output circuit

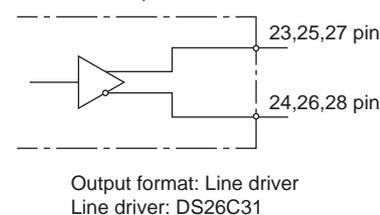

CN3 Output signal

| Pin No. | Signal name | Logic |
|---------|---|----------|
| 33 | M code output (Bit 0) | Positive |
| 34 | M code output (Bit 1) | Positive |
| 35 | M code output (Bit 2) | Positive |
| 36 | M code output (Bit 3) | Positive |
| 37 | M code output (Bit 4) | Positive |
| 38 | M code output (Bit 5) | Positive |
| 39 | M code output (Bit 6) | Positive |
| 40 | M code output (Bit 7) | Positive |
| 41 | Imposition output | Positive |
| 42 | Positioning completion output | Positive |
| 43 | Start input wait output | Positive |
| 44 | Alarm output 1 | Negative |
| 45 | Alarm output 2 | Negative |
| 46 | Output 1 during indexing/Origin position output | Positive |
| 47 | Output 2 during indexing/Servo state output | Positive |
| 48 | Ready output | Positive |
| 49 | Segment position strobe output | Positive |
| 50 | M code strobe output | Positive |

CN3 encoder output signal (Incremental)

| Pin No. | Signal name |
|---------|-------------------------------|
| 23 | A phase (Line driver output) |
| 24 | -A phase (Line driver output) |
| 25 | B phase (Line driver output) |
| 26 | -B phase (Line driver output) |
| 27 | Z phase (Line driver output) |
| 28 | -Z phase (Line driver output) |

! Always read the safety precautions on pages 61 to 66 before use.

* Custom order products are CE and RoHS non-compliant.

MU driver

Parallel I/O (PNP)

CN3 input signal

| Pin No. | Signal name | Logic | Judgment |
|---------|---|----------|---------------|
| 1 to 2 | External power supply input GND | | |
| 3 to 4 | External power supply input +24V ±10% | | |
| 5 | Program No. selection input (bit 0) | Positive | Level |
| 6 | Program No. selection input (bit 1) | Positive | Level |
| 7 | Program No. selection input (bit 2) | Positive | Level |
| 8 | Program No. selection input (bit 3) | Positive | Level |
| 9 | Program number setting input 2nd digit/ Program number selection input (bit 4) | Positive | Edge Level |
| 10 | Program number setting input 1st digit/ Program number selection input (bit 5) | Positive | Edge Level |
| 11 | Reset input | Positive | Edge |
| 12 | Origin position return command input | Positive | Edge |
| 13 | Startup input | Positive | Edge |
| 14 | Servo-on input/ Program stop input | Positive | Level Edge |
| 15 | Continuous rotation stop input | Positive | Edge |
| 16 | Answer input/Position deviation counter reset input | Positive | Edge |
| 17 | Emergency stop input | Negative | Level |
| 18 | Brake release input | Positive | Level |

CN3 output signal

| Pin No. | Signal name | Logic |
|---------|---|----------|
| 33 | M-code output (bit 0) | Positive |
| 34 | M-code output (bit 1) | Positive |
| 35 | M-code output (bit 2) | Positive |
| 36 | M-code output (bit 3) | Positive |
| 37 | M-code output (bit 4) | Positive |
| 38 | M-code output (bit 5) | Positive |
| 39 | M-code output (bit 6) | Positive |
| 40 | M-code output (bit 7) | Positive |
| 41 | In-position output | Positive |
| 42 | Output of positioning completion | Positive |
| 43 | Startup input standby output | Positive |
| 44 | Alarm output 1 | Negative |
| 45 | Alarm output 2 | Negative |
| 46 | Output 1 during indexing/Origin position output | Positive |
| 47 | Output 2 during indexing/Servo state output | Positive |
| 48 | Ready output | Positive |
| 49 | Split position strobe output | Positive |
| 50 | M-code strobe output | Positive |

CN3 pulse train input signal

| Pin No. | Signal name |
|---------|--------------------|
| 19 | PULSE/UP/A-phase |
| 20 | -PULSE/UP/-A-phase |
| 21 | DIR/DOWN/B-phase |
| 22 | -DIR/DOWN/-B-phase |

CN3 encoder output signal(Incremental)

| Pin No. | Signal name |
|---------|-------------------------------|
| 23 | A-phase (line driver output) |
| 24 | -A-phase (line driver output) |
| 25 | B-phase (line driver output) |
| 26 | -B-phase (line driver output) |
| 27 | Z-phase (line driver output) |
| 28 | -Z-phase (line driver output) |


I/O circuit specifications

| Description | 1 circuit current (mA) | Max. number of points (Circuit) | Max. current (mA) | Max. current consumption (mA) |
|-------------------------|------------------------|---------------------------------|-------------------|-------------------------------|
| Input circuit | 4 | 14 | 56 | 746 |
| Output circuit | 30 | 18 | 540 | |
| Brake output (BK+, BK-) | 75 | 2 | 150 | |


*The maximum simultaneous output points of the output circuit are 18 points out of 14 points.

CN3 I/O circuit specifications


● Input circuit

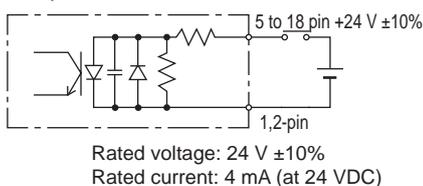


● Pulse train input circuit

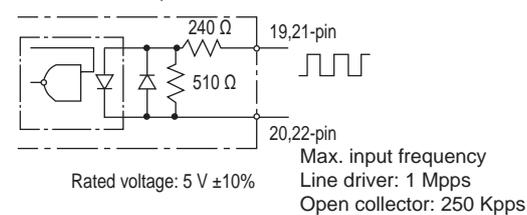

● Output circuit

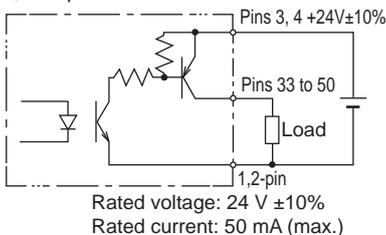

● Encoder output circuit

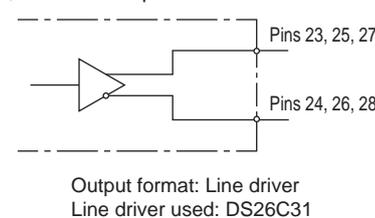


Driver accessory


| Model No. | Specifications | CN3 connector | CN5 connector |
|-------------|--------------------|---|---|
| AX9000MU-U0 | Parallel I/O (NPN) | 10150-3000PE (plug) 10350-52A0-008 (shell) | Power supply connector 04JFAT-SBXGGKS-A Open tool J-FAT-OT |
| AX9000MU-U1 | Parallel I/O (PNP) | Sumitomo 3M | J.S.T. Mfg. Co., Ltd. |

When ordering additional parts, refer to "How to order".

Dimensions

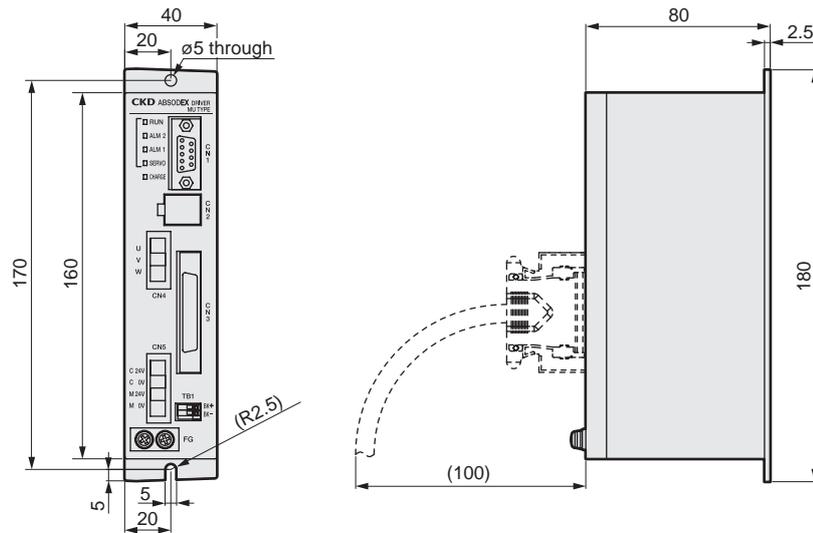

Installation Dimensions

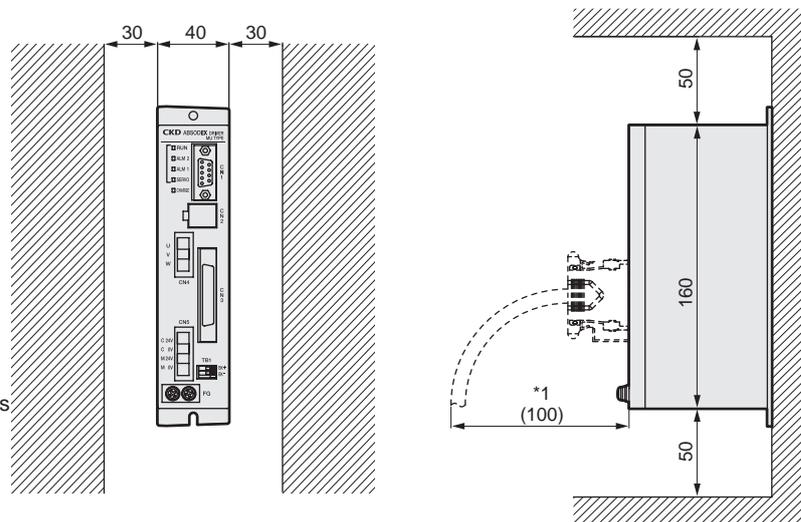


*1) Determine the dimensions with extra allowance according to the cable you want to use.

! Safety precautions


- The ABSODEX driver does not have a dust-proof/waterproof structure. To prevent dust, water, oil or other substances from entering the driver, provide protection according to the working environment.
- Install the ABSODEX driver away from other devices, walls or other structures by 50 mm or more from both top and bottom and 30 mm or more from sides. When heat is generated from other drivers or devices, check that the ambient temperature does not exceed 50°C.

Panel Details

● Parallel I/O (NPN)

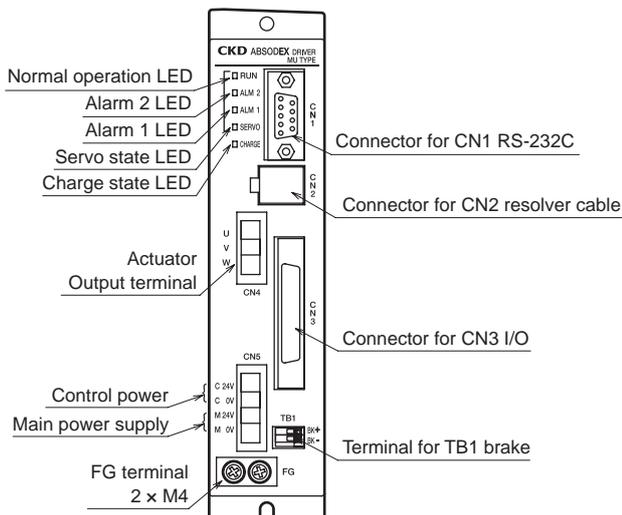

● Parallel I/O (PNP)

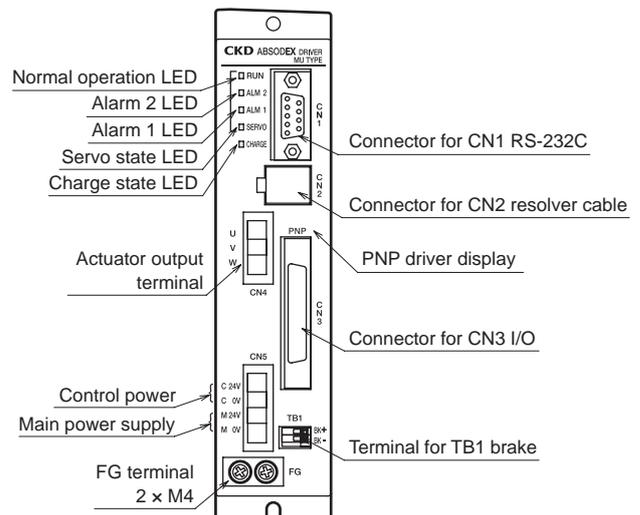

Actuator
AX6000M

Drivers
AX9000MU

Actuator
AX1000T

Actuator
AX2000T

Actuator
AX4000T

Drivers
AX9000TS/TH

Dialog terminal
AX0180

Related parts
model No. table

Cable Specifications

Cable dimensions

| Cable dimensions | Product name/model No. | Cable's min. bending radius |
|------------------|---|-----------------------------|
| | Resolver cable AX-CBLR8-DM□□ (*1) | 60 mm |
| | Motor cable AX-CBLM8-DM□□ (*1) | 90 mm |

*1) □□ indicates the cable length.

Safety precautions

- For uses in which the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.
- The lead-out cable of the actuator section is not movable. Make sure to fix the cable in the connector section to prevent the cable from moving. Do not pull the lead-out cable to lift the unit or apply excessive force to the cable. Otherwise, malfunction, sounding of an alarm, damage of the connector part, or disconnection may result.
- When connecting the cable, fully insert the connector. Also, tighten the connector mounting screws and fix screws securely.
- Do not modify the cable, including disconnection or extension. Such modification may cause failure or malfunction.
- For the cable length L, refer to the cable length shown in the How to order.

Actuator AX6000M
 Drivers AX9000MU
 Actuator AX1000T
 Actuator AX2000T
 Actuator AX4000T
 Drivers AX9000TS/TH
 Dialog terminal AX0180
 Related parts model No. table

MEMO

| | | | | | | | |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|
| Actuator AX6000M | Drivers AX9000MU | Actuator AX1000T | Actuator AX2000T | Actuator AX4000T | Drivers AX9000TS/TH | Dialog terminal AX0180 | Related parts model No. table |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|



ABSODEX

AX1000T Series

High accuracy specifications (index accuracy, output shaft runout, etc.)
Compatible function allows free combination of driver, actuator, and cable

- Max. torque: 22/45/75/150/210 N·m
- Supported driver: TS/TH driver



Actuator specifications

| Item | | AX1022T | AX1045T | AX1075T | AX1150T | AX1210T |
|----------------------------------|-------------------|--|----------------|----------------|----------------|----------------|
| Max. output torque | N·m | 22 | 45 | 75 | 150 | 210 |
| Continuous output torque | N·m | 7 | 15 | 25 | 50 | 70 |
| Max. rotation speed | rpm | 240 (*1) | | 140 (*1) | 120 (*1) | |
| Allowable axial load | N | 600 | | 2200 | | |
| Allowable moment load | N·m | 19 | 38 | 70 | 140 | 170 |
| Output shaft moment of inertia | kg·m ² | 0.00505 | 0.00790 | 0.03660 | 0.05820 | 0.09280 |
| Allowable moment of load inertia | kg·m ² | 0.6 | 0.9 | 4.0 | 6.0 | 10.0 |
| Index accuracy (*3) | sec | ±15 | | | | |
| Repeatability (*3) | sec | ±5 | | | | |
| Output shaft friction torque | N·m | 2.0 | | 8.0 | | |
| Resolution | P/rev | 540672 | | | | |
| Motor insulation class | | Class F | | | | |
| Motor withstand voltage | | 1500 VAC 1 min | | | | |
| Motor insulation resistance | | 10 MΩ or more 500 VDC | | | | |
| Operating ambient temperature | | 0 to 45°C (0 to 40°C: *4) | | | | |
| Operating ambient humidity | | 20 to 85% RH, no condensation | | | | |
| Storage ambient temperature | | -20 to 80°C | | | | |
| Storage ambient humidity | | 20 to 90% RH, no condensation | | | | |
| Atmosphere | | No corrosive gas, explosive gas, or dust | | | | |
| Weight | kg | 8.9 (10.8) *2 | 12.0 (13.9) *2 | 23.0 (27.1) *2 | 32.0 (36.1) *2 | 44.0 (48.1) *2 |
| Output shaft runout (*3) | mm | 0.01 | | | | |
| Output shaft surface runout (*3) | mm | 0.01 | | | | |
| Degree of protection | | IP20 | | | | |

*1: Use at a speed of 80 rpm or less during continuous rotation operation.

*2: The values in () are the actuator weight with the mounting base option.

*3: Refer to the "Glossary" on page 52 for index accuracy, repeatability, output shaft runout and output shaft surface runout.


*4: When using as a UL certified product, the maximum temperature is 40°C.

Always read the safety precautions on pages 61 to 66 before use.

Actuator AX6000M
Drivers AX9000MU
Actuator AX1000T
Actuator AX2000T
Actuator AX4000T
Drivers AX9000TS/TH
Dialog terminal AX0180
Related parts model No. table

How to order

- Set model No. (actuator, driver, cable)

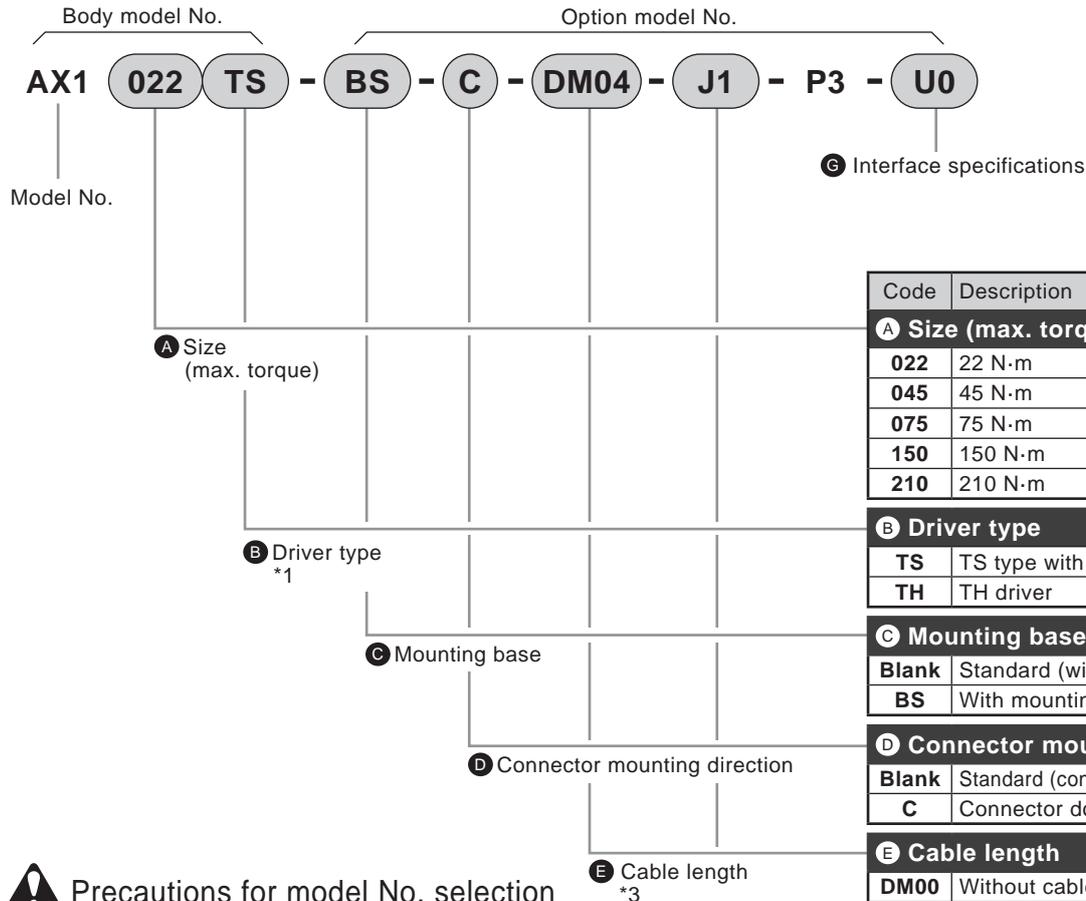

| Code | Description |
|--|--|
| A Size (max. torque) | |
| 022 | 22 N·m |
| 045 | 45 N·m |
| 075 | 75 N·m |
| 150 | 150 N·m |
| 210 | 210 N·m |
| B Driver type | |
| TS | TS type with driver |
| TH | TH driver |
| C Mounting base | |
| Blank | Standard (without mounting base) |
| BS | With mounting base |
| D Connector mounting direction | |
| Blank | Standard (connector horizontal mounting) |
| C | Connector downward mounting |
| E Cable length | |
| DM00 | Without cable |
| DM02 | 2 m |
| DM04 | 4 m (standard length) |
| DM06 | 6 m |
| DM08 | 8 m |
| DM10 | 10 m |
| DM15 | 15 m |
| DM20 | 20 m |
| F Driver power voltage | |
| Refer to the driver power voltage compatibility table at left. | |
| G Interface specifications | |
| U0 | Parallel I/O (NPN specifications) |
| U1 | Parallel I/O (PNP specifications) |
| U2 | CC-Link |
| U3 | PROFIBUS-DP |
| U4 | DeviceNet |
| U5 | EtherCAT |
| U6 | EtherNet/IP |

⚠ Precautions for model No. selection


- *1: Select the driver according to the compatibility table below.

Driver power voltage compatibility table

| Model | TS driver | | TH driver |
|---------|--|--------------------------------|--|
| | Three-phase/ single-phase 200 to 230 VAC | Single phase 100 to 115 VAC | Three-phase/ single-phase 200 to 230 VAC |
| AX1022T | Blank | J1 | |
| AX1045T | Blank | J1 | |
| AX1075T | Blank *2 | | |
| AX1150T | | | Blank *2 |
| AX1210T | | | Blank *2 |

- *2: For models with maximum torque 75 N·m or more, the calculation of torque limit region is different from the usual when used at single-phase 200 VAC. Contact CKD to determine usability.
- *3: Cable is a movable cable. Refer to page 48 for dimensions of the cable.
- *4: ● When the "BS" option with the mounting base is selected, the positioning pin hole on the bottom is not available. The surface is treated with electroless nickel plating.
- *5: Positioning pin holes may not be surface treated.


- Actuator body discrete model No.

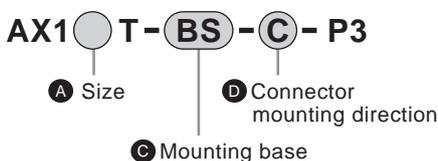

- Driver discrete model No.




- Cable discrete model No.

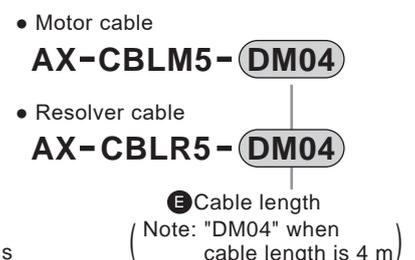

* Custom order products are CE, UL/cUL, and RoHS non-compliant. Contact CKD as needed.


Speed/maximum torque characteristics

● AX1022T

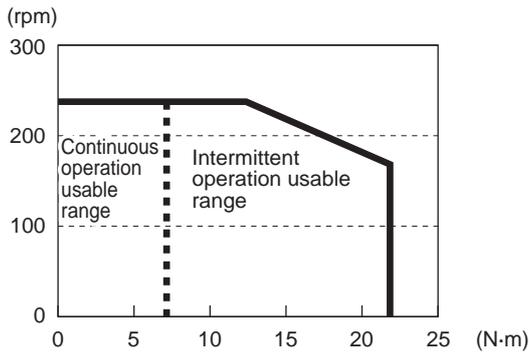


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX1045T

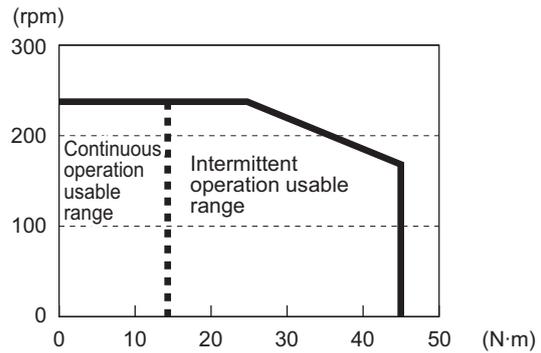


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX1075T

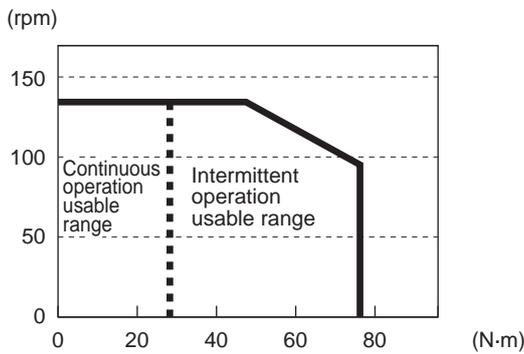


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX1150T

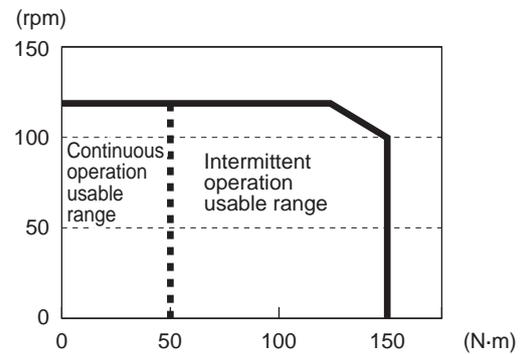



* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX1210T

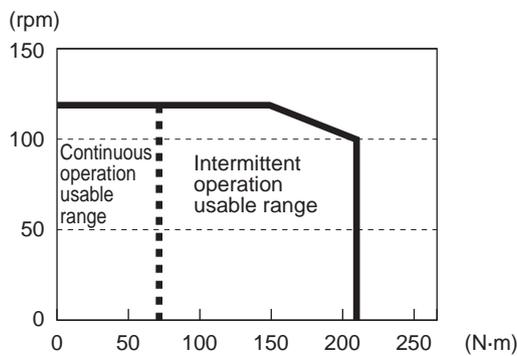

* Fig. This graph shows the characteristics for 3-phase 200 VAC.


(Note) Moment load (simple formula)

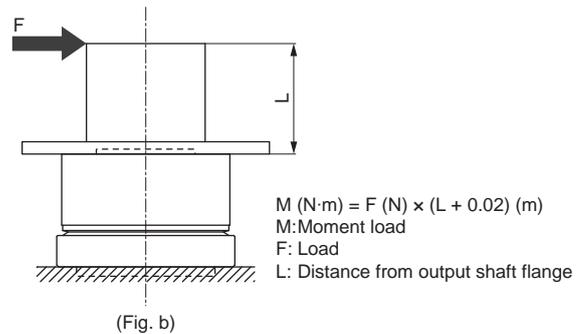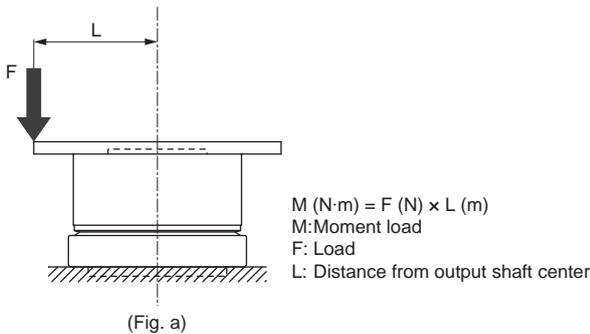






⚠ Always read the safety precautions on pages 61 to 66 before use.

Dimensions

● AX1022T

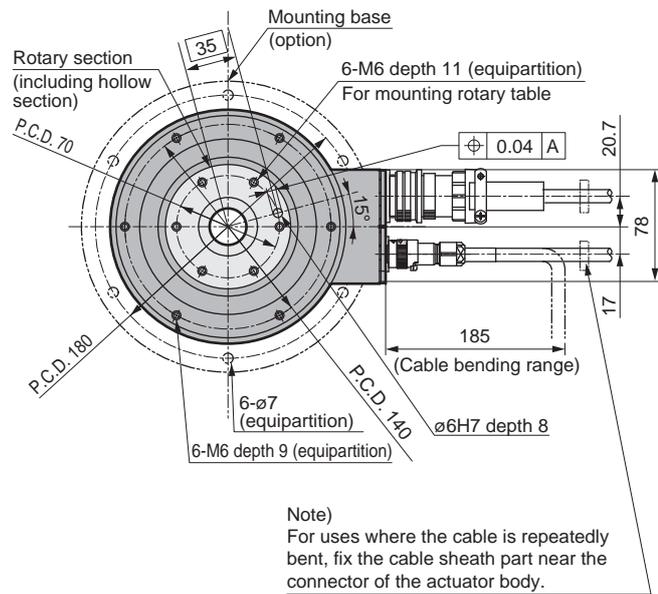

● AX1045T

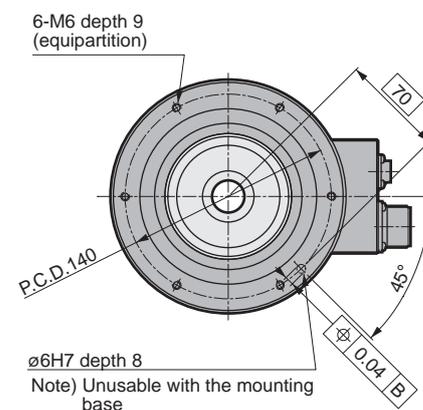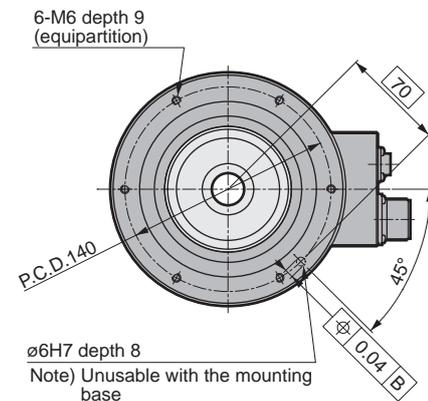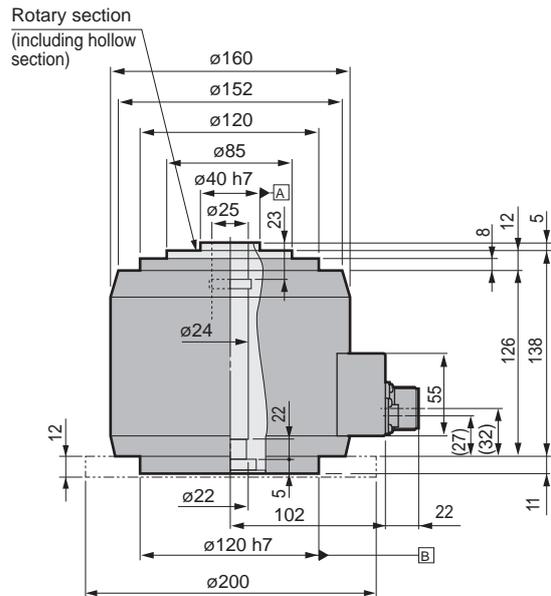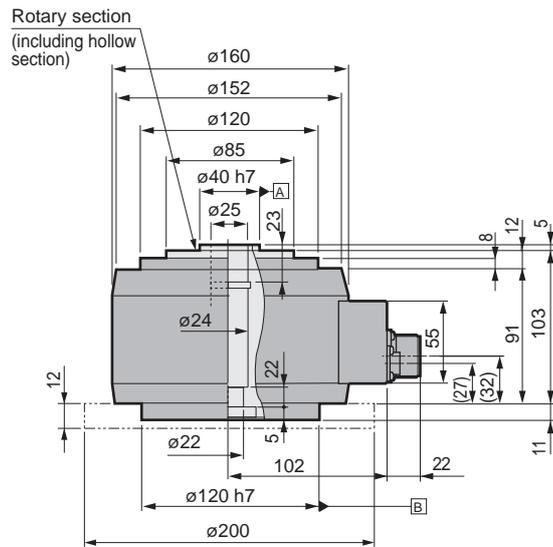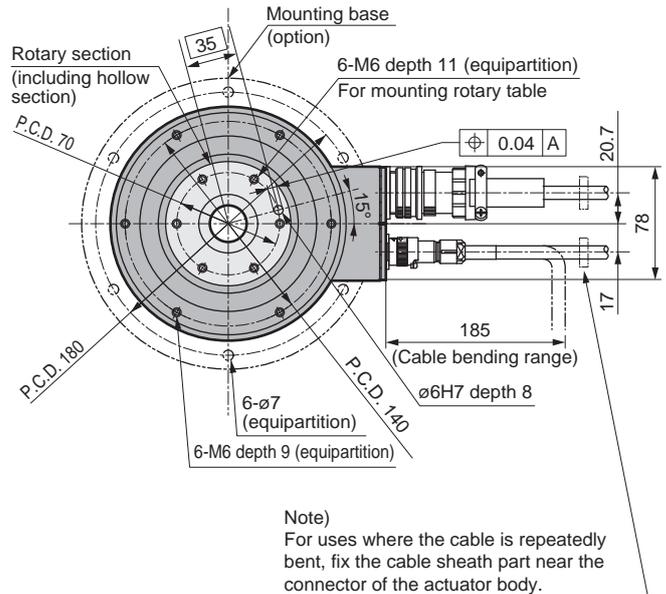

*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |


AX1000T Series

Dimensions


● AX1075T

● AX1150T





| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

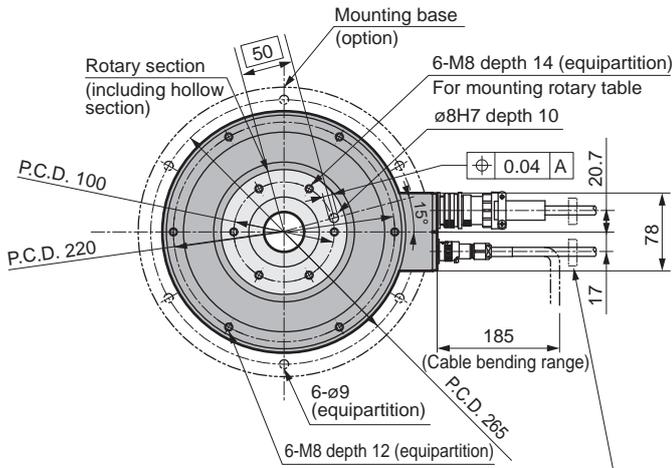

Note)
For uses where the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.

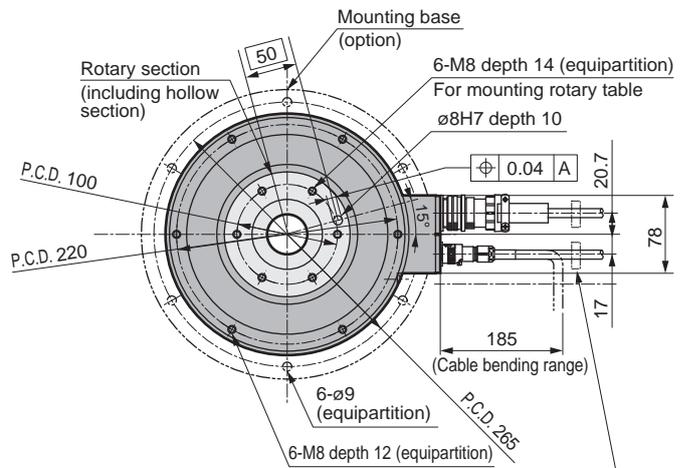

Note)
For uses where the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.

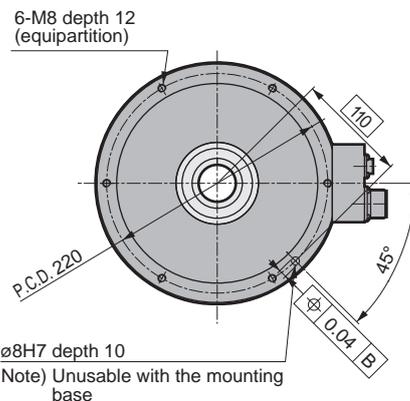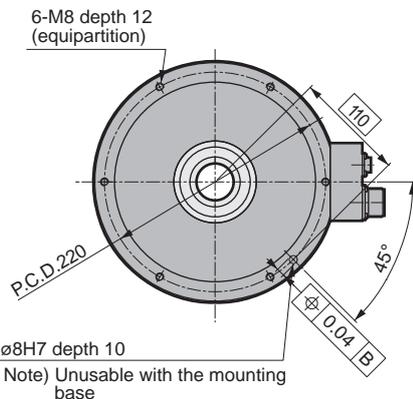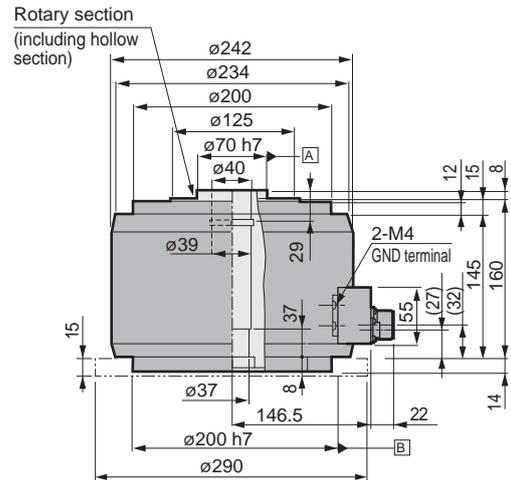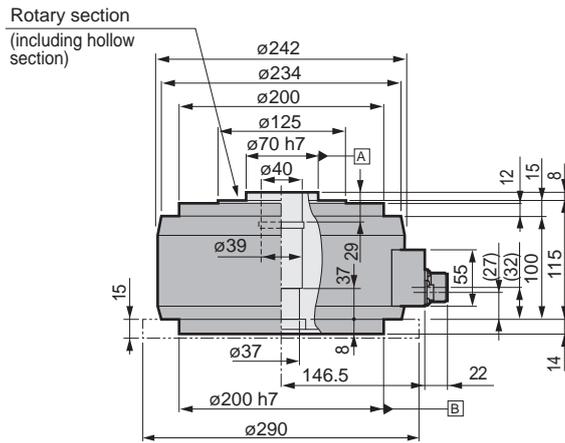


*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.

AX1000T Series



Dimensions/Dimensions with options

Dimensions

● AX1210T


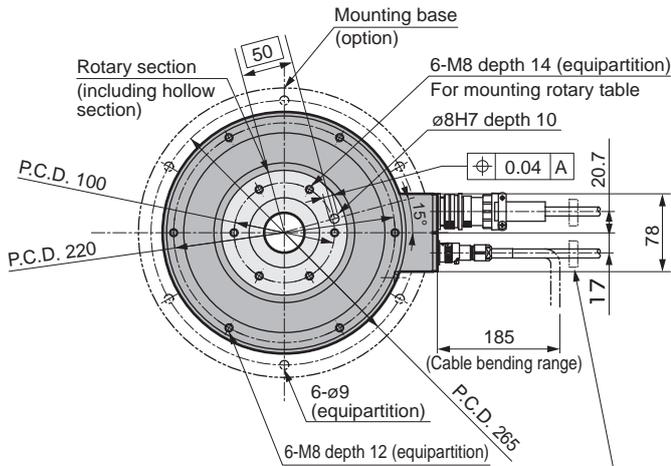


Note)
For uses where the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.

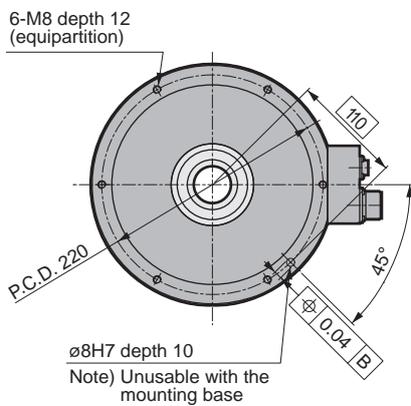
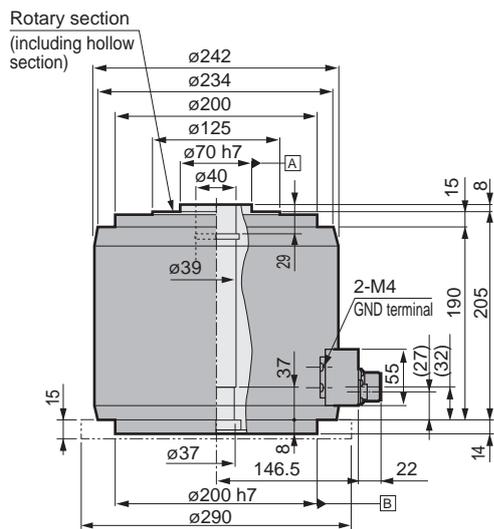


Dimensions (-C: Connector downward mounting)

● AX1022T/AX1045T-C

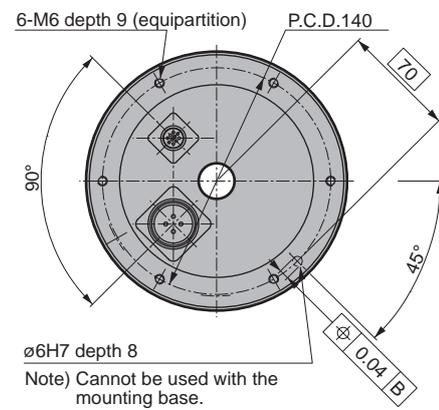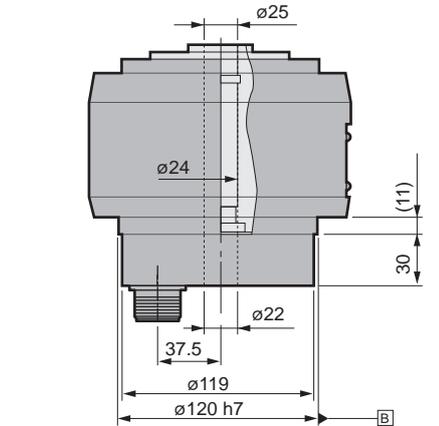

● AX1075T/AX1150T/AX1210T-C

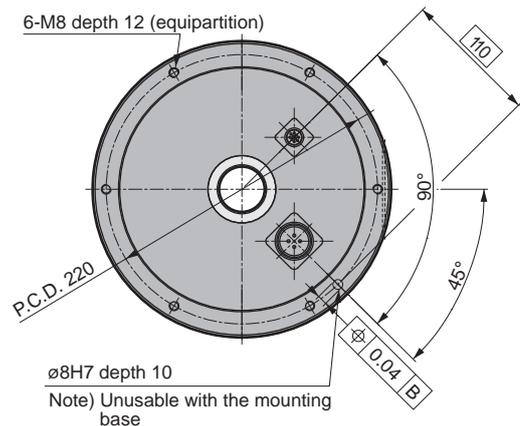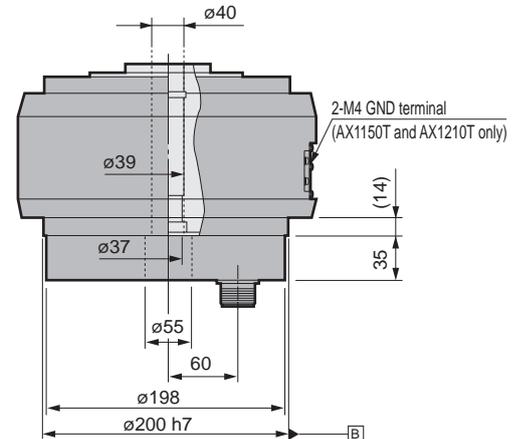

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position.

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |



ABSODEX

AX2000T Series

High-speed rotation (max. rotation speed 300 rpm), compact with small diameter, large hollow diameter (ø30)

Compatible function allows free combination of driver, actuator, and cable

- Max. torque: 6/12/18 N·m
- Supported driver: TS driver



Actuator specifications

| Item | AX2006T | AX2012T | AX2018T | |
|----------------------------------|-------------------|--|--------------|--------------|
| Max. output torque | N·m | 6 | 12 | 18 |
| Continuous output torque | N·m | 2 | 4 | 6 |
| Max. rotation speed | rpm | 300 (*1) | | |
| Allowable axial load | N | 1000 | | |
| Allowable moment load | N·m | 40 | | |
| Output shaft moment of inertia | kg·m ² | 0.00575 | 0.00695 | 0.00910 |
| Allowable moment of load inertia | kg·m ² | 0.3 | 0.4 | 0.5 |
| Index accuracy (*3) | sec | ±30 | | |
| Repeatability (*3) | sec | ±5 | | |
| Output shaft friction torque | N·m | 0.6 | | 0.7 |
| Resolution | P/rev | 540672 | | |
| Motor insulation class | | Class F | | |
| Motor withstand voltage | | 1,500 VAC 1 min | | |
| Motor insulation resistance | | 10 MΩ or more 500 VDC | | |
| Operating ambient temperature | | 0 to 45°C (0 to 40°C: *4) | | |
| Operating ambient humidity | | 20 to 85% RH, no condensation | | |
| Storage ambient temperature | | -20 to 80°C | | |
| Storage ambient humidity | | 20 to 90% RH, no condensation | | |
| Atmosphere | | No corrosive gas, explosive gas, or dust | | |
| Weight | kg | 4.7 (6.0) *2 | 5.8 (7.1) *2 | 7.5 (8.8) *2 |
| Output shaft runout (*3) | mm | 0.03 | | |
| Output shaft surface runout (*3) | mm | 0.03 | | |
| Degree of protection | | IP20 | | |

*1: Use at a speed of 80 rpm or less during continuous rotation operation.


*2: The values in () are the actuator weight with the mounting base option.

*3: Refer to the "Glossary" on page 52 for index accuracy, repeatability, output shaft runout and output shaft surface runout.

*4: When using as a UL certified product, the maximum temperature is 40°C.


Speed/maximum torque characteristics

● AX2006T

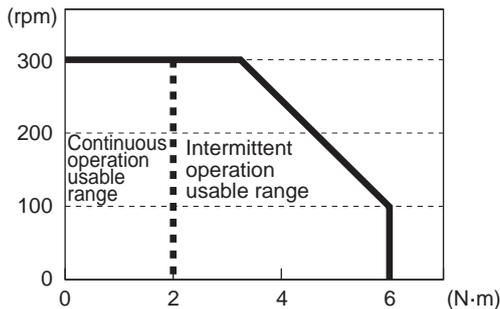


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX2018T

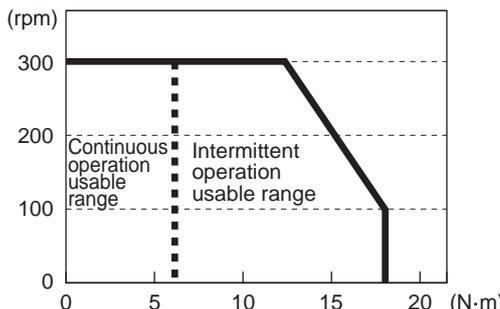


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX2012T

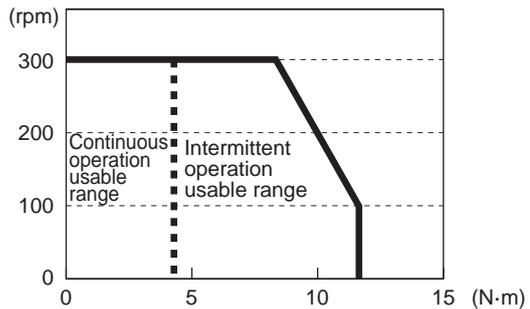

* Fig. This graph shows the characteristics for 3-phase 200 VAC.

(Note) Moment load (simple formula)

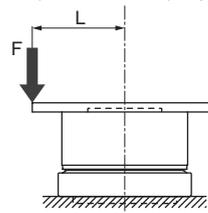


(Fig. a)

$$M \text{ (N·m)} = F \text{ (N)} \times L \text{ (m)}$$

M: Moment load

F: Load

L: Distance from output shaft center

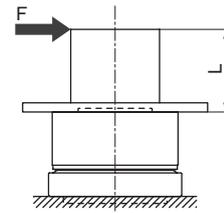

(Fig. b)

$$M \text{ (N·m)} = F \text{ (N)} \times (L + 0.02) \text{ (m)}$$

M: Moment load

F: Load

L: Distance from output shaft flange

⚠ Always read the safety precautions on pages 61 to 66 before use.





AX2000T Series

Dimensions

● AX2006T





● AX2012T

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

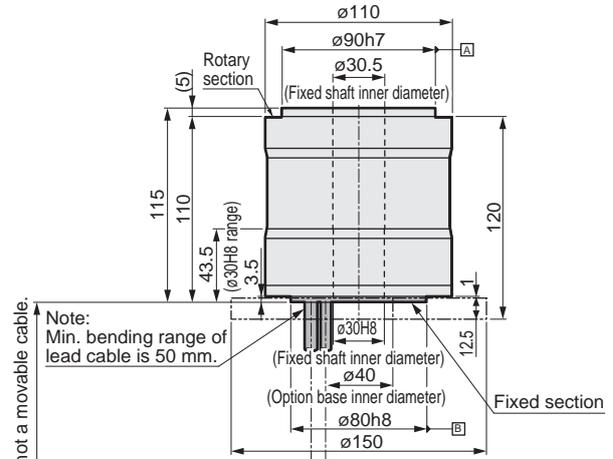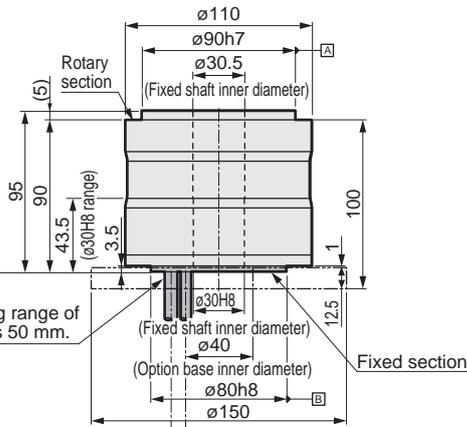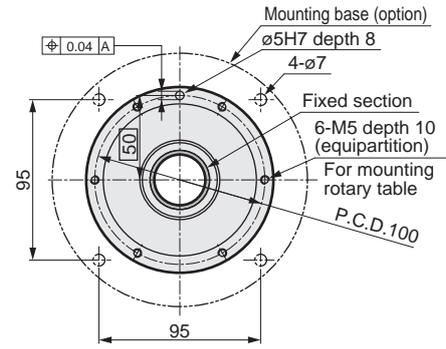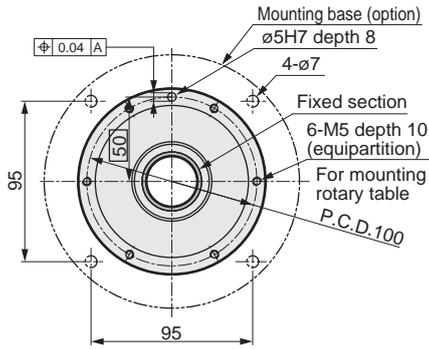

The 500 mm lead cable is not flexible. (Note) It is not a movable cable.


The 500 mm lead cable is not flexible. (Note) It is not a movable cable.

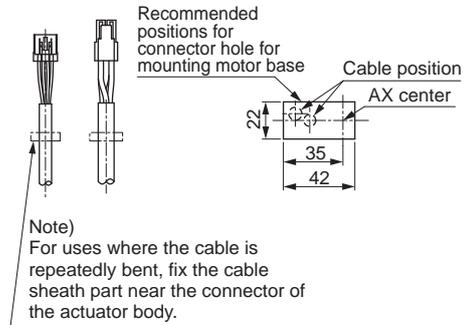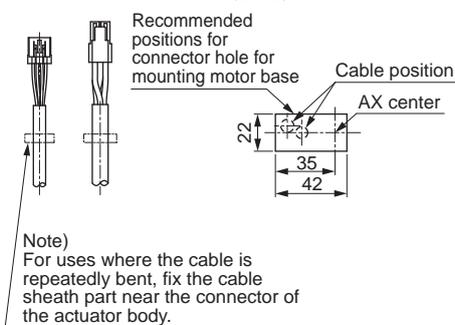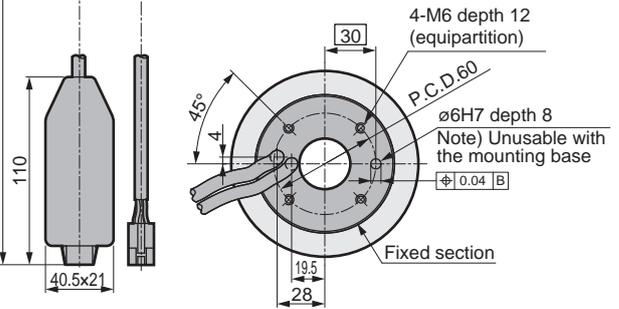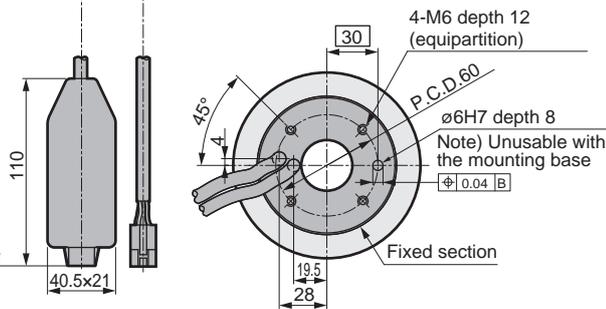

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position.

Dimensions

● AX2018T

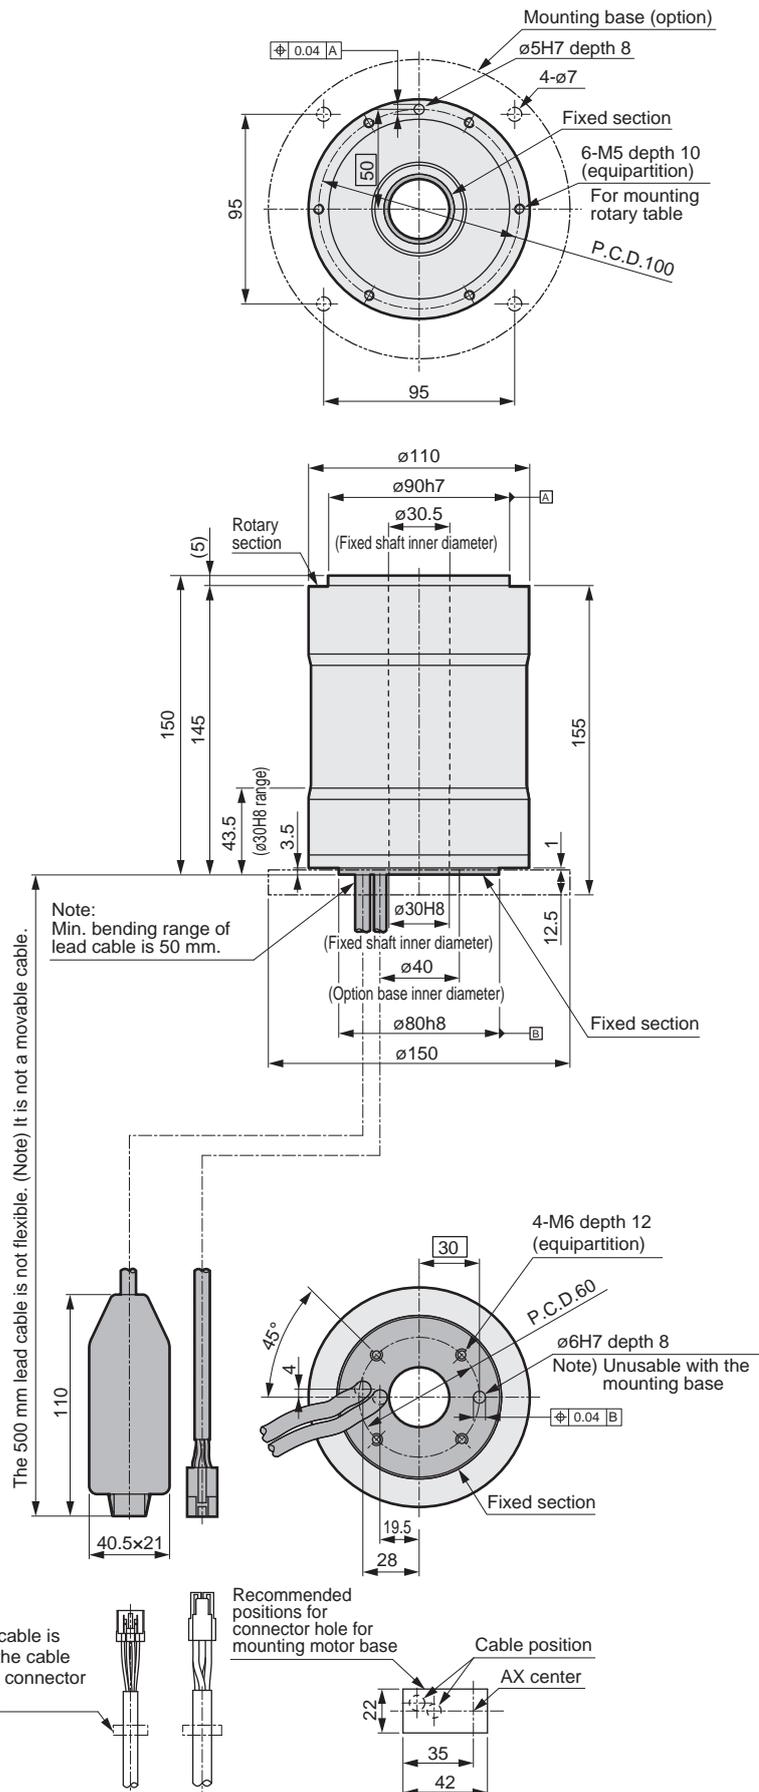

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.



ABSODEX

AX4000T Series

Supports large moments of inertia load
Compatible function allows free combination of driver, actuator, and cable
Large hollow diameter is convenient for cable wiring and piping,
abundant options available

- Max. torque: 9/22/45/75 N·m
- Supported driver: TS driver



Actuator specifications

| Item | | AX4009T | AX4022T | AX4045T | AX4075T |
|----------------------------------|-------------------|--|------------------|------------------|-------------------|
| Max. output torque | N·m | 9 | 22 | 45 | 75 |
| Continuous output torque | N·m | 3 | 7 | 15 | 25 |
| Max. rotation speed | rpm | 240 (*1) | | | 140 (*1) |
| Allowable axial load | N | 800 | 3700 | | 20000 |
| Allowable moment load | N·m | 40 | 60 | 80 | 200 |
| Output shaft moment of inertia | kg·m ² | 0.009 | 0.0206 | 0.0268 | 0.1490 |
| Allowable moment of load inertia | kg·m ² | 0.35 (1.75) (*2) | 0.60 (3.00) (*2) | 0.90 (5.00) (*2) | 5.00 (25.00) (*2) |
| Index accuracy (*5) | sec | ±30 | | | |
| Repeatability (*5) | sec | ±5 | | | |
| Output shaft friction torque | N·m | 0.8 | 3.5 | | 10.0 |
| Resolution | P/rev | 540672 | | | |
| Motor insulation class | | Class F | | | |
| Motor withstand voltage | | 1,500 VAC 1 min | | | |
| Motor insulation resistance | | 10 MΩ or more 500 VDC | | | |
| Operating ambient temperature | | 0 to 45°C (0 to 40°C: *6) | | | |
| Operating ambient humidity | | 20 to 85% RH, no condensation | | | |
| Storage ambient temperature | | -20 to 80°C | | | |
| Storage ambient humidity | | 20 to 90% RH, no condensation | | | |
| Atmosphere | | No corrosive gas, explosive gas, or dust | | | |
| Weight | kg | 5.5 | 12.3 (14.6) *3 | 15.0 (17.3) *3 | 36.0 (41.0) *3 |
| Weight with brake | kg | - | 16.4 (18.7) *3 | 19.3 (21.6) *3 | 54.0 (59.0) *3 |
| Output shaft runout (*5) | mm | 0.03 | | | |
| Output shaft surface runout (*5) | mm | 0.05 | | | |
| Degree of protection | | IP20 | | | |

*1: Use at a speed of 80 rpm or less during continuous rotation operation.

*2: When using in load conditions up to those given in (), set parameter 72 (integral gain magnification) = 0.3 (reference value).

*3: The values in () are the actuator weight with the mounting base option.

*4: Contact CKD whenever using continuous rotation operation in combination with parameter 72 (integral gain magnification).

*5: Refer to the "Glossary" on page 52 for index accuracy, repeatability, output shaft runout and output shaft surface runout.

*6: When using as a UL certified product, the maximum temperature is 40°C.

Electromagnetic brake specifications (option)

| Item | Compatibility | AX4022T/AX4045T | AX4075T |
|-----------------------------------|---------------|---|-----------------------|
| Type | | Non-backlash dry type non-excitation type | |
| Rated voltage | V | 24 VDC | |
| Power capacity | W | 30 | 55 |
| Rated current | A | 1.25 | 2.30 |
| Static friction torque | N·m | 35 | 200 |
| Armature release time (brake on) | msec | 50 (reference value) | 50 (reference value) |
| Armature suction time (brake off) | msec | 150 (reference value) | 250 (reference value) |
| Retention accuracy | Minutes | 45 (reference value) | |
| Max. operating frequency | times/min | 60 | 40 |

*1: During output shaft rotation, the electromagnetic brake disc and fixed part may cause a scraping sound.

Also, impact noise is generated when electromagnetic brakes operate.

*2: For travel after brake off, you must change the parameter delay time by the above-mentioned armature suction time.

*3: Though it is a non-backlash type, holding a constant position is difficult if load is applied in the rotation direction. It is not for maintaining braking/precision.

*4: Manual release of the electromagnetic brake is possible by evenly tightening the bolts in the manual release tap (3 locations).

*5: Use a non-magnetic material (SUS303, etc.) when putting a shaft through the hollow hole in the type with magnetic brakes.


Peripheral devices may be affected due to magnetization.

Please read the technical data and user's manual for details on the precautions.

! Always read the safety precautions on pages 61 to 66 before use.


Speed/maximum torque characteristics

● AX4009T

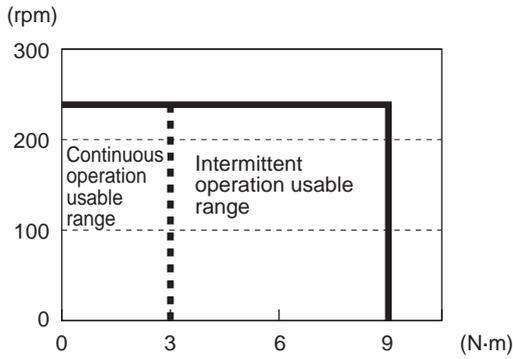


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX4022T

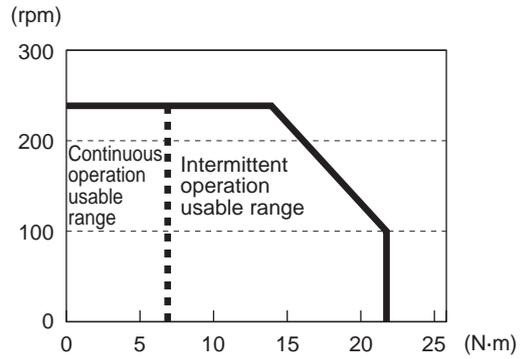


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX4045T

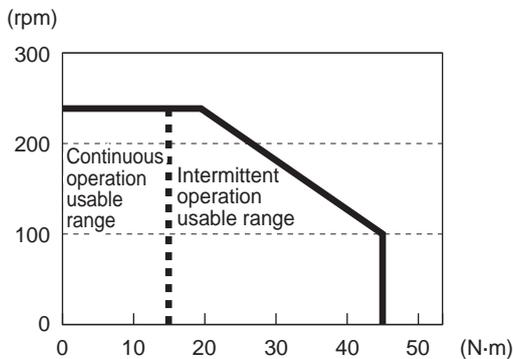


* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX4075T

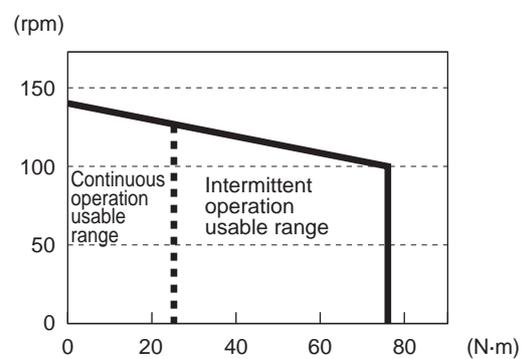

* Fig. This graph shows the characteristics for 3-phase 200 VAC.


(Note) Moment load (simple formula)

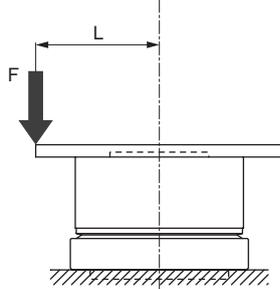

(Fig. a)

$$M \text{ (N-m)} = F \text{ (N)} \times L \text{ (m)}$$

M: Moment load
F: Load
L: Distance from output shaft center

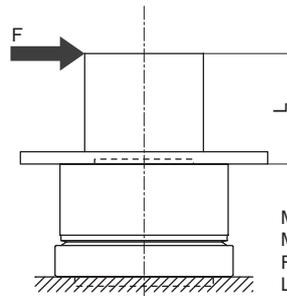

(Fig. b)

$$M \text{ (N-m)} = F \text{ (N)} \times (L + 0.02) \text{ (m)}$$

M: Moment load
F: Load
L: Distance from output shaft flange

⚠ Always read the safety precautions on pages 61 to 66 before use.

Actuator AX6000M
Drivers AX9000MU
Actuator AX1000T
Actuator AX2000T
Actuator AX4000T
Drivers AX9000TS/TH
Dialog terminal AX0180
Related parts model No. table

MEMO


| | | | | | | | |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|
| Actuator AX6000M | Drivers AX9000MU | Actuator AX1000T | Actuator AX2000T | Actuator AX4000T | Drivers AX9000TS/TH | Dialog terminal AX0180 | Related parts model No. table |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|

AX4000T Series

Dimensions

● AX4009T

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

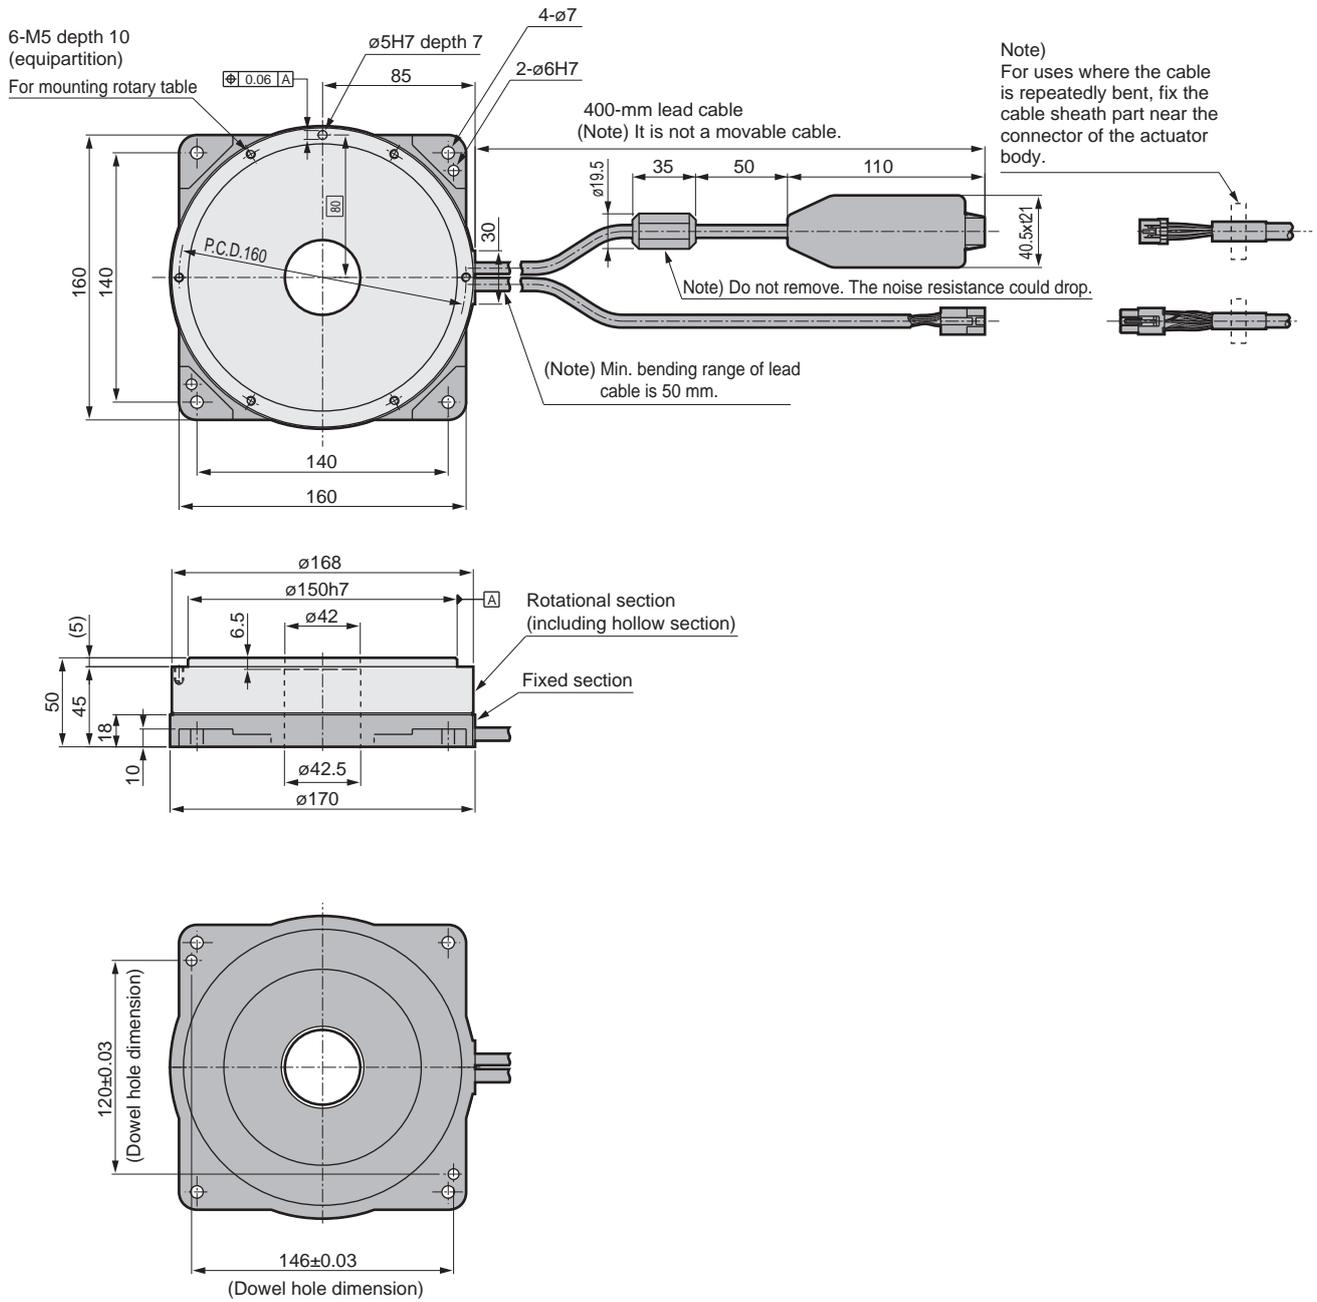

*1) The origin position of the actuator may differ from that shown in the dimensions.
The origin offset function allows you to set a desired origin position.


Dimensions

● AX4022T

● AX4022T-EB

Electromagnetic brake

For other options, refer to the left figure on the left.

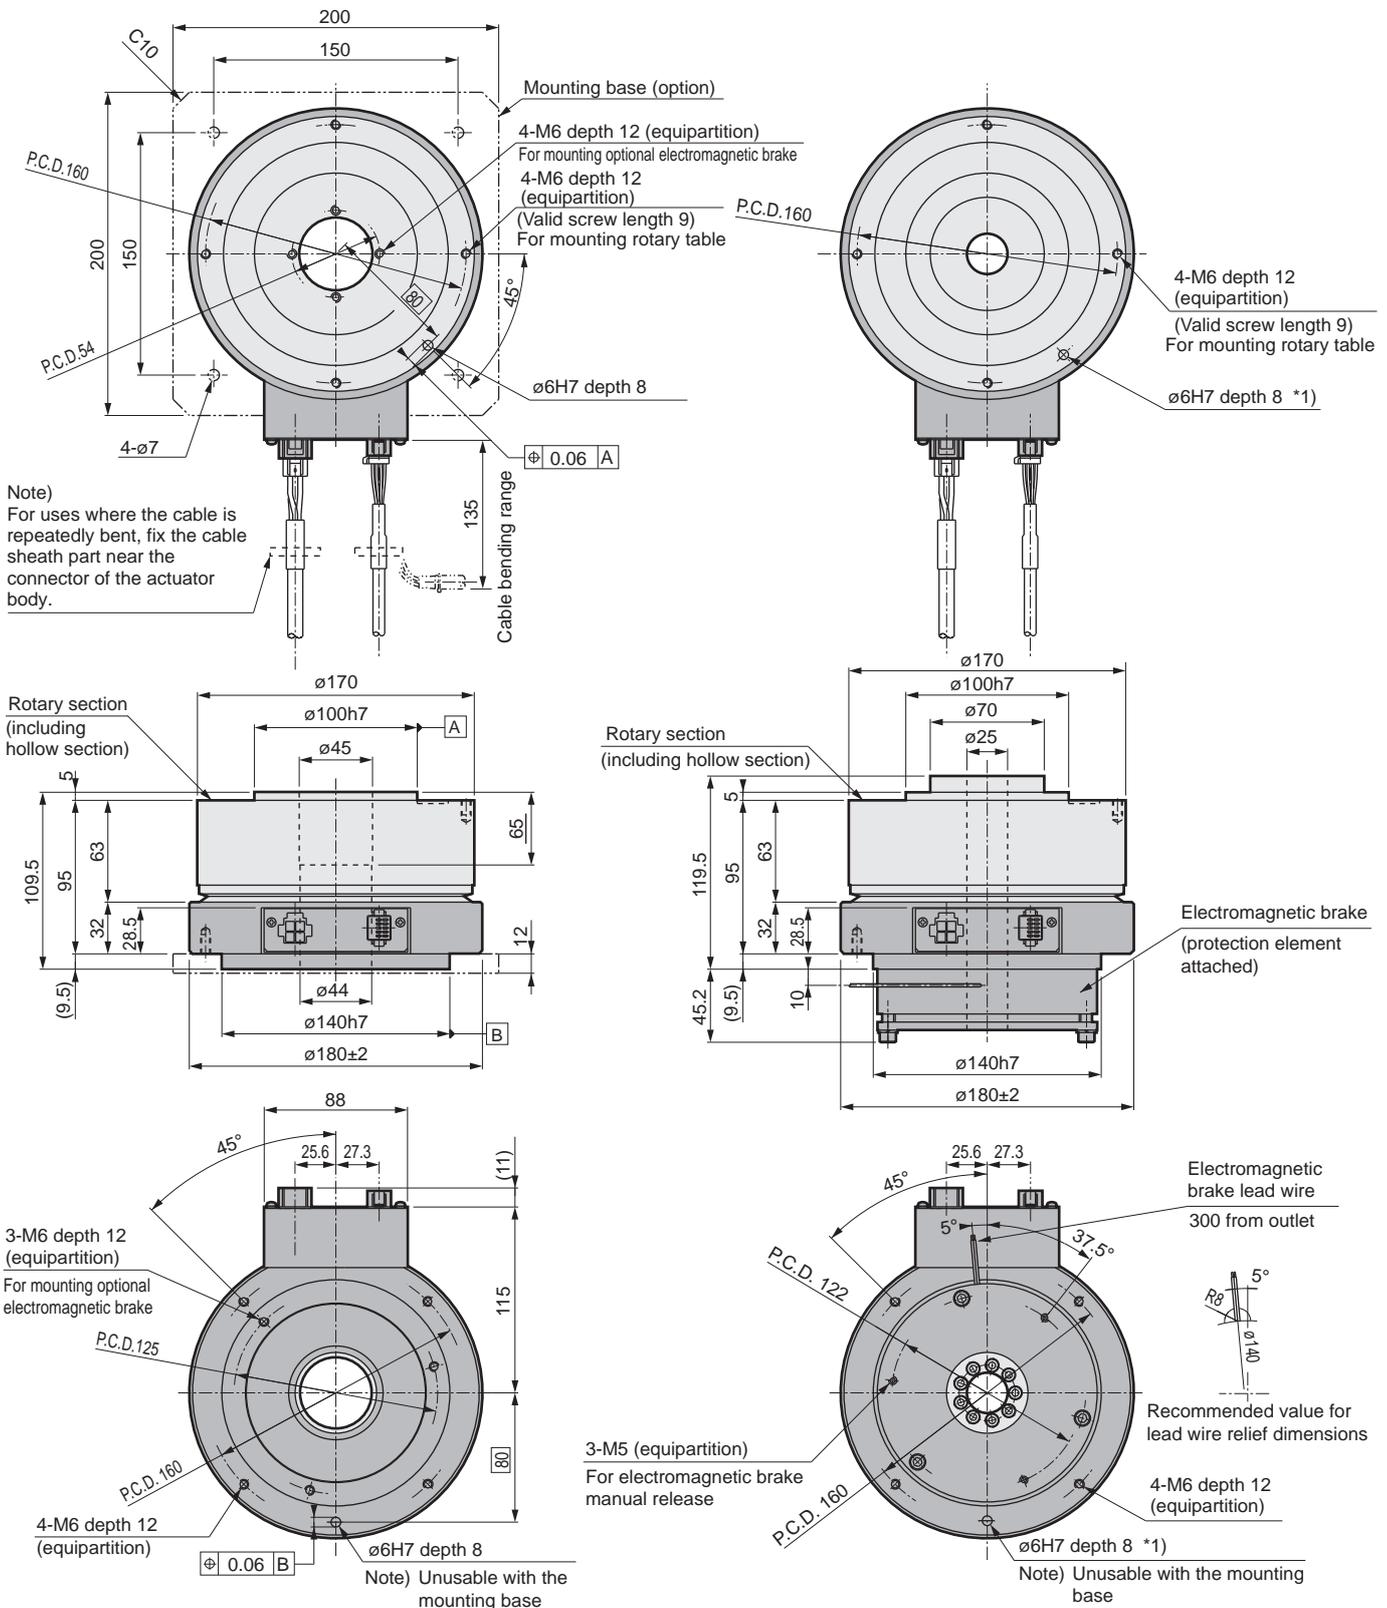

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position. The position of the positioning pin hole is the same as that of AX4022T when an electromagnetic brake is mounted.

AX4000T Series

Dimensions







● AX4045T

● AX4045T-EB

Electromagnetic brake

For other options, refer to the left figure on the left.

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

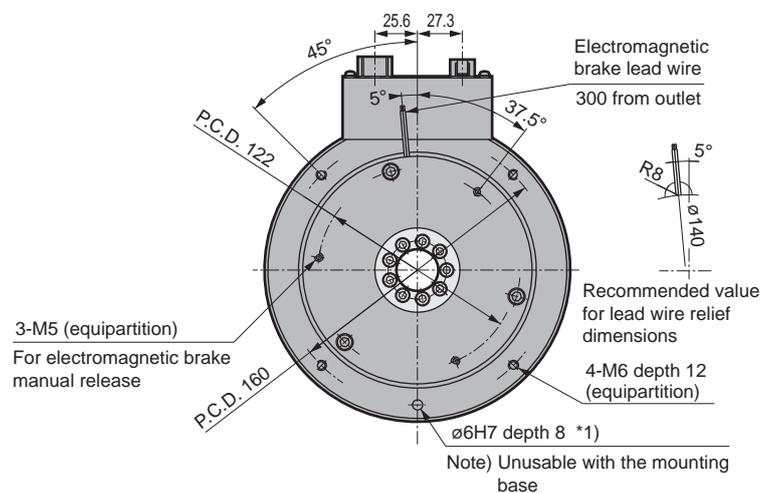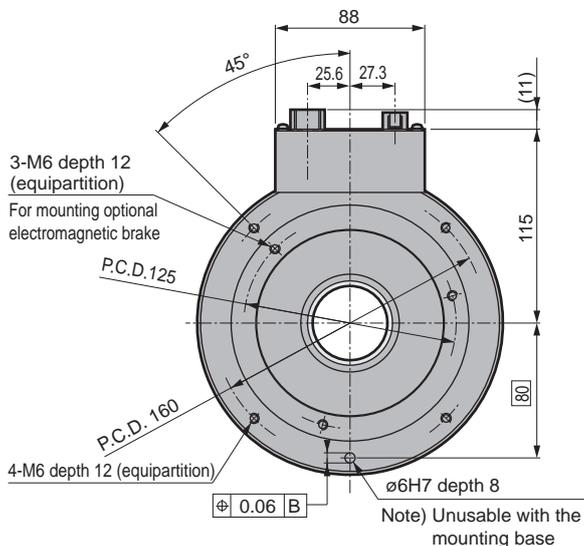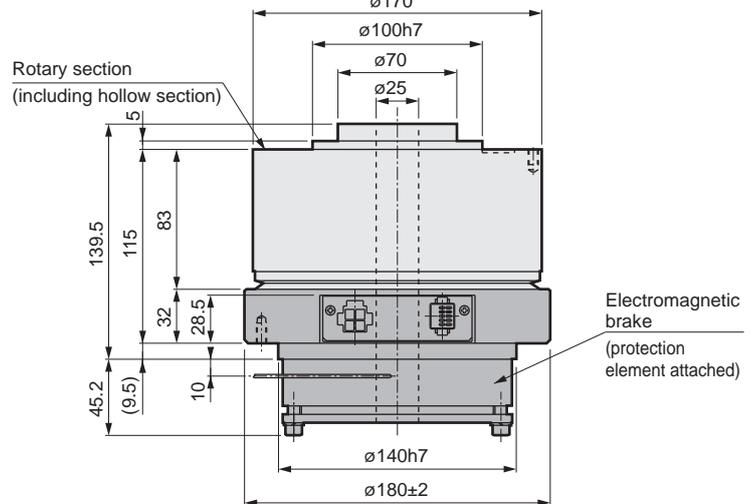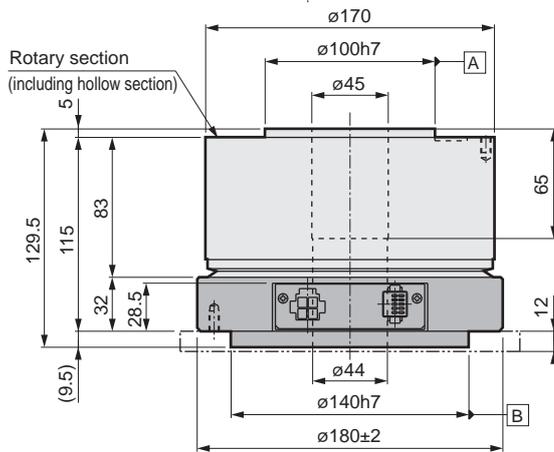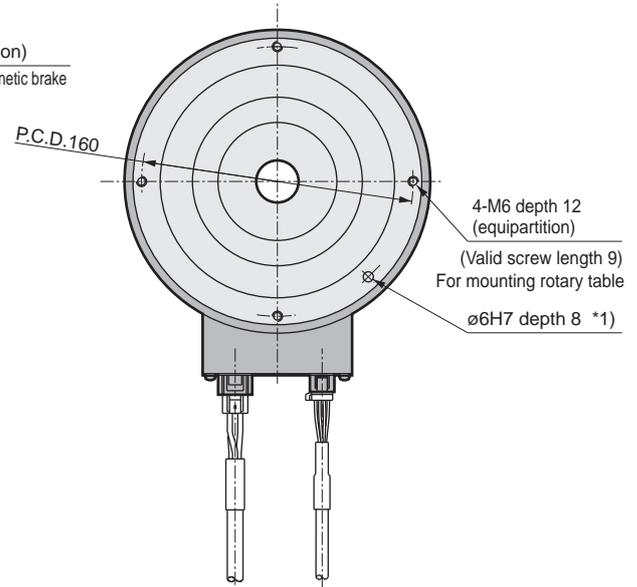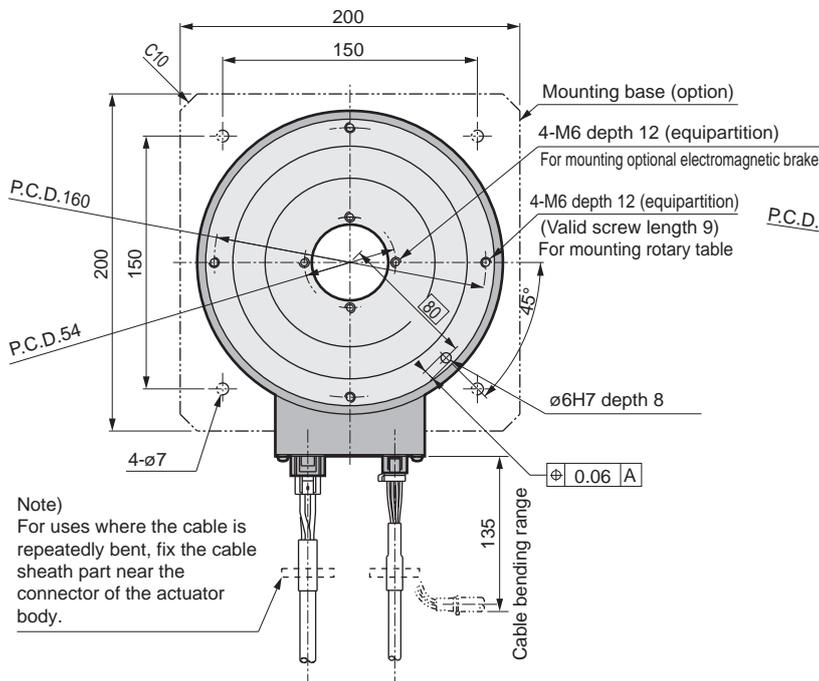

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position. The position of the positioning pin hole is the same as that of AX4045T when an electromagnetic brake is mounted.


Dimensions

● AX4075T





● AX4075T-EB

Electromagnetic brake


For other options, refer to the left figure on the left.

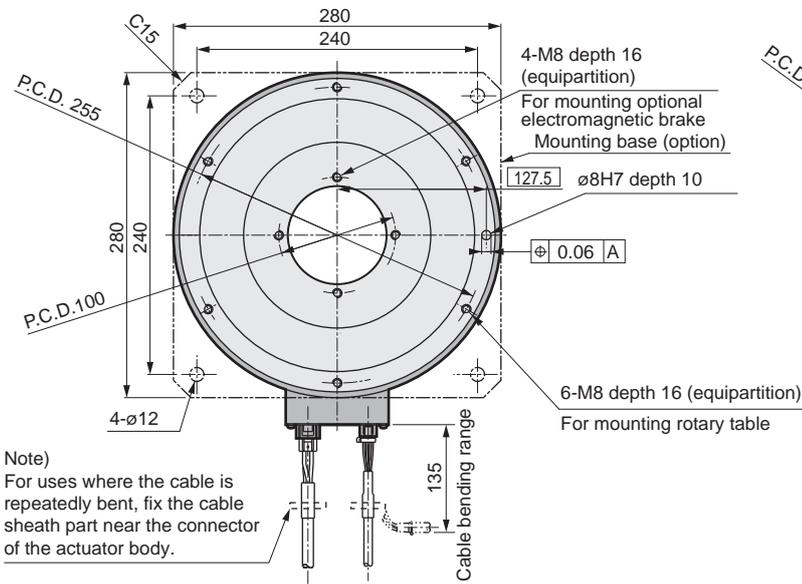

Note)
For uses where the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.

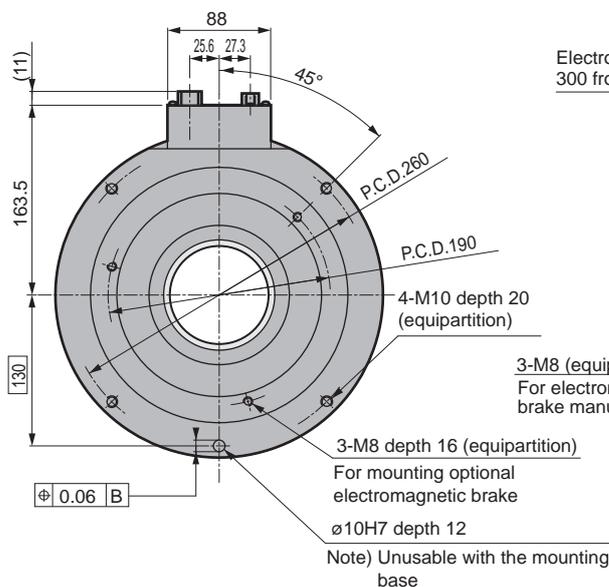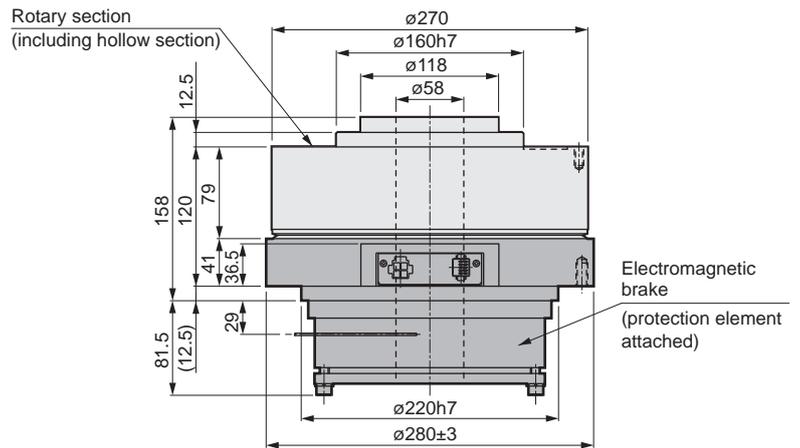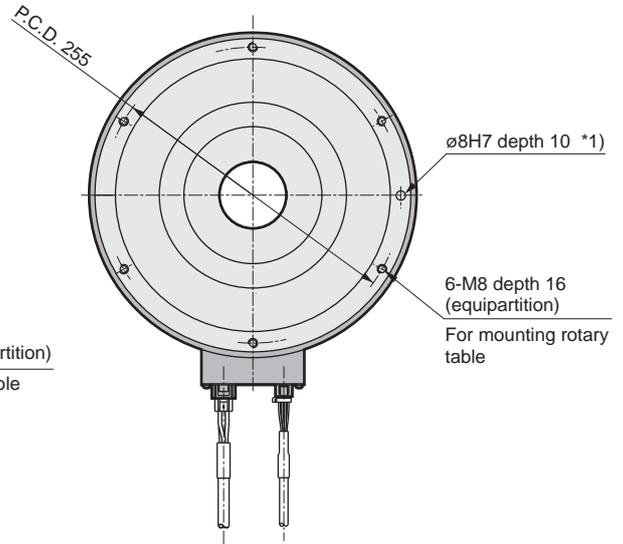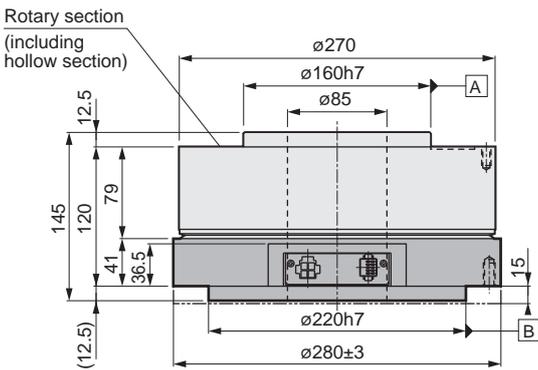

Note) Unusable with the mounting base

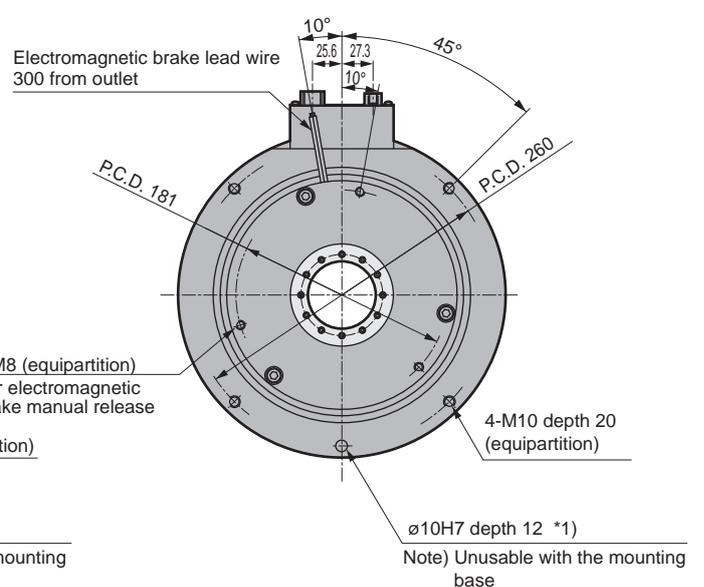

Note) Unusable with the mounting base

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position. The position of the positioning pin hole is the same as that of AX4045T when an electromagnetic brake is mounted.

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |



ABSODEX

AX4000T Series

Supports large moments of inertia load
 Compatible function allows free combination of driver, actuator, and cable
 Large hollow diameter is convenient for cable wiring and piping,
 abundant options available

- Max. torque: 150/300/500/1000 N·m
- Supported driver: TH driver



Actuator specifications

| Item | | AX4150T | AX4300T | AX4500T | AX410WT |
|----------------------------------|-------------------|--|----------------|------------------|------------------|
| Max. output torque | N·m | 150 | 300 | 500 | 1000 |
| Continuous output torque | N·m | 50 | 100 | 160 | 330 |
| Max. rotation speed | rpm | 100 (*1) | | 70 | 30 |
| Allowable axial load | N | 20000 | | | |
| Allowable moment load | N·m | 300 | 400 | 500 | 400 |
| Output shaft moment of inertia | kg·m ² | 0.2120 | 0.3260 | 0.7210 | 2.7200 |
| Allowable moment of load inertia | kg·m ² | 75.00 (*2) | 180.00 (*2) | 300.00 (*2) | 600.00 (*2) |
| Index accuracy (*4) | sec | ±30 | | | |
| Repeatability (*4) | sec | ±5 | | | |
| Output shaft friction torque | N·m | 10.0 | | 15.0 | 20.0 |
| Resolution | P/rev | 540672 | | | |
| Motor insulation class | | Class F | | | |
| Motor withstand voltage | | 1,500 VAC 1 min | | | |
| Motor insulation resistance | | 10 MΩ or more 500 VDC | | | |
| Operating ambient temperature | | 0 to 45°C (0 to 40°C: *5) | | | |
| Operating ambient humidity | | 20 to 85% RH, no condensation | | | |
| Storage ambient temperature | | -20 to 80°C | | | |
| Storage ambient humidity | | 20 to 90% RH, no condensation | | | |
| Atmosphere | | No corrosive gas, explosive gas, or dust | | | |
| Weight | kg | 44.0 (49.0) *3 | 66.0 (74.0) *3 | 115.0 (123.0) *3 | 198.0 (217.0) *3 |
| Weight with brake | kg | 63.0 (68.0) *3 | 86.0 (94.0) *3 | - | - |
| Output shaft runout (*4) | mm | 0.03 | | | |
| Output shaft surface runout (*4) | mm | 0.05 | | | 0.08 |
| Degree of protection | | IP20 | | | |

*1: Use at a speed of 80 rpm or less during continuous rotation operation.

*2: Settings when shipped support large moment of inertia.

*3: The values in () are the actuator weight with the mounting base option.

*4: Refer to the "Glossary" on page 52 for index accuracy, repeatability, output shaft runout and output shaft surface runout.

*5: When using as a UL certified product, the maximum temperature is 40°C.

Electromagnetic brake specifications (option)

| Item | Compatibility | AX4150T/AX4300T |
|-----------------------------------|---------------|---|
| Type | | Non-backlash dry type non-excitation type |
| Rated voltage | V | 24 VDC |
| Power capacity | W | 55 |
| Rated current | A | 2.30 |
| Static friction torque | N·m | 200 |
| Armature release time (brake on) | msec | 50 (reference value) |
| Armature suction time (brake off) | msec | 250 (reference value) |
| Retention accuracy | Minutes | 45 (reference value) |
| Max. operating frequency | times/min | 40 |

*1: During output shaft rotation, the electromagnetic brake disc and fixed part may cause a scraping sound.

Also, impact noise is generated when electromagnetic brakes operate.

*2: For travel after brake off, you must change the parameter delay time by the above-mentioned armature suction time.

*3: Though it is a non-backlash type, holding a constant position is difficult if load is applied in the rotation direction. It is not for maintaining braking/precision.

*4: Manual release of the electromagnetic brake is possible by evenly tightening the bolts in the manual release tap (3 locations).

*5: Use a non-magnetic material (SUS303, etc.) when putting a shaft through the hollow hole in the type with magnetic brakes.

Peripheral devices may be affected due to magnetization.


Please read the technical data and user's manual for details on the precautions.

⚠ Always read the safety precautions on pages 61 to 66 before use.

Speed/maximum torque characteristics

● AX4150T


(rpm)

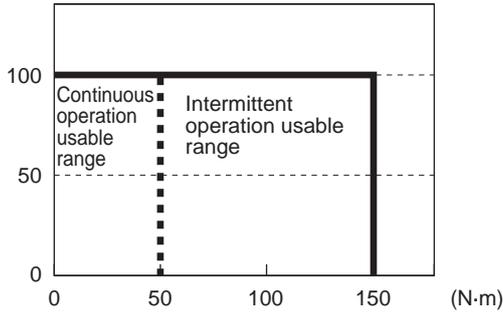

* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX4300T


(rpm)

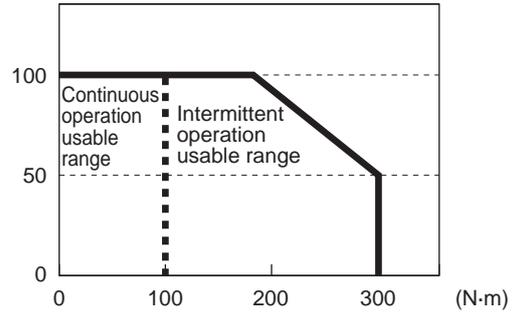

* Fig. This graph shows the characteristics for 3-phase 200 VAC.

● AX4500T


(rpm)

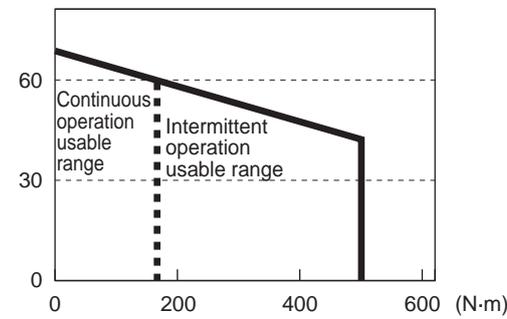

* Fig. This graph shows the characteristics for 3-phase 200 VAC.



● AX410WT

(rpm)

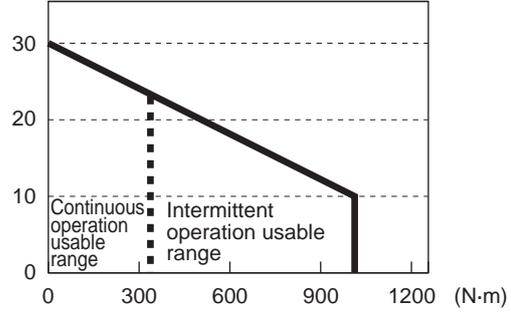

* Fig. This graph shows the characteristics for 3-phase 200 VAC.

(Note) Moment load (simple formula)

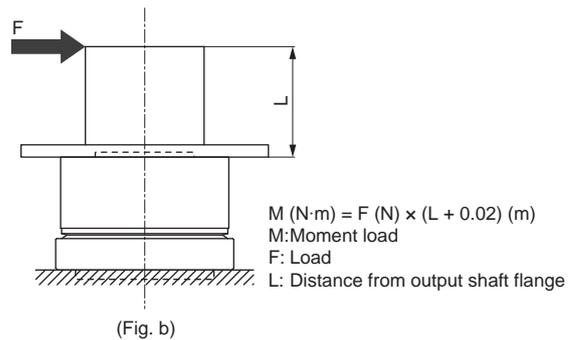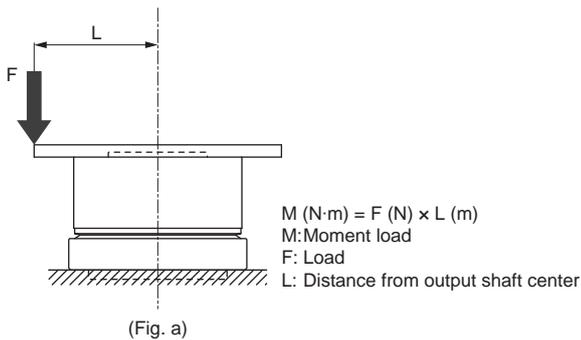

! Always read the safety precautions on pages 61 to 66 before use.

MEMO

| | | | | | | | |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|
| Actuator AX6000M | Drivers AX9000MU | Actuator AX1000T | Actuator AX2000T | Actuator AX4000T | Drivers AX9000TS/TH | Dialog terminal AX0180 | Related parts model No. table |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|

AX4000T Series

Dimensions


● AX4150T

● AX4150T-EB

Electromagnetic brake

For other options, refer to the left figure on the left.


| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |

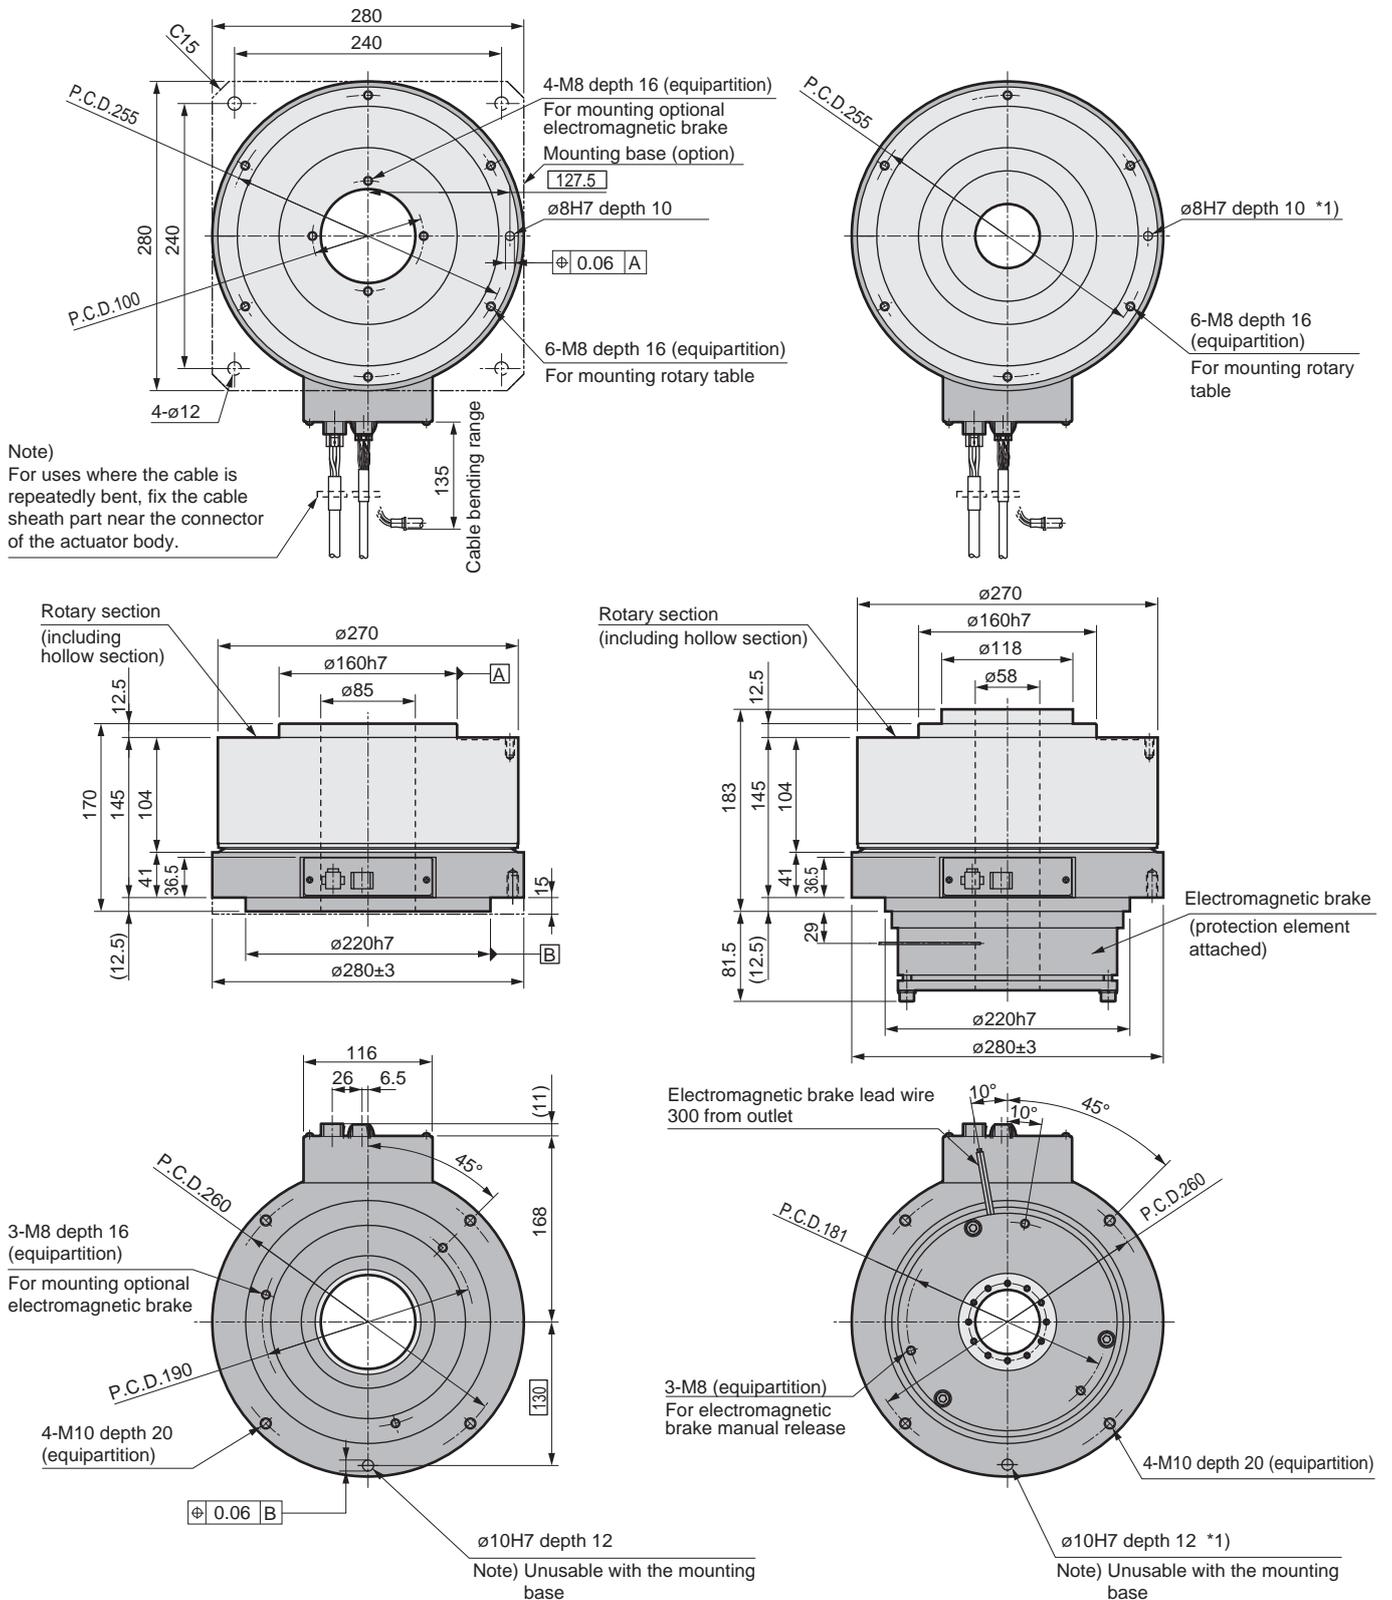

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position. The position of the positioning pin hole is the same as that of AX4150T when an electromagnetic brake is mounted.

Dimensions






● AX4300T

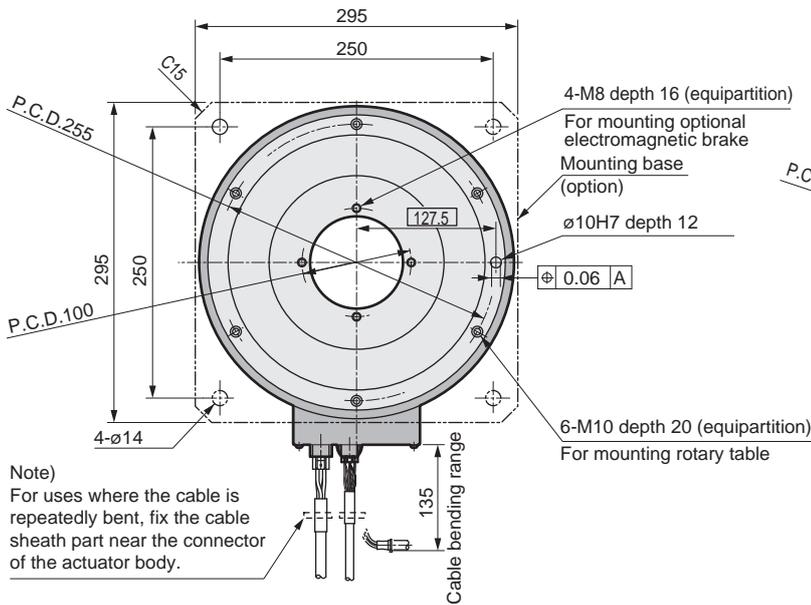

● AX4300T-EB

Electromagnetic brake

For other options, refer to the left figure on the left.

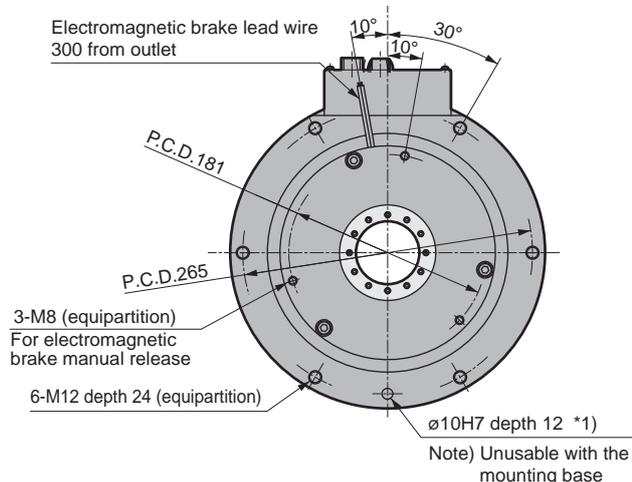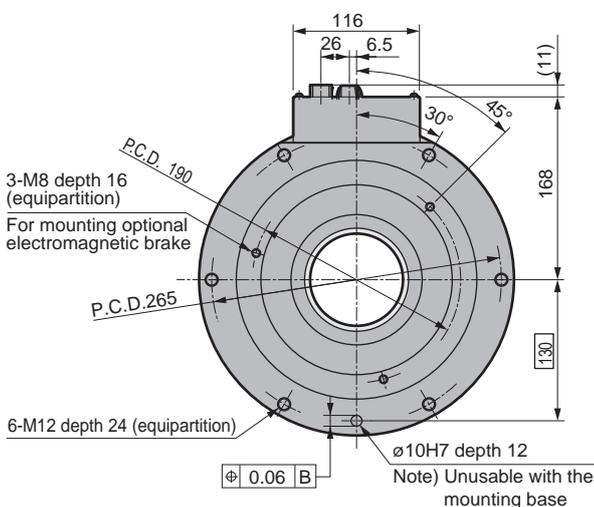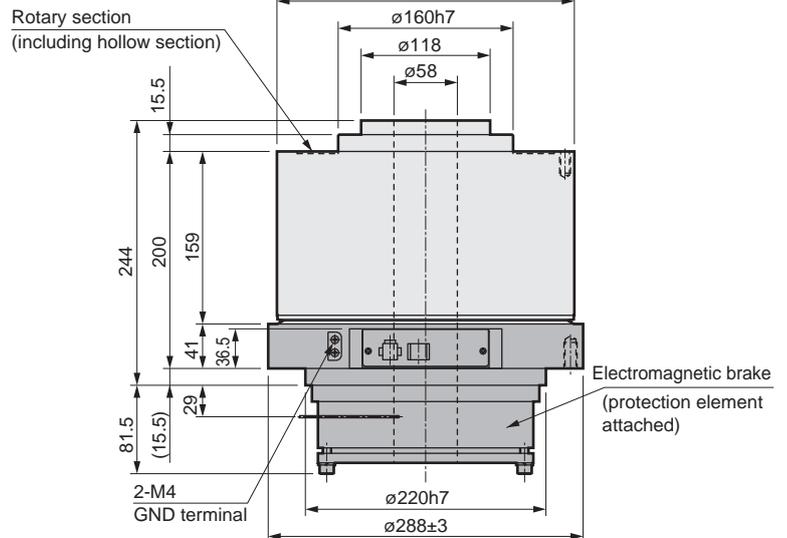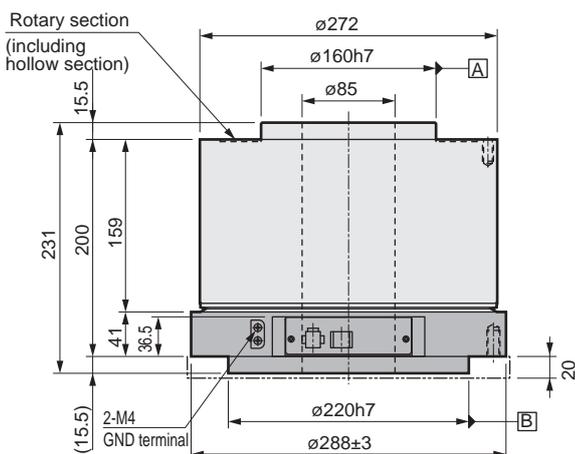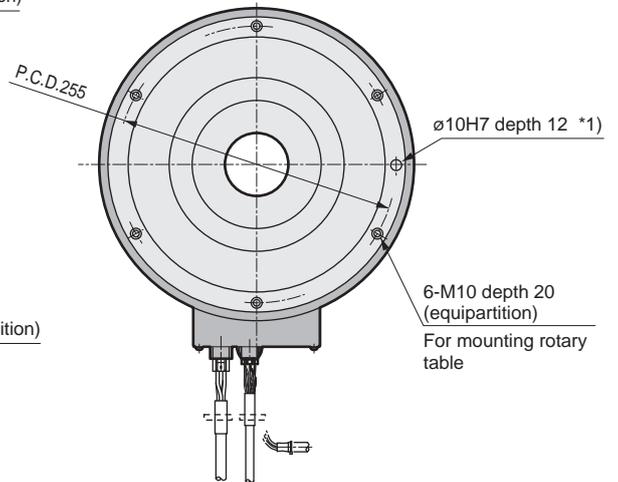

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position. The position of the positioning pin hole is the same as that of AX4300T when an electromagnetic brake is mounted.



| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

AX4000T Series

Dimensions

● AX4500T

| | | | | | | | |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|
| Actuator AX6000M | Drivers AX9000MU | Actuator AX1000T | Actuator AX2000T | Actuator AX4000T | Drivers AX9000TS/TH | Dialog terminal AX0180 | Related parts model No. table |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|

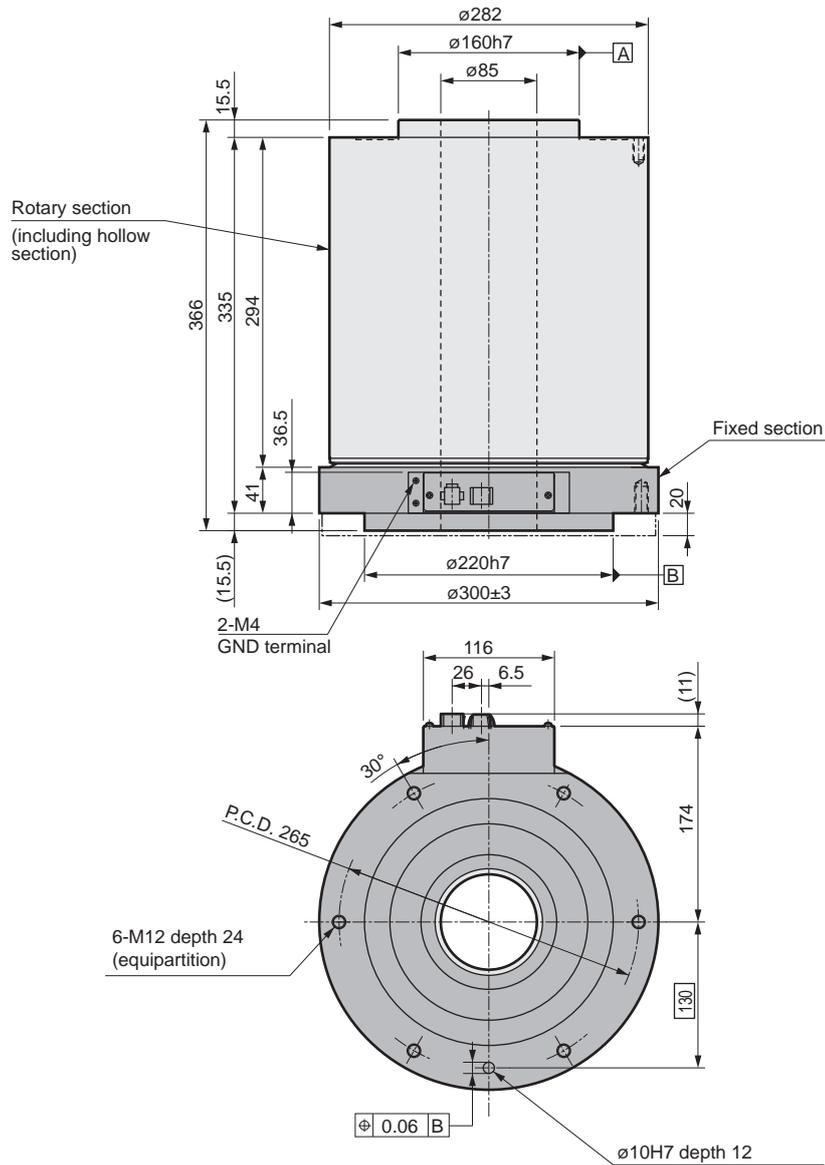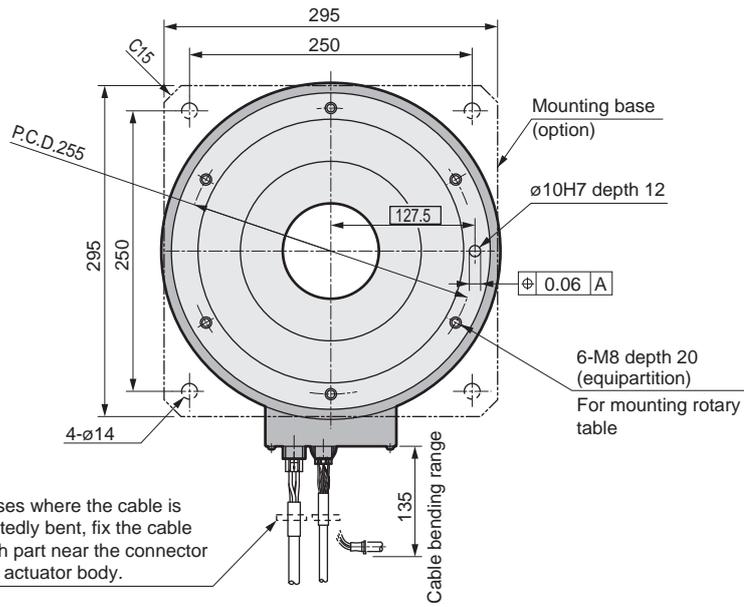

*1) The origin position of the actuator may differ from that shown in the dimensions. The origin offset function allows you to set a desired origin position.



ABSODEX (AX1000T/AX2000T/AX4000T Series)

TS/TH driver

Interface specification: Parallel I/O (NPN), Parallel I/O (PNP)
CC-Link, PROFIBUS-DP, DeviceNet
EtherCAT, EtherNet/IP



Features

- Power supply is divided into main power supply and control power supply
- Wiring method is changed from terminal block to connector
- Smaller/lighter weight (resin body adopted)
- 7-segment LED 2-digit display
- Compatible with encoder output (parallel I/O only)
- Serial communication options available
- Monitoring functions such as position information, alarm status, etc. (U2, U3, U4, U5, and U6 options only)

How to order

- 200 to 230 VAC
AX9000TS - **U0**
- 200 to 230 VAC
AX9000TH - **U0**
- 100 to 115 VAC
AX9000TS-J1 - **U0**

Interface specifications
U0: Parallel I/O (NPN)
U1: Parallel I/O (PNP)
U2: CC-Link
U3: PROFIBUS-DP
U4: DeviceNet
U5: EtherCAT
U6: EtherNet/IP

General specifications

| Item | Model | |
|-------------------------------|---|---|
| | TS driver AX9000TS | TH driver AX9000TH |
| Power supply voltage | Main power supply | Three phase, Single phase 200 VAC ±10% to 230 VAC ±10% (*1) 100 VAC ±10% to 115 VAC ±10% (J1 Option) (*2) (*3) |
| | Control power | 200 VAC ±10% to 230 VAC ±10% 100 VAC ±10% to 115 VAC ±10% (J1 Option) (*2) (*3) |
| Power frequency | 50/60 Hz | |
| Rated input current | 200 VAC: 1.8 A 100 VAC: 2.4 A | 200 VAC: 5.0 A |
| Rated output current | 1.9 A | 5.0 A |
| Structure | Driver and controller integrated (open type) | |
| Operating ambient temperature | 0 to 50°C | |
| Operating ambient humidity | 20 to 90% RH (no condensation) | |
| Storage ambient temperature | -20 to 65°C | |
| Storage ambient humidity | 20 to 90% RH (no condensation) | |
| Atmosphere | No corrosive gas or dust | |
| Anti-noise | 1,000 V (P-P), pulse width 1 μsec, rising 1 nsec impulse noise test, induction noise (capacitive coupling) | |
| Vibration resistance | 4.9 m/s ² | |
| Weight | Approx. 1.6 kg | Approx. 2.1 kg |
| Degree of protection | IP2X (excluding CN4 and CN5) | |

- *1) For models with maximum torque 75 N·m or more, the calculation of torque limit region is different from the usual when used at single-phase 200 VAC. Contact CKD to determine usability.
*2) If 200 to 230 VAC is connected by mistake, when using power voltage 100 to 115 VAC specifications (-J1 option), the driver internal circuit will be damaged.
*3) For models with maximum torque 75 N·m or more, "-J1" cannot be selected.
*4) If the main power is cut off while the actuator is rotating, the rotation may continue due to inertia.
*5) After the main power supply is cut OFF, the motor may rotate by the residual voltage of the driver.

Breaker capacity

TS driver

| Actuator model No. | Driver model No. | Rush current (A) | | Breaker capacity Rated current (A) |
|---|------------------|--------------------|--------------------------------|---------------------------------------|
| | | Single phase 100 V | Single-phase/three-phase 200 V | |
| AX2006T | AX9000TS | 16 (*1) | 56 (*1) | 10 |
| AX1022T, AX2012T, AX2018T AX4009T, AX4022T | | | | |
| AX1045T, AX4045T | | — | — | |
| AX1075T, AX4075T | | | | |

*1) The value of the rush current is a representative value at 115 VAC and 230 VAC.

TH driver

| Actuator model No. | Driver model No. | Rush current (A) | Breaker capacity Rated current (A) |
|--|------------------|-------------------|---------------------------------------|
| | | Three-phase 200 V | |
| AX1150T, AX4150T AX1210T, AX4300T AX4500T AX410WT | AX9000TH | 56 (*1) | 20 |

*1) The value of the rush current is a representative value at 230 VAC.

Performance specifications

| Item | Description |
|-------------------------|---|
| No. of control axes | 1 axis, 540,672 pulses/1 rotation |
| Angle setting unit | ° (degree), pulse, indexing No. |
| Angle min. setting unit | 0.001°, 1 pulse |
| Speed setting unit | sec, rpm |
| Speed setting range | 0.01 to 100 sec/0.11 to 300 rpm (*1) |
| Equal divisions | 1 to 255 |
| Max. command value | 7-digit numeric input ±9,999,999 |
| Timer | 0.01 sec to 99.99 sec |
| Programming language | NC |
| Programming method | Set the data through RS-232C port with an interactive terminal, PC, etc. |
| Operation mode | Auto, MDI, jog, single block, servo OFF, pulse train input mode |
| Coordinates | Absolute, incremental |
| Acceleration curve | [5 types] Modified sine (MS), modified constant velocity (MC/MC2), modified trapezoid (MT), trapezoid (TR) |
| Status display | LED display CHARGE: Main power supply POWER: Control power |
| Operation display | Display with 7-segment LED (2 digits) |
| Communication interface | RS-232C compliant |
| I/O signal | Refer to interface specification pages. |
| Program capacity | Approx. 6,000 characters (256) |
| Electronic thermal | Overheating protection for actuator |

*1) Maximum rotation speed differs depending on the actuator connected.

Parallel I/O (NPN)

CN3 Input signal

| Pin No. | Signal name | Logic | Determination |
|---------|---|----------|---------------|
| 1 to 2 | External power supply input +24 V ±10% | | |
| 3 to 4 | External power supply input GND | | |
| 5 | Program No. selection input (Bit 0) | Positive | Level |
| 6 | Program No. selection input (Bit 1) | Positive | Level |
| 7 | Program No. selection input (Bit 2) | Positive | Level |
| 8 | Program No. selection input (Bit 3) | Positive | Level |
| 9 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| 10 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| 11 | Reset input | Positive | Edge |
| 12 | Origin return directive input | Positive | Edge |
| 13 | Start input | Positive | Edge |
| 14 | Servo on input/ Program stop input | Positive | Level Edge |
| 15 | Ready return/Continuous rotation stop input | Positive | Edge |
| 16 | Answer input/Position deviation counter reset input | Positive | Edge |
| 17 | Emergency stop input | Negative | Level |
| 18 | Brake release input | Positive | Level |

CN3 pulse train input signal

| Pin No. | Signal name |
|---------|---------------------|
| 19 | PULSE/UP/A phase |
| 20 | -PULSE/-UP/-A phase |
| 21 | DIR/DOWN/B phase |
| 22 | -DIR/-DOWN/-B phase |


Input/output circuit specifications

| Description | 1 circuit current (mA) | Max. points (Circuit) | Max. current (mA) | Max. power consumption (mA) |
|-------------------------|------------------------|-----------------------|-------------------|-----------------------------|
| Input circuit | 4 | 14 | 56 | 1106 |
| Output circuit | 50 | 18 | 900 | |
| Brake output (BK+, BK-) | 75 | 2 | 150 | |

* The maximum simultaneous output points of the output circuit are 14 points out of 18 points.


CN3 input/output circuit specifications

● Input circuit

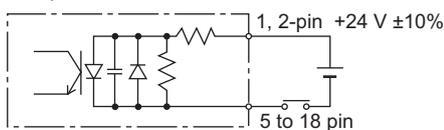


Rated voltage 24 V ±10%
Rated current 4 mA (at 24 VDC)

● Output circuit

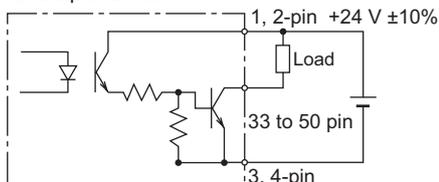

Rated voltage 24 V ±10%
Rated current 50 mA (MAX)


● Pulse string Input circuit

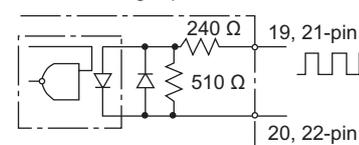

Rated voltage 5 V ±10%

Max. input frequency
Line driver 1 Mpps
Open collector 250 Kpps

● Encoder Output circuit

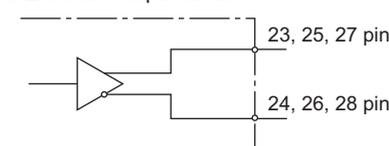

Output: line driver
Use line driver: DS26C31

CN3 Output signal

| Pin No. | Signal name | Logic |
|---------|---|----------|
| 33 | M code output (Bit 0) | Positive |
| 34 | M code output (Bit 1) | Positive |
| 35 | M code output (Bit 2) | Positive |
| 36 | M code output (Bit 3) | Positive |
| 37 | M code output (Bit 4) | Positive |
| 38 | M code output (Bit 5) | Positive |
| 39 | M code output (Bit 6) | Positive |
| 40 | M code output (Bit 7) | Positive |
| 41 | Imposition output | Positive |
| 42 | Positioning completion output | Positive |
| 43 | Start input wait output | Positive |
| 44 | Alarm output 1 | Negative |
| 45 | Alarm output 2 | Negative |
| 46 | Output 1 during indexing/Origin position output | Positive |
| 47 | Output 2 during indexing/Servo state output | Positive |
| 48 | Ready output | Positive |
| 49 | Segment position strobe output | Positive |
| 50 | M code strobe output | Positive |

CN3 encoder output signal (Incremental)

| Pin No. | Signal name |
|---------|-------------------------------|
| 23 | A phase (Line driver output) |
| 24 | -A phase (Line driver output) |
| 25 | B phase (Line driver output) |
| 26 | -B phase (Line driver output) |
| 27 | Z phase (Line driver output) |
| 28 | -Z phase (Line driver output) |

Always read the safety precautions on pages 61 to 66 before use.

* Custom order products are CE, UL/cUL, and RoHS non-compliant.

TS/TH driver

Parallel I/O (PNP)

CN3 Input signal

| Pin No. | Signal name | Logic | Determination |
|---------|---|----------|---------------|
| 1 to 2 | External power supply input GND (*1) | | |
| 3 to 4 | External power supply input +24 V ±10% (*1) | | |
| 5 | Program No. selection input (Bit 0) | Positive | Level |
| 6 | Program No. selection input (Bit 1) | Positive | Level |
| 7 | Program No. selection input (Bit 2) | Positive | Level |
| 8 | Program No. selection input (Bit 3) | Positive | Level |
| 9 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| 10 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| 11 | Reset input | Positive | Edge |
| 12 | Origin return directive input | Positive | Edge |
| 13 | Start input | Positive | Edge |
| 14 | Servo on input/ Program stop input | Positive | Level Edge |
| 15 | Ready return/Continuous rotation stop input | Positive | Edge |
| 16 | Answer input/Position deviation counter reset input | Positive | Edge |
| 17 | Emergency stop input | Negative | Level |
| 18 | Brake release input | Positive | Level |

*1) The wiring differs from that under the PNP specification of AX9000GS/AX9000GH.

CN3 Output signal

| Pin No. | Signal name | Logic |
|---------|---|----------|
| 33 | M code output (Bit 0) | Positive |
| 34 | M code output (Bit 1) | Positive |
| 35 | M code output (Bit 2) | Positive |
| 36 | M code output (Bit 3) | Positive |
| 37 | M code output (Bit 4) | Positive |
| 38 | M code output (Bit 5) | Positive |
| 39 | M code output (Bit 6) | Positive |
| 40 | M code output (Bit 7) | Positive |
| 41 | Imposition output | Positive |
| 42 | Positioning completion output | Positive |
| 43 | Start input wait output | Positive |
| 44 | Alarm output 1 | Negative |
| 45 | Alarm output 2 | Negative |
| 46 | Output 1 during indexing/Origin position output | Negative |
| 47 | Output 2 during indexing/Servo state output | Positive |
| 48 | Ready output | Positive |
| 49 | Segment position strobe output | Positive |
| 50 | M code strobe output | Positive |

CN3 pulse train input signal

| Pin No. | Signal name |
|---------|---------------------|
| 19 | PULSE/UP/A phase |
| 20 | -PULSE/-UP/-A phase |
| 21 | DIR/DOWN/B phase |
| 22 | -DIR/-DOWN/-B phase |

CN3 encoder output signal (Incremental)

| Pin No. | Signal name |
|---------|-------------------------------|
| 23 | A phase (Line driver output) |
| 24 | -A phase (Line driver output) |
| 25 | B phase (Line driver output) |
| 26 | -B phase (Line driver output) |
| 27 | Z phase (Line driver output) |
| 28 | -Z phase (Line driver output) |


Input/output circuit specifications

| Description | 1 circuit current (mA) | Max. points (Circuit) | Max. current (mA) | Max. power consumption (mA) |
|-------------------------|------------------------|-----------------------|-------------------|-----------------------------|
| Input circuit | 4 | 14 | 56 | 1106 |
| Output circuit | 50 | 18 | 900 | |
| Brake output (BK+, BK-) | 75 | 2 | 150 | |


* The maximum simultaneous output points of the output circuit are 14 points out of 18 points.

CN3 input/output circuit specifications


● Input circuit

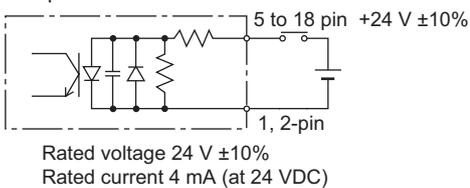


● Output circuit

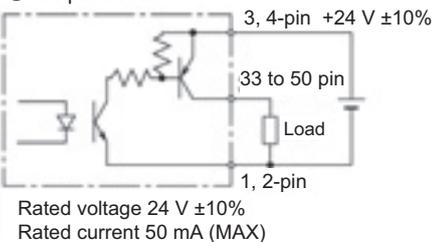

● Pulse string Input circuit

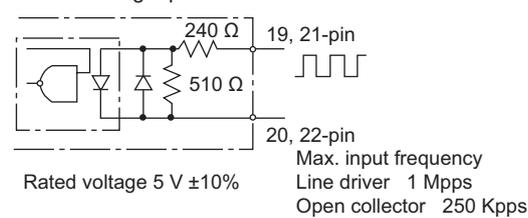

● Encoder Output circuit

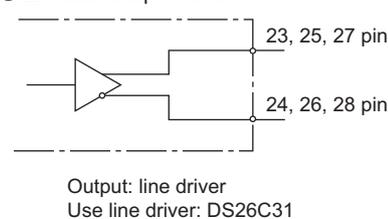

* Custom order products are CE, UL/cUL, and RoHS non-compliant.

CC-Link

Communication specifications

| Item | Specifications |
|--|---|
| Power supply | 5 VDC is supplied from the servo amplifier. |
| CC-Link version | Ver 1.10 |
| Number of occupied stations (Station type) | 2 stations (Remote device station) |
| Remote input points | 64 points (including unusable) |
| Remote output points | 64 points (including unusable) |
| Remote register input/output | Input 8 words/Output 8 words |
| Communication speed | 10M/5M/2.5M/625K/156kbps (Selected by parameter setting) |
| Connection cable | CC-Link Ver. 1.10 compliant cable (3 core cable with shield) |
| Transmission format | HDLC compliant |
| Remote station No. | 1 to 63 (Set by a parameter) |
| Number of connected units | For remote device station only, Max. 32 units/2 stations occupied |
| Monitor function | Present position within 1 rotation (degree, pulse), position deviation amount, program No., electronic thermal, rotation speed, point table No., torque load factor, acceleration, alarm, parameter, operation mode |

I/O signal

PLC → AX (Input)


| Device No. | Signal name | Logic | Determination |
|----------------------------|---|----------|---------------|
| RYn0 | Program No. selection input (Bit 0) | Positive | Level |
| RYn1 | Program No. selection input (Bit 1) | Positive | Level |
| RYn2 | Program No. selection input (Bit 2) | Positive | Level |
| RYn3 | Program No. selection input (Bit 3) | Positive | Level |
| RYn4 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| RYn5 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| RYn6 | Reset input | Positive | Edge |
| RYn7 | Origin return directive input | Positive | Edge |
| RYn8 | Start input | Positive | Edge |
| RYn9 | Servo on input/ Program stop input | Positive | Level Edge |
| RYnA | Ready return input/Continuous rotation stop input | Positive | Edge |
| RYnB | Answer input/Position deviation counter reset input | Positive | Edge |
| RYnC | Emergency stop input | Negative | Level |
| RYnD | Brake release input | Positive | Level |
| RYnE | Job operation input (CW direction) | Positive | Edge |
| RYnF | Job operation input (CCW direction) | Positive | Edge |
| RY(n+1)0 | Unusable/Travel unit selection input (Bit 0) | Positive | Level |
| RY(n+1)1 | Unusable/Travel unit selection input (Bit 1) | Positive | Level |
| RY(n+1)2 | Unusable/Travel speed unit selection input | Positive | Level |
| RY(n+1)3 | Operation by table, Operation by data input switching input | Positive | Level |
| RY(n+1)4 to RY(n+1)F | Unusable | | |
| RY(n+2)0 | Monitor output execution request | Positive | Level |
| RY(n+2)1 | Command code execution request | Positive | Edge |
| RY(n+2)2 to RY(n+2)F | Unusable | | |
| RY(n+3)0 to RY(n+3)F | Unusable | | |

* n is determined by the setting of the station No.

AX (Output) → PLC

| Device No. | Signal name | Logic |
|----------------------------|---|----------|
| RXn0 | M code output (Bit 0) | Positive |
| RXn1 | M code output (Bit 1) | Positive |
| RXn2 | M code output (Bit 2) | Positive |
| RXn3 | M code output (Bit 3) | Positive |
| RXn4 | M code output (Bit 4) | Positive |
| RXn5 | M code output (Bit 5) | Positive |
| RXn6 | M code output (Bit 6) | Positive |
| RXn7 | M code output (Bit 7) | Positive |
| RXn8 | Imposition output | Positive |
| RXn9 | Positioning completion output | Positive |
| RXnA | Start input wait output | Positive |
| RXnB | Alarm output 1 | Negative |
| RXnC | Alarm output 2 | Negative |
| RXnD | Output 1 during indexing/ Origin position output | Positive |
| RXnE | Output 2 during indexing/ Servo state output | Positive |
| RXnF | Ready output | Positive |
| RX(n+1)0 | Segment position strobe output | Positive |
| RX(n+1)1 | M code strobe output | Positive |
| RX(n+1)2 to RX(n+1)F | Unusable | |
| RX(n+2)0 | Monitoring | Positive |
| RX(n+2)1 | Command code execution completed | Positive |
| RX(n+2)2 to RX(n+2)F | Unusable | |
| RX(n+3)0 to RX(n+3)A | Unusable | |
| RX(n+3)B | Remote READY | Positive |
| RX(n+3)C to RX(n+3)F | Unusable | |

TB3 Input circuit specifications (Machine stops)

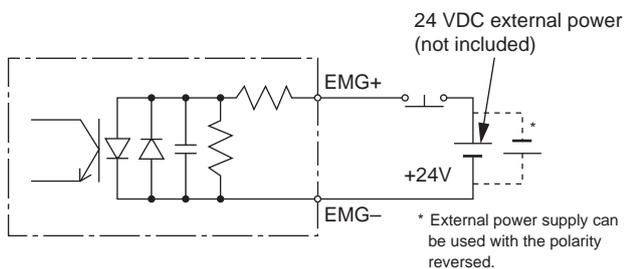

Rated voltage 24 V ±10%, rated current 5 mA or less

Safety precautions

- Reserve a sufficient distance between the communication cable and power cable (motor cable, power supply cable, etc.).
- Placing the communication cable and power cable close to each other or bundling these cables makes communication unstable due to noise, possibly resulting in a communication error or retry.
- For details on the installation of the communication cable, refer to the CC-Link installation manuals.

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

TS/TH driver

PROFIBUS-DP

Communication specifications

| Item | Specifications |
|---------------------------|---|
| Communication protocol | PROFIBUS DP-V0 compliant |
| I/O data | Input 8 bytes/Output 8 bytes |
| Communication speed | 12M/6M/3M/1.5M/500k/187.5k/93.75k/45.45k/19.2k/9.6kbps (Autobaud rate function) |
| Connection cable | PROFIBUS compliant cable (2-wire twisted pair cable with shield) |
| Node address | 2 to 125 (Set by a parameter) |
| Number of connected units | Without repeater: Up to 32 stations for each segment With repeater: Up to 126 stations for each segment |
| Monitor function | Present position within 1 rotation (degree, pulse), position deviation amount, program No., electronic thermal, rotation speed, point table No., torque load factor, acceleration, alarm, parameter, operation mode |

I/O signal


PLC → AX (Input)

| Byte No. | Signal name | Logic | Determination |
|------------|---|----------|---------------|
| 0.0 | Program No. selection input (Bit 0) | Positive | Level |
| 0.1 | Program No. selection input (Bit 1) | Positive | Level |
| 0.2 | Program No. selection input (Bit 2) | Positive | Level |
| 0.3 | Program No. selection input (Bit 3) | Positive | Level |
| 0.4 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| 0.5 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| 0.6 | Reset input | Positive | Edge |
| 0.7 | Origin return directive input | Positive | Edge |
| 1.0 | Start input | Positive | Edge |
| 1.1 | Servo on input/ Program stop input | Positive | Level Edge |
| 1.2 | Ready return input/Continuous rotation stop input | Positive | Edge |
| 1.3 | Answer input/Position deviation counter reset input | Positive | Edge |
| 1.4 | Emergency stop input | Negative | Level |
| 1.5 | Brake release input | Positive | Level |
| 1.6 | Job operation input (CW direction) | Positive | Edge |
| 1.7 | Job operation input (CCW direction) | Positive | Edge |
| 2.0 | Parameter No. (Bit 8)/Travel unit selection input (Bit 0) | Positive | Level |
| 2.1 | Parameter No. (Bit 9)/Travel unit selection input (Bit 1) | Positive | Level |
| 2.2 | Parameter No. (Bit 10)/Travel speed unit selection input | Positive | Level |
| 2.3 | Operation by table, Operation by data input switching input | Positive | Level |
| 2.4 2.5 | Unusable | | |
| 2.6 | Monitor output execution request | Positive | Level |
| 2.7 | Command code execution request | Positive | Edge |
| 3.0 | Parameter No. (Bit 0)/Unusable | Positive | Level |
| 3.1 | Parameter No. (Bit 1)/Unusable | Positive | Level |
| 3.2 | Parameter No. (Bit 2)/Unusable | Positive | Level |
| 3.3 | Parameter No. (Bit 3)/Unusable | Positive | Level |
| 3.4 | Parameter No. (Bit 4)/Unusable | Positive | Level |
| 3.5 | Parameter No. (Bit 5)/Unusable | Positive | Level |
| 3.6 | Parameter No. (Bit 6)/Unusable | Positive | Level |
| 3.7 | Parameter No. (Bit 7)/Unusable | Positive | Level |

AX (Output) → PLC

| Byte No. | Signal name | Logic |
|------------------|---|----------|
| 0.0 | M code output (Bit 0) | Positive |
| 0.1 | M code output (Bit 1) | Positive |
| 0.2 | M code output (Bit 2) | Positive |
| 0.3 | M code output (Bit 3) | Positive |
| 0.4 | M code output (Bit 4) | Positive |
| 0.5 | M code output (Bit 5) | Positive |
| 0.6 | M code output (Bit 6) | Positive |
| 0.7 | M code output (Bit 7) | Positive |
| 1.0 | Imposition output | Positive |
| 1.1 | Positioning completion output | Positive |
| 1.2 | Start input wait output | Positive |
| 1.3 | Alarm output 1 | Negative |
| 1.4 | Alarm output 2 | Negative |
| 1.5 | Output 1 during indexing/ Origin position output | Positive |
| 1.6 | Output 2 during indexing/ Servo state output | Positive |
| 1.7 | Ready output | Positive |
| 2.0 | Segment position strobe output | Positive |
| 2.1 | M code strobe output | Positive |
| 2.2 to 2.5 | Unusable | |
| 2.6 | Monitoring | Positive |
| 2.7 | Command code execution completed | Positive |
| 3.0 to 3.7 | Unusable | |

TB3 Input circuit specifications (Machine stops)

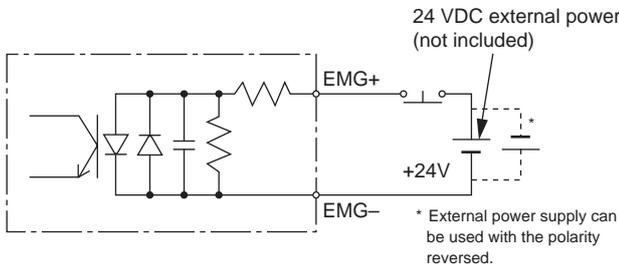

Rated voltage 24 V ±10%, rated current 5 mA or less

Safety precautions

- For details on the installation of a communication cable, refer to "Installation Guideline for PROFIBUS DP/FMS" issued by the PROFIBUS Organization or the PROFIBUS wiring guide.

DeviceNet

Communication specifications

| Item | Specifications |
|---|---|
| Power supply for communication | 11 to 25 VDC |
| Current consumption of power supply for communication | 50 mA or less |
| Communication protocol | DeviceNet compliant: Remote I/O |
| Number of occupied nodes | Input 8 bytes/Output 8 bytes |
| Communication speed | 500 k/250 k/125 kbps (Selected by parameter setting) |
| Connection cable | DeviceNet compliant cable (5-wire cable with shield, 2 signal lines, 2 power cables, 1 shield) |
| Node address | 0 to 63 (Set by a parameter) |
| Number of connected units | Max. 64 units (including the master) |
| Monitor function | Present position within 1 rotation (degree, pulse), position deviation amount, program No., electronic thermal, rotation speed, point table No., torque load factor, acceleration, alarm, parameter, operation mode |

I/O signal


PLC → AX (Input)

| Byte No. | Signal name | Logic | Determination |
|----------|---|----------|---------------|
| 0.0 | Program No. selection input (Bit 0) | Positive | Level |
| 0.1 | Program No. selection input (Bit 1) | Positive | Level |
| 0.2 | Program No. selection input (Bit 2) | Positive | Level |
| 0.3 | Program No. selection input (Bit 3) | Positive | Level |
| 0.4 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| 0.5 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| 0.6 | Reset input | Positive | Edge |
| 0.7 | Origin return directive input | Positive | Edge |
| 1.0 | Start input | Positive | Edge |
| 1.1 | Servo on input/ Program stop input | Positive | Level Edge |
| 1.2 | Ready return input/Continuous rotation stop input | Positive | Edge |
| 1.3 | Answer input/Position deviation counter reset input | Positive | Edge |
| 1.4 | Emergency stop input | Negative | Level |
| 1.5 | Brake release input | Positive | Level |
| 1.6 | Job operation input (CW direction) | Positive | Edge |
| 1.7 | Job operation input (CCW direction) | Positive | Edge |
| 2.0 | Parameter No. (Bit 8)/Travel unit selection input (Bit 0) | Positive | Level |
| 2.1 | Parameter No. (Bit 9)/Travel unit selection input (Bit 1) | Positive | Level |
| 2.2 | Parameter No. (Bit 10)/Travel speed unit selection input | Positive | Level |
| 2.3 | Operation by table, Operation by data input switching input | Positive | Level |
| 2.4 | Unusable | | |
| 2.5 | Unusable | | |
| 2.6 | Monitor output execution request | Positive | Level |
| 2.7 | Command code execution request | Positive | Edge |
| 3.0 | Parameter No. (Bit 0)/Unusable | Positive | Level |
| 3.1 | Parameter No. (Bit 1)/Unusable | Positive | Level |
| 3.2 | Parameter No. (Bit 2)/Unusable | Positive | Level |
| 3.3 | Parameter No. (Bit 3)/Unusable | Positive | Level |
| 3.4 | Parameter No. (Bit 4)/Unusable | Positive | Level |
| 3.5 | Parameter No. (Bit 5)/Unusable | Positive | Level |
| 3.6 | Parameter No. (Bit 6)/Unusable | Positive | Level |
| 3.7 | Parameter No. (Bit 7)/Unusable | Positive | Level |

AX (Output) → PLC

| Byte No. | Signal name | Logic |
|------------|---|----------|
| 0.0 | M code output (Bit 0) | Positive |
| 0.1 | M code output (Bit 1) | Positive |
| 0.2 | M code output (Bit 2) | Positive |
| 0.3 | M code output (Bit 3) | Positive |
| 0.4 | M code output (Bit 4) | Positive |
| 0.5 | M code output (Bit 5) | Positive |
| 0.6 | M code output (Bit 6) | Positive |
| 0.7 | M code output (Bit 7) | Positive |
| 1.0 | Imposition output | Positive |
| 1.1 | Positioning completion output | Positive |
| 1.2 | Start input wait output | Positive |
| 1.3 | Alarm output 1 | Negative |
| 1.4 | Alarm output 2 | Negative |
| 1.5 | Output 1 during indexing/ Origin position output | Positive |
| 1.6 | Output 2 during indexing/ Servo state output | Positive |
| 1.7 | Ready output | Positive |
| 2.0 | Segment position strobe output | Positive |
| 2.1 | M code strobe output | Positive |
| 2.2 to 2.5 | Unusable | |
| 2.6 | Monitoring | Positive |
| 2.7 | Command code execution completed | Positive |
| 3.0 to 3.7 | Unusable | |

TB3 Input circuit specifications (Machine stops)

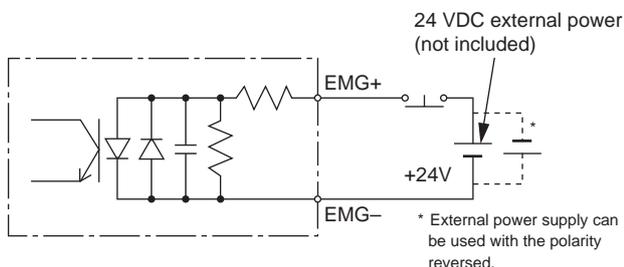

Rated voltage 24 V ±10%, rated current 5 mA or less

Safety precautions

- Reserve a sufficient distance between the communication cable and power cable (motor cable, power supply cable, etc.).
- Placing the communication cable and power cable close to each other or bundling these cables makes communication unstable due to noise, possibly resulting in a communication error or retry.
- For details on the installation of the communication cable, refer to the DeviceNet installation manuals.

Actuator
AX6000M

Drivers
AX9000MU

Actuator
AX1000T

Actuator
AX2000T

Actuator
AX4000T

Drivers
AX9000TS/TH

Dialog terminal
AX0180

Related parts
model No. table

TS/TH driver

EtherCAT

Communication specifications


| Item | Specifications |
|--------------------------------|---|
| Communication protocol | EtherCAT |
| Communication speed | 100 Mbps (fast Ethernet, full duplex) |
| Process data | Fixed PDO mapping |
| Max. PDO data length | RxPDO: 40 bytes/TxPDO: 40 bytes |
| Station arias | 0 to 65535 (Set by a parameter) |
| Connection cable | EtherCAT compliant cable (CAT5e or higher twisted pair cable (double shield with aluminum tape and braid) is recommended.) |
| Node address | Automatic indexing the master |
| Monitor function (Output Data) | Present position within 1 rotation (degree, pulse), position deviation amount, program No., electronic thermal, rotation speed, point table No., torque load factor, acceleration, alarm, parameter, operation mode |

I/O signal

PLC → AX (Input)

| Index | Sub Index | Display name | bit | Signal name | Logic | Determination |
|----------|----------------|----------------|----------------------------------|--|----------|---------------|
| 0x2001 | 0x01 | Input signal 1 | 0 | Program No. selection input (Bit 0) | Positive | Level |
| | | | 1 | Program No. selection input (Bit 1) | Positive | Level |
| | | | 2 | Program No. selection input (Bit 2) | Positive | Level |
| | | | 3 | Program No. selection input (Bit 3) | Positive | Level |
| | | | 4 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge Level |
| | | | 5 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge Level |
| | | | 6 | Reset input | Positive | Edge |
| | | | 7 | Origin return directive input | Positive | Edge |
| | | | 8 | Start input | Positive | Edge |
| | | | 9 | Servo on input/ Program stop input | Positive | Level Edge |
| | | | 10 | Ready return input/Continuous rotation stop input | Positive | Edge |
| | | | 11 | Answer input/Position deviation counter reset input | Positive | Edge |
| | | | 12 | Emergency stop input | Negative | Level |
| | | | 13 | Brake release input | Positive | Level |
| | | | 14 | Job operation input (CW direction) | Positive | Edge |
| | | | 15 | Job operation input (CCW direction) | Positive | Edge |
| | | | 16 | Unusable/Travel unit selection input (Bit 0) | Positive | Level |
| | | | 17 | Unusable/Travel unit selection input (Bit 1) | Positive | Level |
| | | | 18 | Unusable/Travel speed unit selection input | Positive | Level |
| | | | 19 | Operation by table, Operation by data input switching input | Positive | Level |
| 20 to 31 | | Unusable | | | | |
| 0x02 | Input signal 2 | 0 | Monitor output execution request | Positive | Level | |
| | | 1 | Command code execution request | Positive | Edge | |
| | | 2 to 31 | Unusable | | | |

TB3 Input circuit specifications (Machine stops)

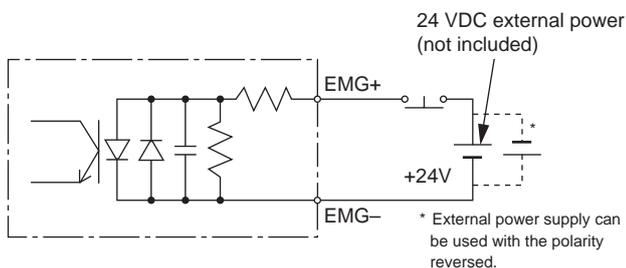

Rated voltage 24 V ±10%, rated current 5 mA or less

PDO mapping

RxPDO

| Index | Sub Index | Display name | Description |
|--------|-----------------|-----------------------|-------------|
| 0x1600 | 0x00 | Number of PDO objects | 10 |
| | 0x01 | Input signal 1 | 0x2001-0x01 |
| | 0x02 | Input signal 2 | 0x2001-0x02 |
| | 0x03 | Input data 1 | 0x2003-0x01 |
| | 0x04 | Input data 2 | 0x2003-0x02 |
| | 0x05 | Input data 3 | 0x2003-0x03 |
| | 0x06 | Input data 4 | 0x2003-0x04 |
| | 0x07 | Input data 5 | 0x2003-0x05 |
| | 0x08 | Input command 1 | 0x2003-0x06 |
| | 0x09 | Input command 2 | 0x2003-0x07 |
| 0x0A | Input command 3 | 0x2003-0x08 | |

TxPDO

| Index | Sub Index | Display name | Description |
|--------|------------------|-----------------------|-------------|
| 0x1A00 | 0x00 | Number of PDO objects | 10 |
| | 0x01 | Output signal 1 | 0x2005-0x01 |
| | 0x02 | Output signal 2 | 0x2005-0x02 |
| | 0x03 | Output data 1 | 0x2007-0x01 |
| | 0x04 | Output data 2 | 0x2007-0x02 |
| | 0x05 | Output data 3 | 0x2007-0x03 |
| | 0x06 | Output data 4 | 0x2007-0x04 |
| | 0x07 | Output data 5 | 0x2007-0x05 |
| | 0x08 | Output command 1 | 0x2007-0x06 |
| | 0x09 | Output command 2 | 0x2007-0x07 |
| 0x0A | Output command 3 | 0x2007-0x08 | |

I/O signal

AX (Output) → PLC

| Index | Sub Index | Display name | bit | Signal name | Logic | | |
|---------|-----------|-----------------|------|---|----------|----------------------------------|----------|
| 0x2005 | 0x01 | Output signal 1 | 0 | M code output (Bit 0) | Positive | | |
| | | | 1 | M code output (Bit 1) | Positive | | |
| | | | 2 | M code output (Bit 2) | Positive | | |
| | | | 3 | M code output (Bit 3) | Positive | | |
| | | | 4 | M code output (Bit 4) | Positive | | |
| | | | 5 | M code output (Bit 5) | Positive | | |
| | | | 6 | M code output (Bit 6) | Positive | | |
| | | | 7 | M code output (Bit 7) | Positive | | |
| | | | 8 | Imposition output | Positive | | |
| | | | 9 | Positioning completion output | Positive | | |
| | | | 10 | Start input wait output | Positive | | |
| | | | 11 | Alarm output 1 | Negative | | |
| | | | 12 | Alarm output 2 | Negative | | |
| | | | 13 | Output 1 during indexing/Origin position output | Positive | | |
| | | | 14 | Output 2 during indexing/Servo state output | Positive | | |
| | | | 0x02 | Output signal 2 | 0 | Monitoring | Positive |
| | | | | | 1 | Command code execution completed | Positive |
| 2 to 31 | Unusable | | | | | | |

Safety precautions

- Reserve a sufficient distance between the communication cable and power cable (motor cable, power supply cable, etc.).
- Placing the communication cable and power cable close to each other or bundling these cables makes communication unstable due to noise, possibly resulting in a communication error or retry.
- For details on the installation of the communication cable, refer to ETG.1600 EtherCAT installation guidelines.

EtherNet/IP

Communication specifications I/O signal

| Item | Specifications |
|--------------------------|---|
| Communication protocol | EtherNet/IP |
| Communication speed | Automatic setting (100 Mbps/10 Mbps, full duplex/half duplex) |
| Occupied bytes | Input: 32 bytes/Output: 32 bytes |
| IP address | 0.0.0.0 to 255.255.255.255 (Set by a parameter) |
| Subnet mask | 0.0.0.0 to 255.255.255.255 (Set by a parameter) |
| Default gateway | 0.0.0.0 to 255.255.255.255 (Set by a parameter) |
| RPI (Packet interval) | 10 msec to 1,000 msec |
| Connection cable | EtherNet/IP compliant cable (CAT5 or higher twisted pair cable (double shield with aluminum tape and braid) is recommended.) |
| Monitor function | Present position within 1 rotation (degree, pulse), position deviation amount, program No., electronic thermal, rotation speed, point table No., torque load factor, acceleration, alarm, parameter, operation mode |

PLC → AX (Input)

| Byte | bit | Signal name | Logic | Determination |
|--------|-----|---|----------|---------------|
| 0 | 0 | Program No. selection input (Bit 0) | Positive | Level |
| | 1 | Program No. selection input (Bit 1) | Positive | Level |
| | 2 | Program No. selection input (Bit 2) | Positive | Level |
| | 3 | Program No. selection input (Bit 3) | Positive | Level |
| | 4 | Program No. setting 2nd digit input/ Program No. selection input (Bit 4) | Positive | Edge |
| | 5 | Program No. setting 1st digit input/ Program No. selection input (Bit 5) | Positive | Edge |
| | 6 | Reset input | Positive | Edge |
| | 7 | Origin return directive input | Positive | Edge |
| 1 | 0 | Start input | Positive | Edge |
| | 1 | Servo on input/ Program stop input | Positive | Level |
| | 2 | Ready return input/Continuous rotation stop input | Positive | Edge |
| | 3 | Answer input/Position deviation counter reset input | Positive | Edge |
| | 4 | Emergency stop input | Negative | Level |
| | 5 | Brake release input | Positive | Level |
| | 6 | Job operation input (CW direction) | Positive | Edge |
| | 7 | Job operation input (CCW direction) | Positive | Edge |
| 2 | 0 | Unusable/Travel unit selection input (Bit 0) | Positive | Level |
| | 1 | Unusable/Travel unit selection input (Bit 1) | Positive | Level |
| | 2 | Unusable/Travel speed unit selection input | Positive | Level |
| | 3 | Operation by table, Operation by data input switching input | Positive | Level |
| 4 to 7 | - | Unusable | | |
| 3 | 0 | Monitor output execution request | Positive | Level |
| | 1 | Command code execution request | Positive | Edge |
| 2 to 7 | - | Unusable | | |
| 4 | 0 | Monitor code 1 | | |
| 10 | 0 | Monitor code 2 | | |
| 13 | 0 | Monitor code 3 | | |
| 21 | 0 | Command code | | |
| 25 | 0 | Write data/A code or P code | | |
| 29 | 0 | Data setting/F code | | |


I/O signal

AX (Output) → PLC

| Byte | bit | Signal name | Logic |
|--------|-----|--|----------|
| 0 | 0 | M code output (Bit 0) | Positive |
| | 1 | M code output (Bit 1) | Positive |
| | 2 | M code output (Bit 2) | Positive |
| | 3 | M code output (Bit 3) | Positive |
| | 4 | M code output (Bit 4) | Positive |
| | 5 | M code output (Bit 5) | Positive |
| | 6 | M code output (Bit 6) | Positive |
| | 7 | M code output (Bit 7) | Positive |
| 1 | 0 | Imposition output | Positive |
| | 1 | Positioning completion output | Positive |
| | 2 | Start input wait output | Positive |
| | 3 | Alarm output 1 | Negative |
| | 4 | Alarm output 2 | Negative |
| | 5 | Output 1 during indexing/Origin position output | Positive |
| | 6 | Output 2 during indexing/Servo state output | Positive |
| | 7 | Ready output | Positive |
| 2 | 0 | Segment position strobe output | Positive |
| | 1 | M code strobe output | Positive |
| 2 to 7 | - | Unusable | |
| 3 | 0 | Monitoring | Positive |
| 4 | 1 | Command code execution completed | Positive |
| 2 to 7 | - | Unusable | |
| 5 | - | Unusable | |
| 6 | - | Unusable | |
| 7 | - | Unusable | |
| 8 | - | | |
| 9 | - | Monitor data 1 | |
| 10 | - | | |
| 11 | - | | |
| 12 | - | Monitor data 2 | |
| 13 | - | | |
| 14 | - | | |
| 15 | - | Monitor data 3 | |
| 16 | - | | |
| 17 | - | | |
| 18 | - | | |
| 19 | - | Response code | |
| 20 | - | | |
| 21 | - | | |
| 22 | - | | |
| 23 | - | | |
| 24 | - | | |
| 25 | - | Read data | |
| 26 | - | | |
| 27 | - | | |
| 28 | - | | |
| 29 | - | Unusable | |
| 30 | - | | |
| 31 | - | | |

| | |
|-----------------|-----------------|
| AX6000M | Actuator |
| AX9000MU | Drivers |
| AX1000T | Actuator |
| AX2000T | Actuator |
| AX4000T | Actuator |
| AX9000TS/TH | Drivers |
| AX0180 | Dialog terminal |
| model No. table | Related parts |

TB3 Input circuit specifications (Machine stops)

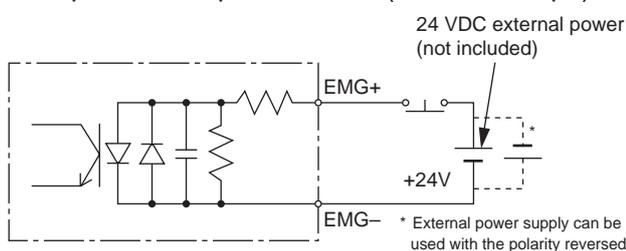

Rated voltage 24 V ±10%, rated current 5 mA or less

Safety precautions




- Reserve a sufficient distance between the communication cable and power cable (motor cable, power supply cable, etc.).
- Placing the communication cable and power cable close to each other or bundling these cables makes communication unstable due to noise, possibly resulting in a communication error or retry.
- For details on the installation of the communication cable, refer to the EtherNet/IP installation manuals.

TS/TH driver




Dimensions

● TS driver

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

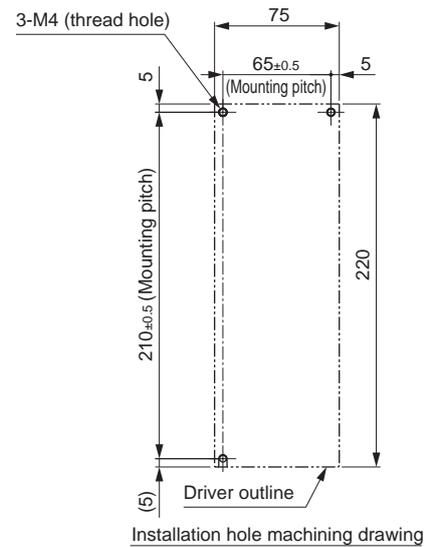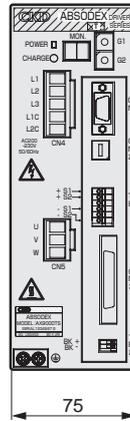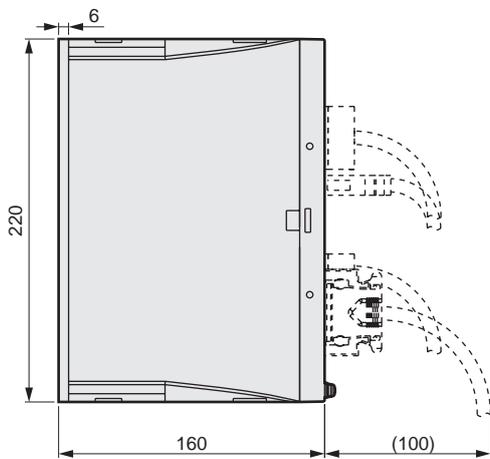

● TH driver

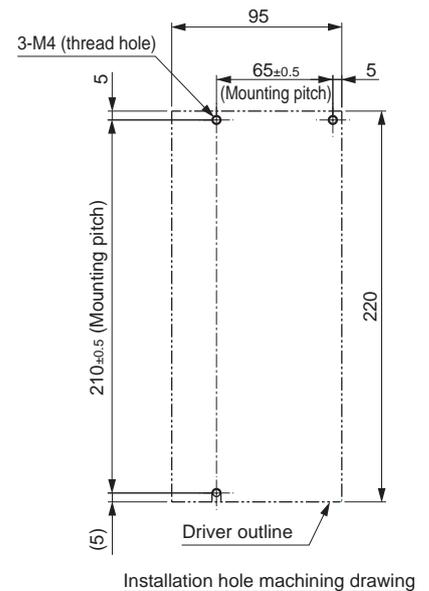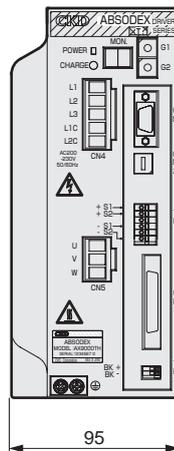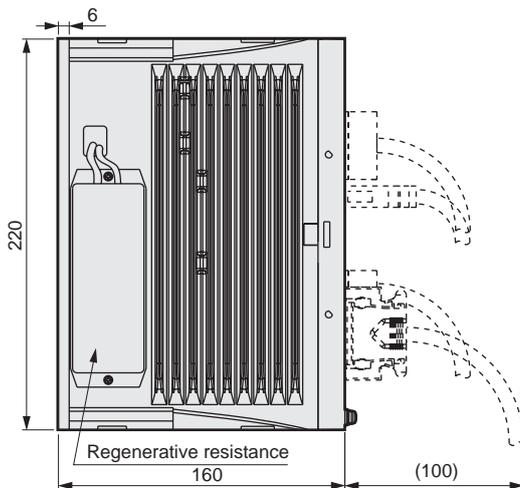


Accessories supplied with the driver

| Model No. | Specifications | CN3 Connector | Power supply connector (CN4) | Motor cable connector (CN5) |
|----------------------------|--------------------|---|----------------------------------|----------------------------------|
| AX9000TS-U0 AX9000TH-U0 | Parallel I/O (NPN) | 10150-3000PE (Plug) 10350-52A0-008 (Shell) Sumitomo 3M Ltd. | PC4/5-ST-7.62 Phoenix Contact | PC4/3-ST-7.62 Phoenix Contact |
| AX9000TS-U1 AX9000TH-U1 | Parallel I/O (PNP) | | | |
| AX9000TS-U2 AX9000TH-U2 | CC-Link | BLZP5.08HC/05/180F AU OR BX Weidmüller | | |
| AX9000TS-U3 AX9000TH-U3 | PROFIBUS-DP | Not attached | | |
| AX9000TS-U4 AX9000TH-U4 | DeviceNet | MSTB2.5/5-STF-5.08AUM Phoenix Contact | | |
| AX9000TS-U5 AX9000TH-U5 | EtherCAT | Not attached | | |
| AX9000TS-U6 AX9000TH-U6 | EtherNet/IP | Not attached | | |


For additional orders of parts, refer to the parts model No. table.

Installation Dimension

● TS driver

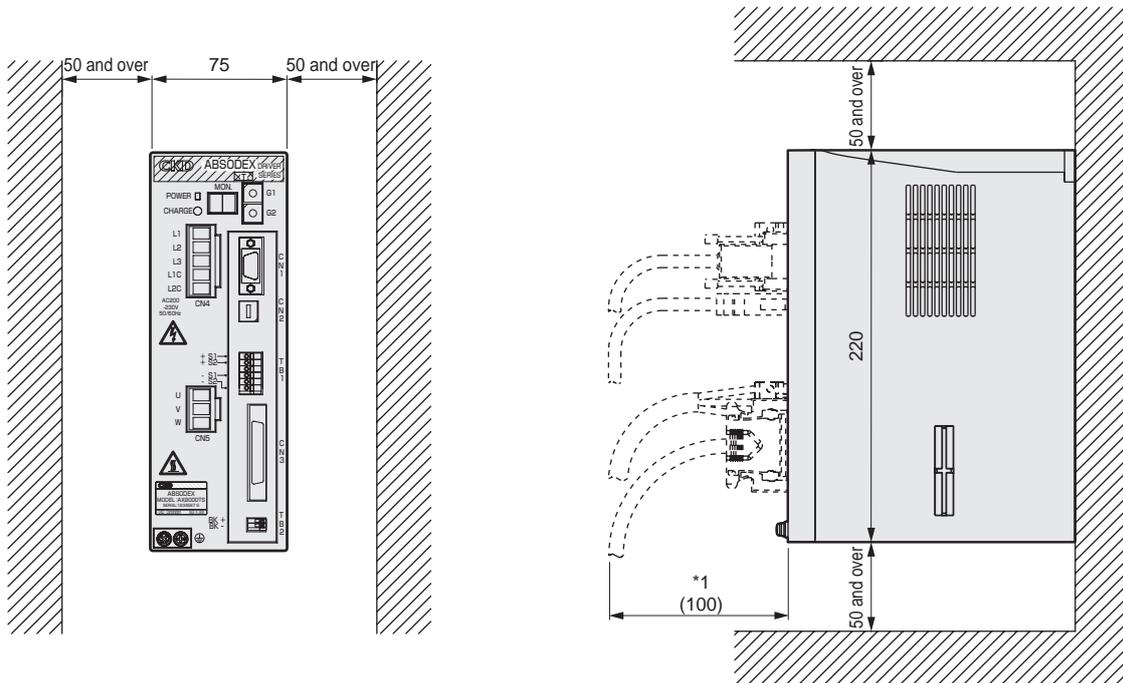

● TH driver

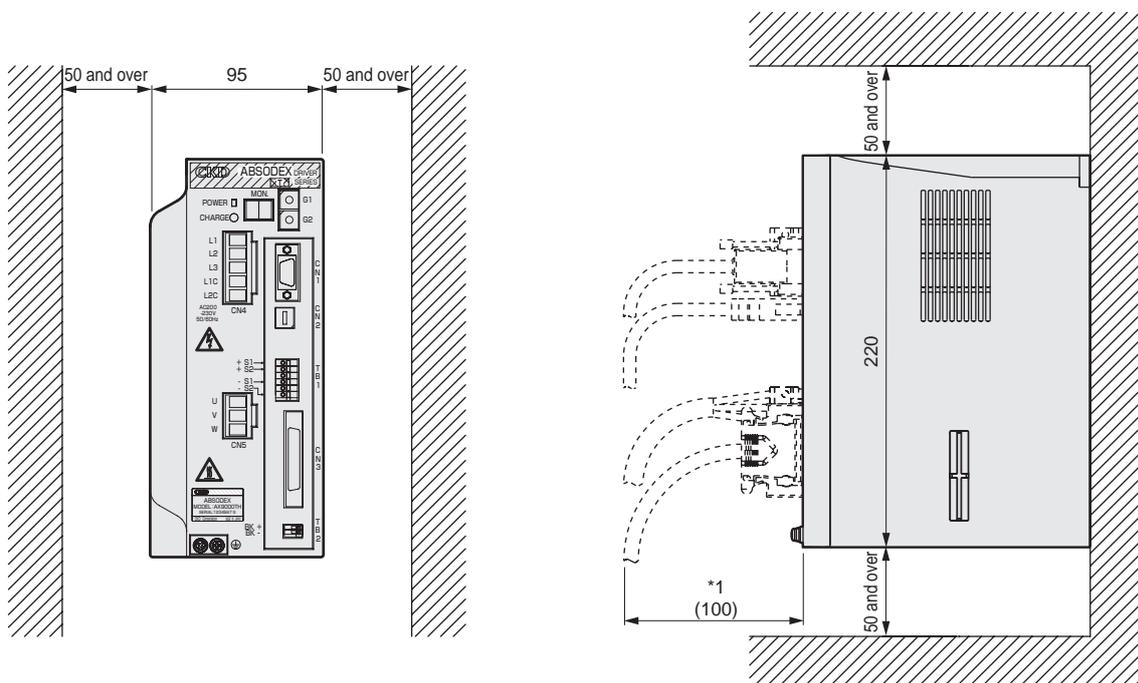

*1) Determine the dimension with extra allowance according to a cable you want to use.

Safety precautions

- The ABSODEX driver does not have a dust-proof/waterproof structure. To prevent dust, water, oil or other substances from entering the driver, provide protection according to the working environment.
- Install the ABSODEX driver away from other devices, walls or other structures by 50 mm or more from the top, bottom and sides. When heat is generated from other drivers or devices, check that the ambient temperature does not exceed 50°C.


| | | | | | | | |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|
| Actuator AX6000M | Drivers AX9000MU | Actuator AX1000T | Actuator AX2000T | Actuator AX4000T | Drivers AX9000TS/TH | Dialog terminal AX0180 | Related parts model No. table |
|---------------------|---------------------|---------------------|---------------------|---------------------|------------------------|---------------------------|----------------------------------|

TS/TH driver


Panel Details

● Parallel I/O (NPN, PNP)


- For 200 VAC

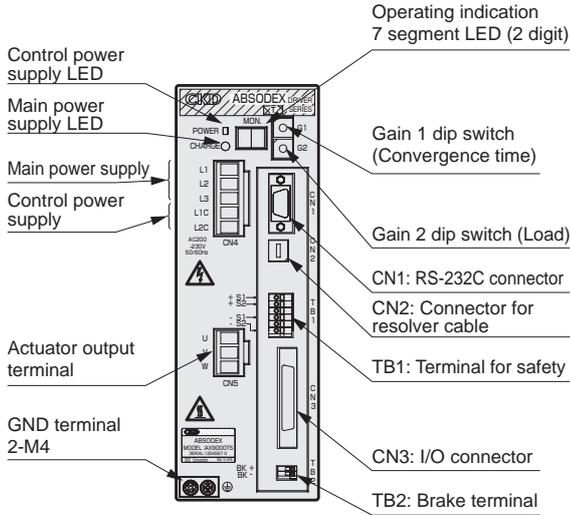


- For 100 VAC

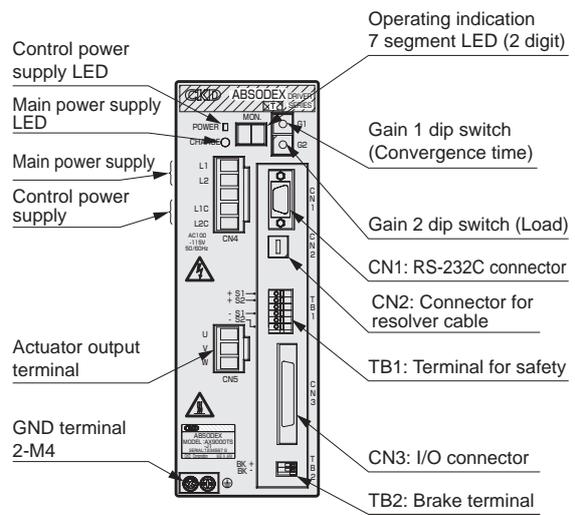


● CC-Link

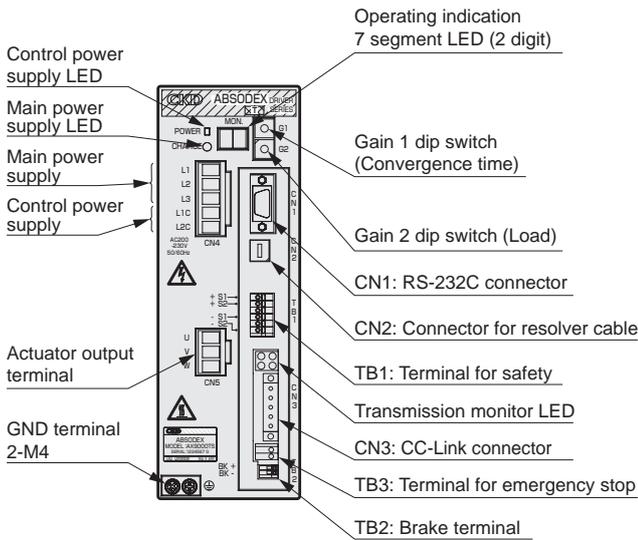


● PROFIBUS-DP

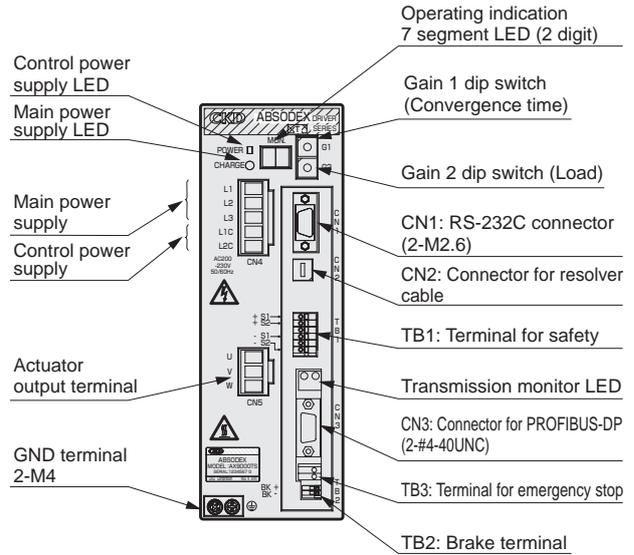

● DeviceNet

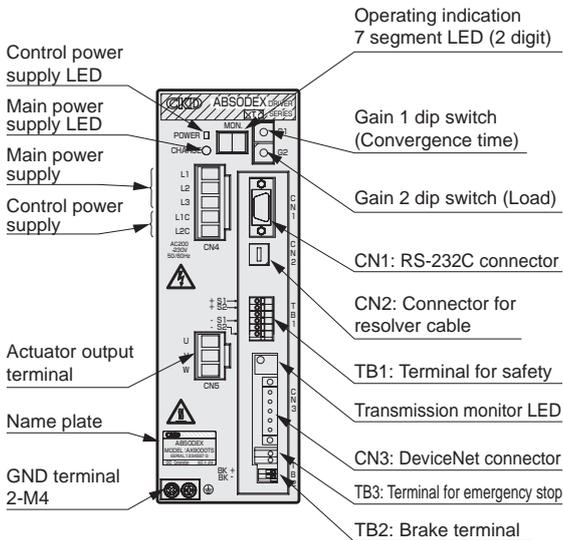


● EtherCAT

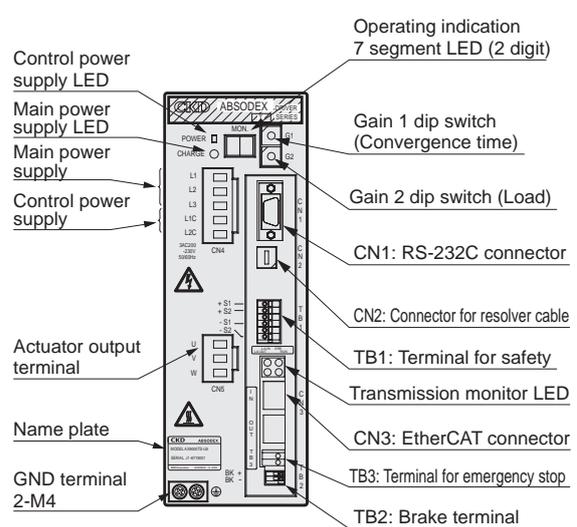

Panel Details

● EtherNet/IP

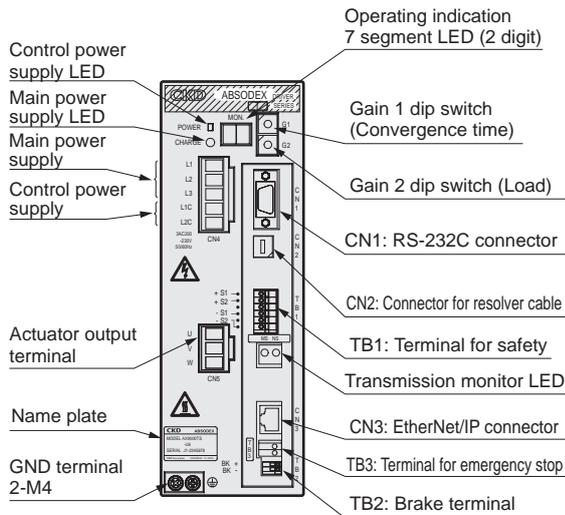

Cable Specifications

Cable dimensions

| Cable dimensions | Product name/model No. | Cable's min. bending radius |
|--|--------------------------------------|-----------------------------|
| <p>● AX1000T</p> <p>Actuator side: Resolver cable (21 mm max diameter), Motor cable (45 mm max diameter). Driver side: Resolver cable (43 mm), Motor cable (100 mm). Cable length L.</p> | Resolver cable AX-CBLR5-DM□□ (*1) | 60 mm |
| | Motor cable AX-CBLM5-DM□□ (*1) | 110 mm |
| <p>● AX2000T, AX4000T</p> <p>Actuator side: Resolver cable (14, 16, 22 mm), Motor cable (15 mm). Driver side: Resolver cable (43 mm), Motor cable (100 mm). Cable length L.</p> | Resolver cable AX-CBLR6-DM□□ (*1) | 60 mm |
| | Motor cable AX-CBLM6-DM□□ (*1) | 110 mm |

*1) □□ represents the cable length.

! Safety precautions

- Connect the correct motor cable and driver by checking the mark tube of the cable and the display of the driver.
- For uses where the cable is repeatedly bent, fix the cable sheath part near the connector of the actuator body.
- For the AX4009T and AX2000T Series, the lead-out cable of the actuator section is not movable. Make sure to fix the cable in the connector section to prevent the cable from moving. Do not pull the lead-out cable to lift the unit or do not apply an excessive force to the cable. Otherwise, malfunction, an alarm, damage of the connector part, or disconnection may result.
- When connecting the cable, fully insert the connector. Also, tighten the connector mounting screws and fix screws securely.
- Do not disconnect, extend, or make other modifications to the cable. Such modifications may cause failure or malfunction.
- For the cable length L, refer to the cable length shown in the How to order.

| |
|----------------------------------|
| Actuator AX6000M |
| Drivers AX9000MU |
| Actuator AX1000T |
| Actuator AX2000T |
| Actuator AX4000T |
| Drivers AX9000TS/TH |
| Dialog terminal AX0180 |
| Related parts model No. table |



ABSODEX Handy Terminal

AX0180

● TS/TH driver



Features

- (1) Programming is easy.
For an equal segment program, you can easily write a program by answering the questions interactively from the handy terminal.
- (2) No dedicated power supply is required.
The power is supplied from ABSODEX.
- (3) Backup is available.
The programs and parameters can be stored, and programs can be copied.
- (4) Available also for conventional models.
With the S/GS/H/GH/WGH type drivers, this product operates in the same way as the conventional handy terminal (AX0170H).


Specifications

| Item | AX0180 |
|-------------------------------|---|
| Operation mode | Edit, Display, Parameter, Operation, and Copy modes |
| Program capacity | Equal segment or NC program 2,000 characters (One) |
| Program No. | Equal segment program: Program No. 0 to 999 |
| Display | 16 characters x 2 digits (LCD display) |
| Input keys | 17 keys (Stop key: 1, Control key: 5 characters, Number key: 11) |
| Backup | Super capacitor (about 3 hours) |
| Power supply | Supplied by the ABSODEX driver |
| Cable length | 2 m |
| Operating ambient temperature | 0 to 50°C |
| Operating ambient humidity | 20 to 90% (no condensation) |
| Storage ambient temperature | -20 to 80°C |
| Storage ambient humidity | 20 to 90% (no condensation) |
| Atmosphere | No corrosive gas or dust |
| Weight | Body only About 140 g |


* For the English version, messages are displayed in English. The characters on the operation panel are the same as those of the Japanese version.

Dimensions

● Handy terminal

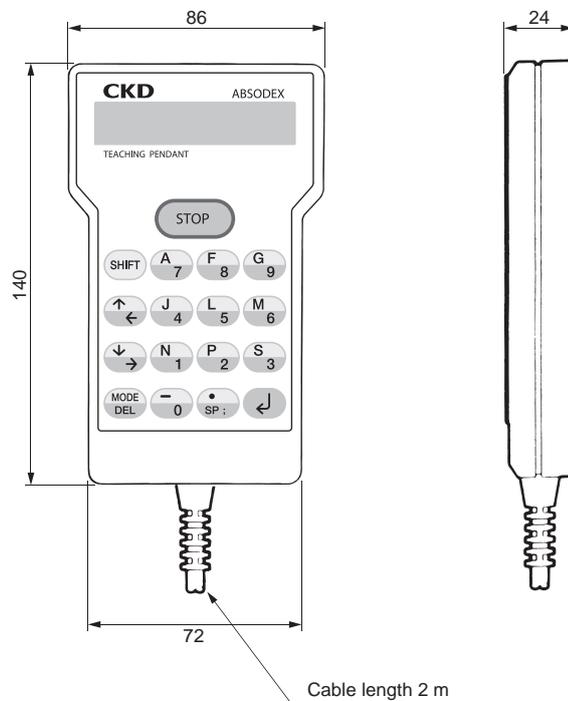


How to order

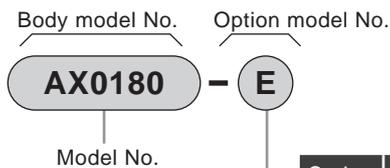

| Code | Description |
|-------|-----------------------------|
| Blank | Standard (Japanese version) |
| E | English version |

Handy terminal

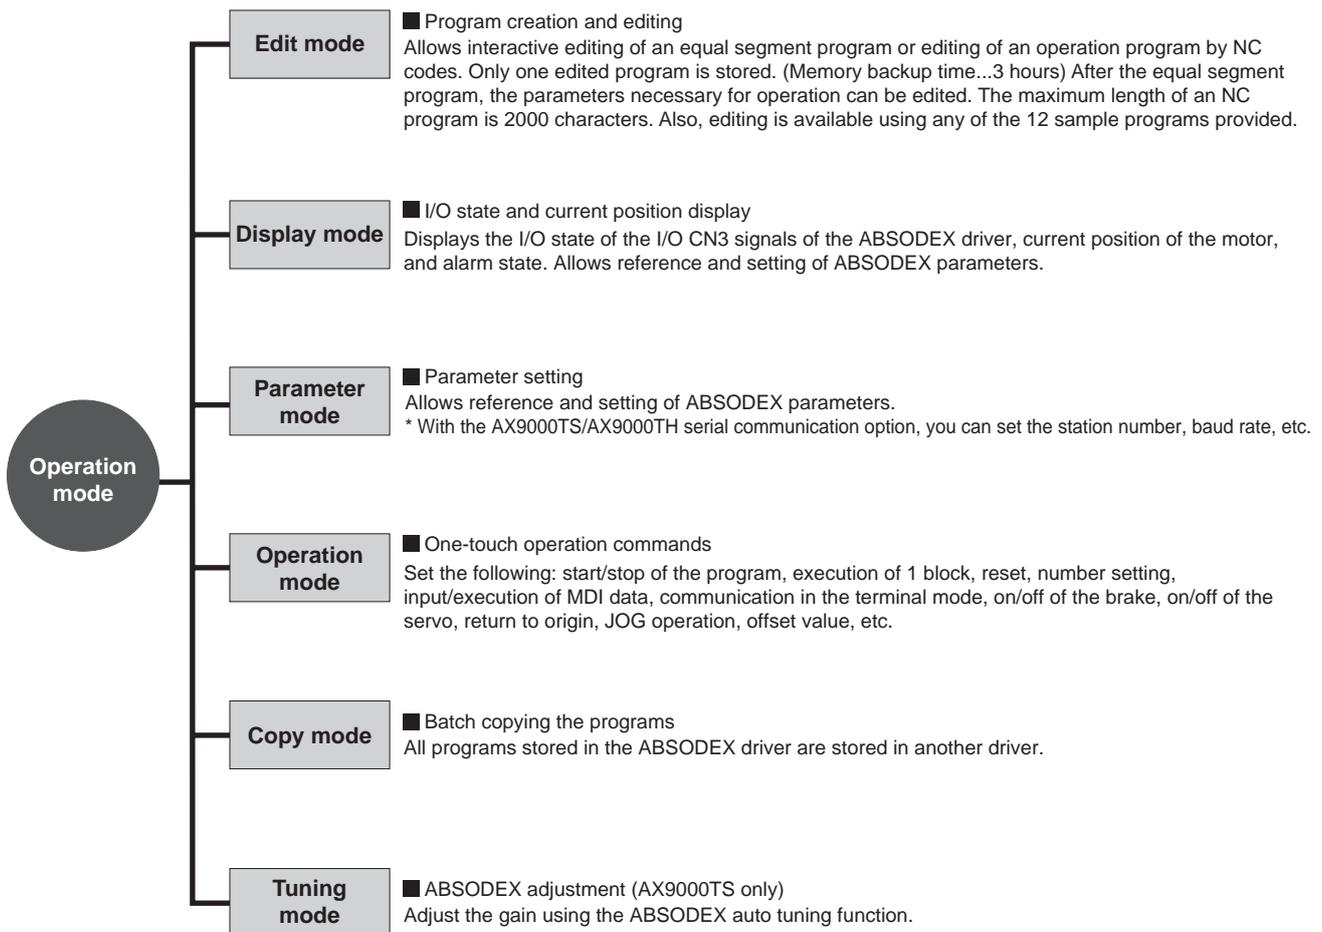

Interactive programming

You can easily write a program by inputting values for items as follows:

[Example of input values for a program]

| | |
|------------------------|---------------------------------------|
| New | Program No. [0 to 999] |
| Origin return position | 1. Origin 2. Indexing |
| Return direction | 1. CW 2. CCW 3. Shortcut |
| Return speed | [1.0 to 20.0] rpm |
| Number of segments | [1 to 255] |
| Travel time | [0.01 to 100] seconds |
| Rotation direction | 1. CW 2. CCW |
| Stop processing | 1. Wait for start 2. Dwell |
| Brake | 1. Using the product 2. Vacant |
| Delay timer | [0.01 to 99.99] seconds |
| M Cord | 1. M Cord 2. Segmentation position |

When you want to...

| | | | |
|---|---|-----------------------|--|
| Make a trial run of ABSODEX! | ⇒ | Edit mode | 12 sample programs are provided. You can try them when making adjustment. |
| Write an ABSODEX program and store it into ABSODEX! | ⇒ | Edit mode | You can input programming values and store the program by a simple procedure. |
| Run a program stored in ABSODEX! | ⇒ | Operation mode | You can easily start a program by specifying the program No. |
| Make use of the characteristics of the cam curve! | ⇒ | Parameter mode | 5 types of cam curves are provided. Driving operation taking advantages of the properties is one touch away. |
| Check the ON/OFF of I/O! | ⇒ | Display mode | You can display the I/O status. |

| | |
|-----------------|-----------------|
| Actuator | AX6000M |
| Drivers | AX9000MU |
| Actuator | AX1000T |
| Actuator | AX2000T |
| Actuator | AX4000T |
| Drivers | AX9000TS/TH |
| Dialog terminal | AX0180 |
| Related parts | model No. table |

How to order ABSODEX related parts

● Related parts

| Part name | Compatible model No. | Model No. |
|------------------------|----------------------|--------------|
| PC communication cable | AX Series | AX-RS232C-9P |

*1) The PC communication cable is 2 meters long.

*2) The "AX Tools" configuration tool is available (free of charge). The latest version can be downloaded from the following URL.
<https://www.ckd.co.jp/kiki/en/>

● Mounting base

| Compatible model No. | Model No. |
|----------------------|-------------------|
| AX1022T | AX-AX1022-BASE-BS |
| AX1045T | AX-AX1045-BASE-BS |
| AX1075T | AX-AX1075-BASE-BS |
| AX1150T | AX-AX1150-BASE-BS |
| AX1210T | AX-AX1210-BASE-BS |
| AX2006T | AX-AX2006-BASE-BS |
| AX2012T | AX-AX2012-BASE-BS |
| AX2018T | AX-AX2018-BASE-BS |

| Compatible model No. | Model No. |
|----------------------|-------------------|
| AX4022T | AX-AX4022-BASE-BS |
| AX4045T | AX-AX4045-BASE-BS |
| AX4075T | AX-AX4075-BASE-BS |
| AX4150T | AX-AX4150-BASE-BS |
| AX4300T | AX-AX4300-BASE-BS |
| AX4500T | AX-AX4500-BASE-BS |
| AX6001M, AX6003M | AX-AX6000-BASE-BS |

● Noise filter

| Part name | Compatible model No. | Model No. |
|---|----------------------|-----------------------|
| Noise filter for power supply (Three phase/Single phase 200-230 VAC) | AX Series | AX-NSF-3SUP-EF10-ER-6 |
| Noise filter for power supply (single phase 250 VAC/15A *3) | AX Series | AX-NSF-NF2015A-OD |
| Ferrite core for motor cable | AX Series | AX-NSF-RC5060ZZ |
| Clamp filter for power cable (small 2-piece set) | AX6000M Series | AX-NSF-ZCAT2035-0930A |
| Clamp filter for resolver cable (1 piece each for large and small size) | AX6000M Series | AX-NSF-FC01-SET |

(*3) With 250 VAC It can also be used with 24 VDC.

(*4) To make these products compliant with EU standards and CE marking or UL standards, the user is required to provide accessories such as a circuit breaker and FG clamp. For details, refer to the instruction manual or (technical data).

● Other components

| Part name | Compatible model No. | Model No. |
|---|----------------------|-------------------------|
| Power supply connector (CN4) | TS/TH Series | AX-CONNECTOR-PC45 |
| Motor cable connector (CN5) | TS/TH Series | AX-CONNECTOR-PC43 |
| Power supply connector protective cover (CN4) | TS/TH Series | AX-COVER-KGG-PC45 |
| Motor cable connector protective cover (CN5) | TS/TH Series | AX-COVER-KGG-PC43 |
| I/O connector (CN3: For Parallel I/O) | AX Series (-U0, U1) | AX-CONNECTOR-MDR |
| I/O connector (CN3: For CC-Link) | AX Series (-U2) | AX-CONNECTOR-BLZ5 |
| I/O connector (CN3: For DeviceNet) | AX Series (-U4) | AX-CONNECTOR-MSTB |
| Protection element for electromagnetic brake | AX Series (-EB) | AX-PARTS-TNR20V121K |
| Power supply connector set (with open tool) | AX9000MU Series | AX-CONNECTOR-04JFAT-KIT |

* The parts listed on this page can be purchased from CKD.

Glossary


Index accuracy

The index accuracy of ABSODEX is the difference between the target position set by an NC program and the actual stop position.

This target position is the angle (seconds) from the reference station (origin return position).

As shown in the right figure, the index accuracy is calculated using the maximum value and minimum value of the differences between the target positions and actual stop positions. These positions are expressed with $\pm x$ seconds and the width as shown in the figure. For angle measurement, a high-precision encoder is used.

Index accuracy measurement example

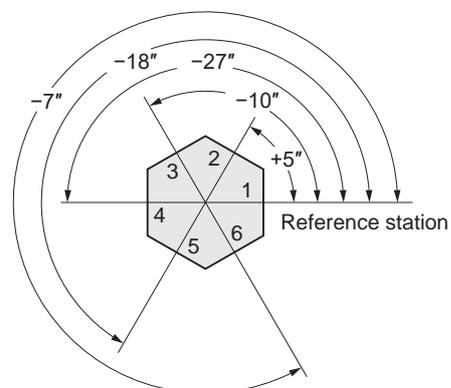

| Measurement positions | Measurements |
|-----------------------|--------------|
| 1 | 0 |
| 2 | +5" |
| 3 | -10" |
| 4 | -27" |
| 5 | -18" |
| 6 | -7" |

Index accuracy ± 16

Repeatability


The repeatability expressed by angle (seconds) is the maximum value of angle irregularities of the repeat stop positions when reciprocating operation is performed for a certain target position under the same conditions.

Depending on the accuracy characteristics required by the equipment, it is necessary to differentiate repeat accuracy and index accuracy.

*Second: A unit (degree/minute/second) for expressing an angle.
1 degree = 60 minutes = 3600 seconds

Output shaft runout


This the runout accuracy of the inlay side on the table mounting side.

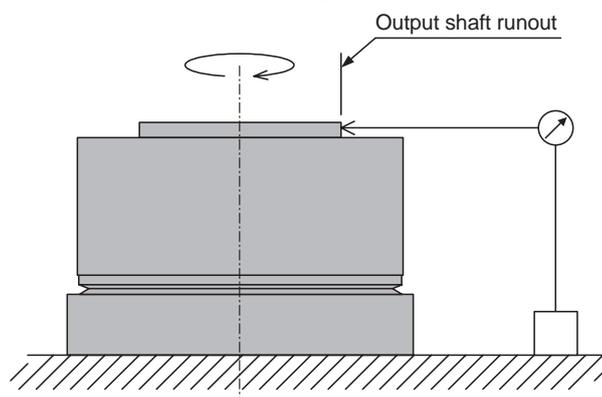

Output shaft surface runout

This the runout accuracy of the table mounting side.

* Measured at the periphery of the screw hole for mounting the table.

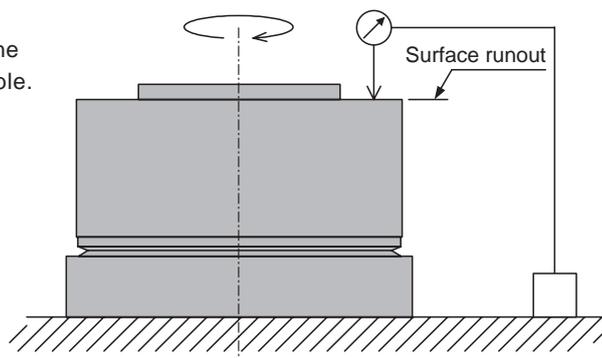

Selection guide

| Units and symbols of operation conditions | |
|---|------------------------------|
| Load moment of inertia (kg·m ²) | J |
| Travel angle (°) | ψ |
| Travel time (s) | t ₁ |
| Cycle time (s) | t ₀ |
| Load friction torque (N·m) | T _F |
| Work torque (N·m) | T _W |
| Cam curve | Select from (MS, MC, MT, TR) |

1. Moment of inertia of load

Calculate the moment of inertia of load and temporarily select an actuator that can allow the moment of inertia.

2. Rotation speed

The max. rotation speed N_{max} is obtained by the formula:


$$N_{\max} = V_m \cdot \frac{\psi}{6 \cdot t_1} \quad (\text{rpm})$$

Where ψ and t₁ represent travel angle (°) and travel time (s), respectively. V_m is a constant determined by the cam curve.

Check that the value of N_{max} does not exceed the max. rotation speed defined in the actuator specifications.

[Precautions]

The actual travel time is the directive travel time of the ABSODEX plus the stabilization time.

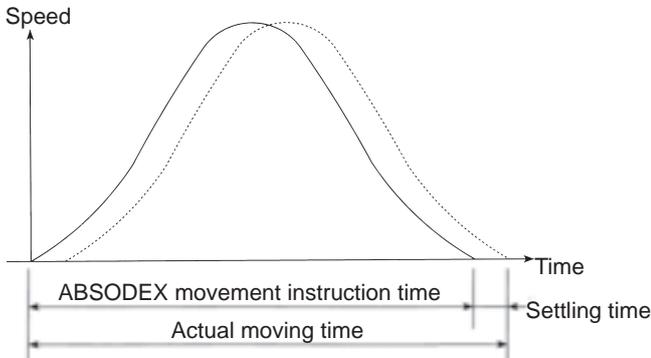

Though the stabilization time depends on working conditions, it is approximately between 0.025 and 0.2 seconds. For the travel time t₁ in model selection, use the directive travel time of ABSODEX. Also, for setting the travel time with an NC program, use the directive travel time of ABSODEX.

(Note) The friction torque works on the output shaft by the bearing, sliding surface, and other friction. The friction torque can be obtained by the following relational expression:

$$T_f = \mu \cdot F_f \cdot R_f \quad (\text{N} \cdot \text{m})$$

$$F_f = m \cdot g$$

where μ: Coefficient of friction

| Rolling friction | Sliding friction |
|------------------|------------------|
| μ = 0.03 to 0.05 | μ = 0.1 to 0.3 |

F_f: Force working on the sliding surface, bearing, etc. (N)

R_f: Average friction radius (m)

m: Weight (kg)

g: Gravity acceleration (m/s²)

3. Load torque

a) The maximum load torque is obtained with the following formula.

$$T_m = [A_m \cdot (J+J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} + T_F + T_W] \cdot f_c + T_{MF}$$

b) The effective value of the load torque is obtained with the following formula.

$$T_{\text{rms}} = \sqrt{\frac{t_1}{t_0} \cdot [r \cdot A_m \cdot (J+J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} \cdot f_c]^2 + (T_F \cdot f_c + T_W \cdot f_c + T_{MF})^2}$$

The values in the following table are applied to V_m, A_m and r.

| Cam curve | V _m | A _m | r |
|-----------|----------------|----------------|-------|
| MS | 1.76 | 5.53 | 0.707 |
| MC | 1.28 | 8.01 | 0.500 |
| MT | 2.00 | 4.89 | 0.866 |
| TR | 2.18 | 6.17 | 0.773 |

J_M, T_{MF}, f_c are as follows:

J_M: Output shaft moment of inertia (kg·m²)

T_{MF}: Output shaft friction torque (N·m)

f_c: Used factor (For normal use: f_c = 1.5)

For the temporarily selected actuator,

Max. load torque < Max. output torque

Effective value of load torque < Continuous output torque

If either of the above conditions is not met, re-calculate the load torque with a larger actuator.

Note) There is a torque limit region where the max. torque decreases at the time of high-speed rotation.

For use in the torque limit region, use the mode selection software to determine the availability of the device.

(Note) The work torque indicates an exterior load, expressed as torque, working as the load on the ABSODEX output shaft.

The work torque T_w is calculated by the following formula:

$$T_w = F_w \times R_w \quad (\text{N} \cdot \text{m})$$

F_w (N): Necessary force for work

R_w (m): Working radius

(Example)

For the body on its side (the output shaft in the horizontal direction), the table, workpiece, jigs and so forth are work torques.

4. Regenerative power

For the AX9000TS/AX9000TH driver, calculate the regenerative power using the following simple formula and determine the availability.

● For AX9000TS drivers

The AX9000TS driver does not have a built-in regenerative resistor. Therefore, check that the value of the regenerative energy calculated by the simple formula below does not exceed energy chargeable with a capacitor (table below).

$$E = \left(\frac{V_m \cdot \psi \cdot \pi}{t_1 \cdot 180} \right)^2 \cdot \frac{(J+J_M)}{2} \text{ (J)}$$

| Power supply specification | Processable regenerative energy (J) | Remarks |
|----------------------------|-------------------------------------|---|
| 200 VAC | 17.2 | Value when the input voltage of the main power is 200 VAC |
| 100 VAC(-J1) | 17.2 | Value when the input voltage of the main power is 100 VAC |

● For AX9000TH drivers

AX9000TH drivers have limitation on the consumption capability of the regenerative power in the driver.

The value is obtained by the following simple formula:

$$W = \left(\frac{V_m \cdot \psi \cdot \pi}{t_1 \cdot 180} \right)^2 \cdot \frac{(J+J_M)}{2 \cdot t_0} \text{ (W)}$$

$$W \leq 40$$

If this condition is met, re-consider the operation conditions and load conditions.

| [Working conditions] | [Operating conditions] |
|---|---|
| Table radius : R = 0.4 (m) | Travel angle : $\psi = 90$ (°) |
| Table weight : Wt = 79 (kg) | Travel time : $t_1 = 0.8$ (s) |
| Radius of jig rotation : Re = 0.325 (m) | Cycle time : $t_0 = 4$ (s) |
| Jig weight : Wj = 10 (kg/piece) (Including the workpiece weight) | Load friction torque : $T_F = 0$ (N·m) |
| Number of jigs : N = 4 | Work torque : $T_W = 0$ (N·m) |
| | Output shaft friction torque : T_{MF} (N·m) According to the actuator specifications |
| | Cam curve : MS (modified sine) |

STEP 1

Calculating moment of inertia

| | | |
|-----------------------------|--|----------------------|
| a) Table | $J_1 = \frac{W_t \times R^2}{2} = \frac{79 \times 0.4^2}{2} = 6.32$ | (kg·m ²) |
| b) Jig, workpiece | $J_2 = N \times W_j \times R_e^2 = 4 \times 10 \times 0.325^2 = 4.225$ | (kg·m ²) |
| c) Sum of moment of inertia | $J = J_1 + J_2 = 6.32 + 4.225 = 10.545$ | (kg·m ²) |

STEP 2

Max. rotation speed

| |
|--|
| $N_{\max} = V_m \cdot \frac{\psi}{6 \cdot t_1} = 1.76 \times \frac{90}{6 \times 0.8} = 33$ (rpm) |
| Check that N_{\max} does not exceed the maximum rotation speed of ABSODEX. |

STEP 3

Load torque

| |
|--|
| At first, perform calculation for the smallest model that allows the moment of inertia of load. The allowed moment of inertia of AX4300T is 180 (kg·m ²), which means that this load is allowed. |
| Max. load torque |
| $T_m = [A_m \cdot (J + J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} + T_F + T_W] \cdot f_c + T_{MF}$ |
| $= [5.53 \times (10.545 + 0.326) \times \frac{90 \times \pi}{180 \cdot 0.8^2} + 0 + 0] \times 1.5 + 10$ |
| $= 231.3$ (N·m) |
| Effective value of load torque |
| $T_{rms} = \sqrt{\frac{t_1}{t_0} \cdot [r \cdot A_m \cdot (J + J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} \cdot f_c]^2 + (T_F \cdot f_c + T_W \cdot f_c + T_{MF})^2}$ |
| $T_{rms} = \sqrt{\frac{0.8}{4} \times [0.707 \times 5.53 \times 10.871 \times \frac{90 \times \pi}{180 \cdot 0.8^2} \times 1.5]^2 + (0 \times 1.5 + 0 \times 1.5 + 10)^2}$ |
| $= 70.7$ (N·m) |

STEP 4

Regenerative power

| |
|--|
| $W = \left(\frac{V_m \cdot \psi \cdot \pi}{t_1 \cdot 180} \right)^2 \cdot \frac{(J + J_M)}{2 \cdot t_0}$ |
| $= \left(\frac{1.76 \times 90 \times \pi}{0.8 \times 180} \right)^2 \times \frac{10.871}{2 \times 4} = 16.23$ (W) |
| $W \leq 40$ (W) |

STEP 5

Selection guide

| | |
|---|--|
| Consider whether the temporarily selected AX4300T is available. | |
| Sum of the moment of inertia of load | $10.545 \leq 180$ (kg·m ²) |
| Max. rotation speed | $33 \leq 100$ (rpm) |
| Max. load torque | $231.3 \leq 300$ (N·m) |
| Effective value of load torque | $70.7 \leq 100$ (N·m) |
| Regenerative power | $16.23 \leq 40$ (J) |
| Under these conditions, AX4300T is available. | |

| [Working conditions] | [Operating conditions] |
|---------------------------------------|--|
| Table radius : R = 0.25 (m) | Travel angle : $\psi = 90$ (°) |
| Table weight : Wt = 10.6 (kg) | Travel time : $t_1 = 0.5$ (s) |
| Radius of jig rotation : Re = 0.2 (m) | Cycle time : $t_0 = 4$ (s) |
| Jig weight : Wj = 2 (kg/piece) | Load friction torque : $T_F = 0$ (N·m) |
| (Including the workpiece weight) | Work torque : $T_W = 0$ (N·m) |
| Number of jigs : N = 4 | Output shaft : T_{MF} (N·m) |
| | friction torque : According to the actuator specifications |
| | Cam curve : MS (modified sine) |

STEP 1

Calculating moment of inertia

| | | |
|-----------------------------|---|----------------------|
| a) Table | $J_1 = \frac{W_t \times R^2}{2} = \frac{10.6 \times 0.25^2}{2} = 0.331$ | (kg·m ²) |
| b) Jig, workpiece | $J_2 = N \times W_j \times R_e^2 = 4 \times 2 \times 0.2^2 = 0.32$ | (kg·m ²) |
| c) Sum of moment of inertia | $J = J_1 + J_2 = 0.331 + 0.32 = 0.651$ | (kg·m ²) |

STEP 2

Max. rotation speed

| | |
|---|-------|
| $N_{max} = V_m \cdot \frac{\psi}{6 \cdot t_1} = 1.76 \times \frac{90}{6 \times 0.5} = 52.8$ | (rpm) |
| Check that N_{max} does not exceed the maximum rotation speed of ABSODEX. | |

STEP 3

Load torque

| | |
|--|--|
| At first, perform calculation for the smallest model that allows the moment of inertia of load. | |
| The allowed moment of inertia of AX7045X is 0.90 (kg·m ²), which means that this load is allowed. | |
| Max. load torque | |
| $T_m = [A_m \cdot (J + J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} + T_F + T_W] \cdot f_c + T_{MF}$ | |
| $= [5.53 \times (0.651 + 0.0254) \times \frac{90 \times \pi}{180 \cdot 0.5^2} + 0 + 0] \times 1.5 + 2.5$ | |
| $= 37.8$ (N·m) | |
| Effective value of load torque | |
| $T_{rms} = \sqrt{\frac{t_1}{t_0} \cdot [r \cdot A_m \cdot (J + J_M) \cdot \frac{\psi \cdot \pi}{180 \cdot t_1^2} \cdot f_c]^2 + (T_F \cdot f_c + T_W \cdot f_c + T_{MF})^2}$ | |
| $T_{rms} = \sqrt{\frac{0.5}{4} \times [0.707 \times 5.53 \times 0.6764 \times \frac{90 \times \pi}{180 \cdot 0.5^2} \times 1.5]^2 + (0 \times 1.5 + 0 \times 1.5 + 2.5)^2}$ | |
| $= 9.2$ (N·m) | |

STEP 4

Regenerative power

| |
|---|
| $E = \left(\frac{V_m \cdot \psi \cdot \pi}{t_1 \cdot 180} \right)^2 \cdot \frac{(J + J_M)}{2} \cdot (J)$ |
| $= \left(\frac{1.76 \times 90 \times \pi}{0.5 \times 180} \right)^2 \times \frac{0.6764}{2} = 10.3$ (J) |
| $E \leq 17.2$ (J) |

STEP 5

Selection guide

| | |
|---|--|
| Consider whether the temporarily selected AX7045X is available. | |
| Sum of the moment of inertia of load | $0.651 \leq 0.90$ (kg·m ²) |
| Max. rotation speed | $52.8 \leq 240$ (rpm) |
| Max. load torque | $37.8 \leq 45$ (N·m) |
| Effective value of load torque | $9.2 \leq 15$ (N·m) |
| Regenerative power | $10.3 \leq 17.2$ (J) |
| With these conditions, AX7045X is available. | |

For model selection for "MC2 curve"


What is MC2 curve?

The MC2 curve is a cam curve for which the constant velocity interval can be freely set by setting the acceleration/deceleration time while there is a constant velocity interval during travel, as is the case with an MC (modified constant) curve.

For an MC (generic term: MCV50) curve, the percentage of the constant velocity interval is 50%.

Note: The setting of the acceleration/deceleration time is 1/2 or less of the travel time. When the setting of the acceleration/deceleration time exceeds 1/2 of the travel time, the cam curve is automatically changed to the MS (modified sine) curve.

The example diagram shows the velocity pattern when the percentage of the constant velocity interval is 75% by setting the acceleration/deceleration time (t_a) to 0.5 seconds for the 4 seconds of the travel time (t_1).

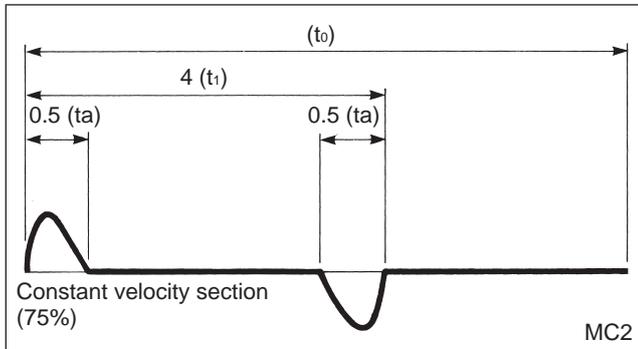

Selection method

For the MC2 curve, the formula below is used to select a model.

| | |
|--------------------------------|------------------------------|
| Travel angle | : ψ (°) |
| Cycle time | : t_0 (s) |
| Travel time | : t_1 (s) |
| Acceleration/deceleration time | : t_a (s) |
| Load moment of inertia | : J (kg·m ²) |
| Output shaft moment of inertia | : J_M (kg·m ²) |
| Friction torque | : T_f (N·m) |
| Work torque | : T_w (N·m) |
| Output shaft friction torque | : T_{MF} (N·m) |

Max. rotation speed: N_{max} (rpm)

$$N_{max} = \frac{\psi}{6(t_1 - 0.863t_a)}$$

Load torque (max. value): T_m (N·m)

$$T_m = \left[5.53 (J+J_M) \cdot \frac{\psi \cdot \left(1 - \frac{t_1 - 2t_a}{t_1 - 0.863t_a}\right) \cdot \pi}{720 \cdot t_a^2} + T_f + T_w \right] \cdot fc + T_{MF}$$

Load torque (effective value): T_{rms} (N·m)

$$T_{rms} = \sqrt{\frac{2t_a}{t_0} \cdot \left[3.91 (J+J_M) \cdot \frac{\psi \cdot \left(1 - \frac{t_1 - 2t_a}{t_1 - 0.863t_a}\right) \cdot \pi}{720 \cdot t_a^2} \cdot fc \right]^2 + [(T_f + T_w) \cdot fc + T_{MF}]^2}$$


For model selection for "Continuous rotation"

What is continuous rotation?

The continuous rotation has the following functions.

1. Continuous rotation : Rotation continues at a constant rotation speed until the continuous rotation stop input is input.
2. Stop at equal segment position : With the equal segment specified, the device stops at the equal segment position by a continuous rotation stop input.

The example diagram shows the velocity pattern where the motor is accelerated at the acceleration time: t_a up to the set rotation speed: N , and then stopped, by a continuous rotation stop input, at the deceleration time: t_d .

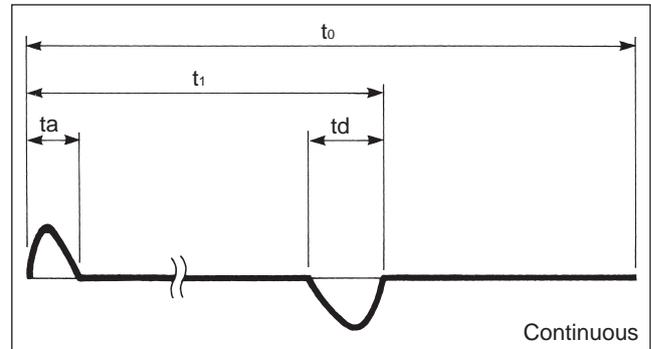

Selection method

For the continuous rotation, the formula below is used to select a model.

| | |
|--------------------------------|------------------------------|
| Rotation speed | : N (rpm) |
| Cycle time | : t_0 (s) |
| Acceleration time | : t_a (s) |
| Deceleration time | : t_d (s) |
| Load moment of inertia | : J (kg·m ²) |
| Output shaft moment of inertia | : J_M (kg·m ²) |
| Friction torque | : T_f (N·m) |
| Work torque | : T_w (N·m) |
| Output shaft friction torque | : T_{MF} (N·m) |

Max. rotation speed: N_{max} (rpm) (*1)

$$N_{max} = N$$

Load torque (max. value): T_m (N·m)

$$T_m = \left[5.53 (J+J_M) \cdot \frac{6.82N \cdot t_a \cdot \pi}{720 \cdot t_a^2} + T_f + T_w \right] \cdot fc + T_{MF}$$

Load torque (effective value): T_{rms} (N·m)

$$T_{rms} = \sqrt{\frac{2t_a}{t_0} \cdot \left[3.91 (J+J_M) \cdot \frac{6.82N \cdot t_a \cdot \pi}{720 \cdot t_a^2} \cdot fc \right]^2 + [(T_f + T_w) \cdot fc + T_{MF}]^2}$$

The formula above is applicable when $t_a \leq t_d$. When $t_a > t_d$, replace t_a with t_d for perform selection.


*1) At the time of continuous rotation, the maximum rotation speed is limited. Use the device according to the actuator specifications.

Formulas of moment of inertia

(m : Weight of object (kg))


● A When rotation center is the same shaft

1. Circular plate (cylinder)

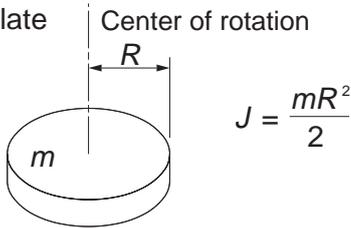


$$J = \frac{mR^2}{2}$$

2. Hollow circular plate (hollow cylinder)

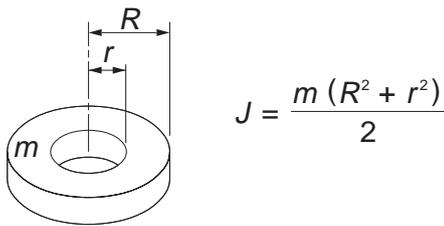


$$J = \frac{m(R^2 + r^2)}{2}$$

3. Cuboid

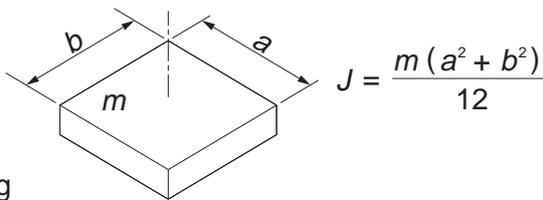


$$J = \frac{m(a^2 + b^2)}{12}$$

4. Ring

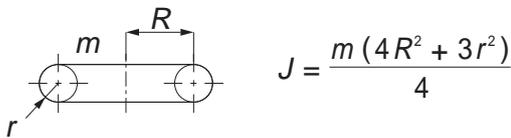


$$J = \frac{m(4R^2 + 3r^2)}{4}$$

5. Cylinder

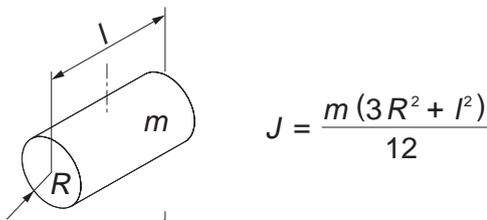

$$J = \frac{m(3R^2 + l^2)}{12}$$


6. Hollow cylinder

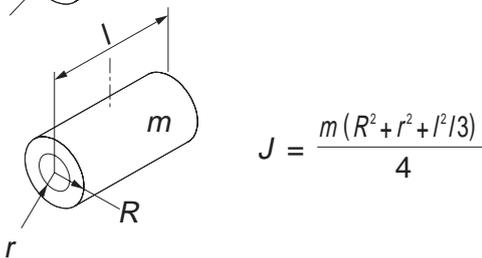

$$J = \frac{m(R^2 + r^2 + l^2/3)}{4}$$


● B When rotation center shafts differ

1. Any shape (if sufficiently small)

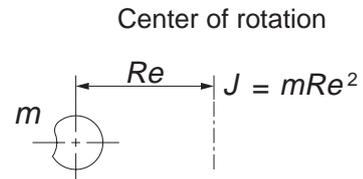


$$J = mRe^2$$

2. Circular plate (cylinder)

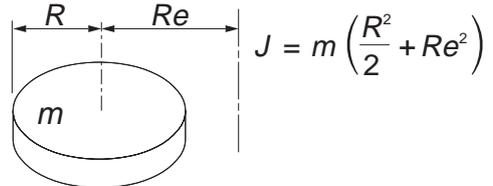


$$J = m\left(\frac{R^2}{2} + Re^2\right)$$

3. Hollow circular plate (hollow cylinder)

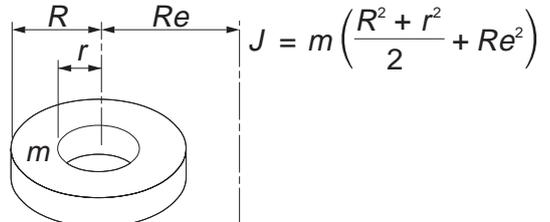


$$J = m\left(\frac{R^2 + r^2}{2} + Re^2\right)$$

4. Cuboid

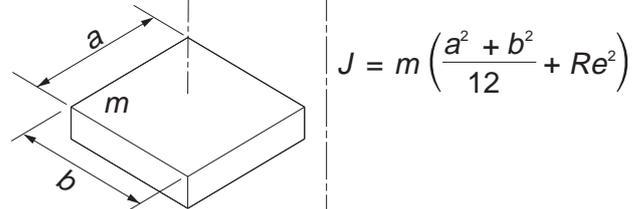


$$J = m\left(\frac{a^2 + b^2}{12} + Re^2\right)$$

5. Cylinder

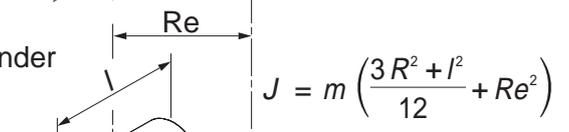


$$J = m\left(\frac{3R^2 + l^2}{12} + Re^2\right)$$

6. Hollow cylinder

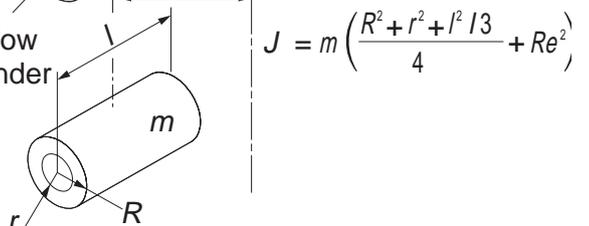

$$J = m\left(\frac{R^2 + r^2 + l^2/3}{4} + Re^2\right)$$

● For conveyor

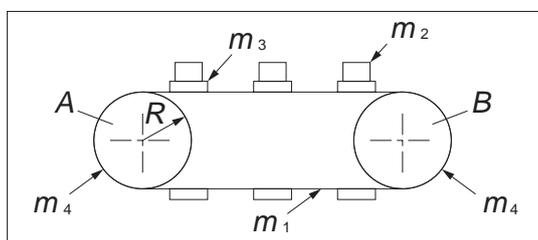

m_1 : Chain weight
 m_2 : Workpiece total weight
 m_3 : Jig (pallet) total weight
 m_4 : Sprocket A (drive) + B total weight
 R : Drive side sprocket radius

$$J = (m_1 + m_2 + m_3 + \frac{m_4}{2}) \cdot R^2$$

| | | | |
|--|--|--|--|
| ABSODEX selection guide specifications check sheet Table direct drive | | (Note) Contact CKD for chain drives and gear drives. | |
| Company name | | Your name | |
| Division | | | |
| TEL | | FAX | |

■ Operating conditions

1. Index 2. Oscillator

Movement angle Ψ (°) or No. of indexes

Movement time t_1 (sec.)

Cycle time t_0 (sec.) cycle time=moving time+dwelling time

(Note) Index time is movement time + settling time.
The settling time differs according to the working condition, but generally is between 0.025 and 0.20 s.

■ Load conditions

Table

Material 1. Steel 2. Aluminum

Outline Dt (mm)

Plate thickness ht (mm)

Weight m1 (kg)

Workpiece

Quantity nw (pc.)


Max. weight mw (kg/pc.)

Installation center Dp (mm)


Pallet fixture

Quantity np (pc.)

Max. weight mp (kg/pc.)

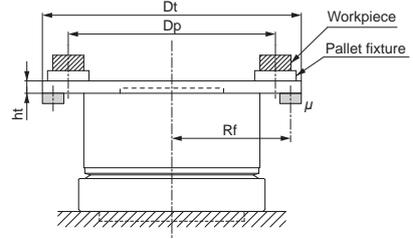

(Fig. 1) Load conditions

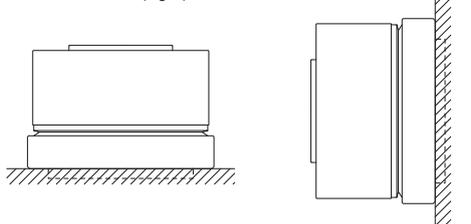

(Fig. 2) Installation position: Horizontal

(Fig. 3) Installation position: Vertical

■ Other load conditions

Installation position

1. Horizontal (Fig.2) 2. Vertical (Fig. 3)

External job

1. None 2. Available

(Note) Eccentric load caused by gravity from vertical installation, external load caused by caulking work

Dial plate support form bottom

1. None 2. Available

Coefficient of friction μ

Work radius Rf (mm)

Device rigidity

1. High 2. Low (Note)

(Note) When using a spline, when unit cannot be fixed directly onto the device (Fig. 4), when there is a mechanism such as a chuck on the table.

Extension with table shaft


1. None 2. Available (Fig. 5)

Actuator movement


1. None 2. Available

(Note) When actuator is mounted on X-Y table or vertical mechanism, etc., and mounted actuator moves

(Note) If 2 is selected for any item, contact CKD.

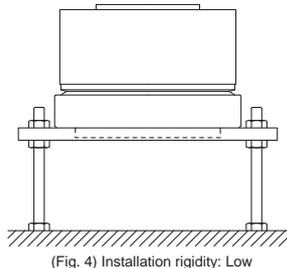

(Fig. 4) Installation rigidity: Low

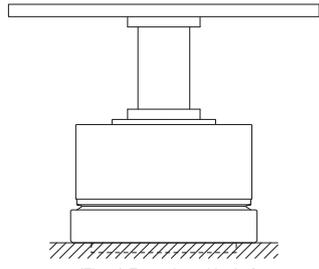

(Fig. 5) Extension with shaft

(Note) Attach system outline and reference drawings so that the optimal model can be selected.

Check below when selecting AX6001MU/AX6003MU.

■ Use conditions, environmental conditions (Optional)

Actuator ambient temperature (°C)

Motor cable length (m)

Driver ambient temperature (°C)

24 VDC power supply cable length (m)

24 VDC power supply coil diameter (mm²)

24 VDC power supply voltage accuracy (%)

24 VDC line point of contact quantity (pc.)

24 VDC line point of contact resistance (mΩ / pc.)

* You can do a more rigorous selection by filling in this field.
* With a power supply cable 1.25 mm² or more, please use one as short (recommended length 1 m or less) as possible.
* If the output voltage is low in a power supply with voltage adjustment, please adjust it to 24 V and use it.

MEMO



Safety Precautions

Always read this section before use.

When designing equipment using ABSODEX, the manufacturer is obligated to ensure that the safety of the mechanism and the system that runs by the electrical controls are secured.

It is important to select, use, handle and maintain the product appropriately to ensure that the CKD product is used safely. Observe warnings and precautions to ensure device safety.

Check that device safety is ensured, and manufacture a safe device.

WARNING

- 1** This product is designed and manufactured as a general industrial machine part. It must be handled by an operator having sufficient knowledge and experience.
- 2** Use the product within specifications range.

This product must be used within its stated specifications. In addition, never modify or additionally machine this product. This product is intended for use as a device or part for general-purpose industrial machinery. It is not intended for use outdoors or for use under the following conditions or environment.
(Note that this product can be used when CKD is consulted prior to use and the customer consents to CKD product specifications. The customer must provide safety measures to avoid risks in the event of problems.)

 - ① Use for applications requiring safety, including nuclear energy, railways, aircraft, marine vessels, vehicles, medical devices, devices or applications in contact with beverages or foodstuffs, amusement devices, emergency operation (cutoff, release, etc.) circuits, press machines, brake circuits, or safety devices or applications.
 - ② Use for applications where life or assets could be adversely affected, and special safety measures are required.
- 3** Observe organization standards and regulations, etc., related to the safety of the device design.
- 4** Do not remove devices before confirming safety.
 - ① Inspect and service the machine and devices after confirming the safety of the system by for instance turning off the nearby devices and connected devices.
 - ② Note that there may be hot or charged sections even after operation is stopped. Be careful when handling devices at the time of inspection and servicing.
 - ③ When inspecting or servicing the device, turn off the device and the power to the facility. Discharge any compressed air from the system, and pay close attention to possible water leakage and leakage of electricity during inspection and servicing.
- 5** Observe the instructions and cautions of each product to prevent accidents.
 - ① When the device is off, do not turn the output shaft of the actuator to a speed exceeding 30 rpm.
The power generation of the actuator may damage the driver or may cause electrical shock.
 - ② Servo off (including emergency stop and alarm) or brake off with rotational force being applied, e.g. by gravity, may cause the output shaft to rotate due to turning force.
Operate the actuator in the balanced condition so that no rotational force is applied for these operations or after safety is confirmed.
 - ③ Keep hands away from the output shaft, as sudden motion may take place during gain adjustments or trial run. When operating the actuator from a position in which motion cannot be confirmed, make sure that safety is assured when the output shaft is rotated beforehand.
 - ④ The brake built-in actuators do not completely clamp the output shaft in all cases.
The built-in brake alone is not enough to secure safety when performing maintenance in applications in which the output axis may rotate due to an unbalanced load, or when the machine is stopped for an extended period of time. Be sure that the equipment is in a balanced state or provide a mechanical locking mechanism.
 - ⑤ It may take several seconds to stop in an emergency depending on rotation speed and load.
- 6** Observe the following precautions to prevent electric shock.
 - ① The power terminals on the front side of the driver and the motor cable connection terminals are high voltage parts. For the terminal blocks, make sure to install the attached terminal cover. Do not touch the actuator and the driver while the power supply is on.
Immediately after the power is turned off, high voltage is applied, so also do not touch them for 5 minutes or more, until the electrical charge accumulated in the capacitor inside the driver is released.
 - ② For operations with the side cover removed, such as maintenance and inspection or change of the switch inside the driver, make sure to turn off the actuator and release the electrical charge for 5 minutes or more before work; otherwise, an electric shock may occur from the high-voltage device.
 - ③ Do not attach or remove any connectors with the power supply on. Doing so may cause malfunction, failure, or electric shock.
- 7** Before restarting the machine and devices, confirm that measures are taken to prevent the loaded objects from being removed.

8 Install an overcurrent protective device.

The wiring to the driver should be in accordance with JIS B 9960-1:2019 (IEC 60204-1:2016) Safety of Machinery - Electrical Equipment of Machines - Part 1: General Requirements. Install an overcurrent protector (a circuit breaker or circuit protector for wiring) on the main power, control power, and I/O power.

(Reference: JIS B 9960-1 7.2.1 General description)

If there is a possibility the circuit current may exceed the rated value of the component or the allowable current of the conductor, an overcurrent protection must be provided. The details of the ratings or set values to be selected shall be provided in 7.2.10.

9 Observe the precautions on the following pages to prevent accidents.

■ The precautions are ranked as "DANGER", "WARNING" and "CAUTION" in this section.

 **DANGER:** When a dangerous situation may occur if handling is mistaken leading to fatal or serious injuries, and when there is a high degree of emergency to a warning.

 **WARNING:** If handled incorrectly, a dangerous situation may occur, resulting in death or serious injury.

 **CAUTION:** When a dangerous situation may occur if handling is mistaken leading to minor injuries or physical damage.

Note that some items described as "CAUTION" may lead to serious results depending on the situation. Every item provides important information and must be observed.

Warranty

1 Warranty period

The product specified herein is warranted for one (1) year from the date of delivery to the location specified by the customer.

2 Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified above, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- 1) Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or the Instruction Manual.
- 2) Failure caused by use of the product exceeding its durability (cycles, distance, time, etc.) or caused by consumable parts.
- 3) Failure not caused by the product.
- 4) Failure caused by use not intended for the product.
- 5) Failure caused by modifications/alterations or repairs not carried out by CKD.
- 6) Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- 7) Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.


Note: For details on the durability and consumable parts, contact your nearest CKD sales office.

3 Compatibility confirmation

The customer is responsible for confirming the compatibility of CKD products with the customer's systems, machines and equipment.


- 1** The actuators and drivers are not waterproof. Provide waterproofing when using them where they may come in contact with water or oil.
- 2** If chips or dusts adhere to the actuator or driver, it may cause leakage of electricity or failure. Check that these do not come in contact with the product.
- 3** Repeatedly turning power ON and OFF may cause damage to the elements inside the driver.
- 4** From the servo-ON state (holding state), when power is turned OFF or servo-OFF, the output axis may move from the holding position without external force being applied.
- 5** The optional electromagnetic brake is provided to increase the holding rigidity when stopping the output shaft. Do not use it to brake or stop the rotating output shaft.
- 6** Actuators and drivers do not guarantee rustproofing. Give careful consideration to storage, installation, and environment.
- 7** Equipment with ABSODEX products installed should have sufficient rigidity to realize full ABSODEX performance. If the load equipment or frame's mechanical unique vibration is relatively low (approx. 200 to 300 Hz or less depending on the equipment), resonance could occur in the ABSODEX product and load equipment or frame. Secure the rotary table and main unit installation bolts, and ensure sufficient rigidity without loosening, etc. [Fig. 1]

[Fig. 1] Actuator installation

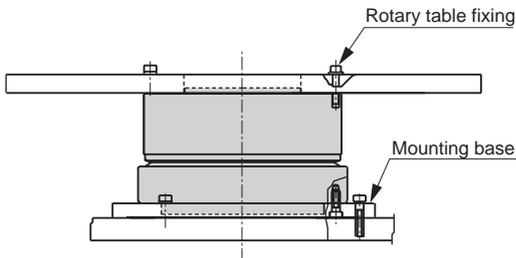

Gain must be adjusted based on load table size, etc. Even when the ABSODEX product is not directly installed, it should be installed on a frame having the highest rigidity possible. [Fig. 2]

[Fig. 2] Actuator attachment

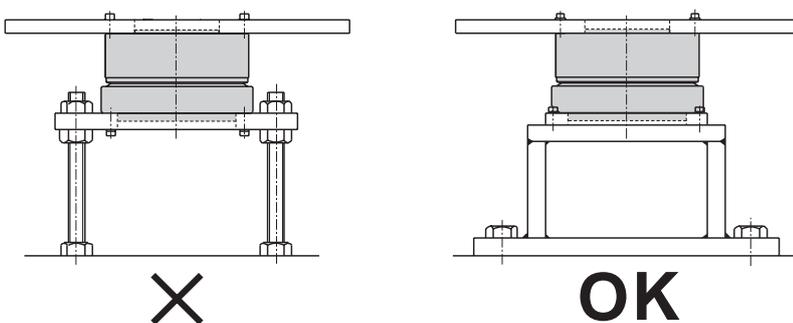

- 8** When extending the output shaft, refer to the references given in Table 1 for the extended shaft's diameter and length. In addition, add dummy inertia by using Fig. 3 as a reference.

[Table 1] Extended output shaft's diameter guideline

| Max. torque [N·m] | Shaft extension (mm) | | | | | TS/TH/XS |
|----------------------|----------------------|------|------|------|------|----------|
| | 50 | 100 | 200 | 300 | 500 | |
| 6 | ø35 | ø40 | ø46 | ø50 | ø60 | |
| 9, 12 | ø40 | ø46 | ø55 | ø60 | ø70 | |
| 18, 22 | ø45 | ø55 | ø65 | ø70 | ø80 | |
| 45 | ø55 | ø65 | ø75 | ø85 | ø95 | |
| 75 | ø62 | ø75 | ø90 | ø95 | ø110 | |
| 150 | ø75 | ø90 | ø110 | ø115 | ø130 | |
| 210 | ø80 | ø95 | ø115 | ø125 | ø140 | |
| 300 | ø90 | ø105 | ø125 | ø140 | ø155 | |
| 500 | ø100 | ø120 | ø145 | ø160 | ø180 | |
| 1000 | ø120 | ø140 | ø170 | ø185 | ø210 | |


| Max. torque [N·m] | Shaft extension (mm) | | MU |
|----------------------|----------------------|-----|----|
| | 50 | 100 | |
| 1.2 | ø35 | ø40 | |
| 3 | ø35 | ø40 | |

Note) The figures in the above table are extended output shaft's diameter references for steel materials (solid shafts). Contact CKD for references for other materials and hollow shafts.

9 If sufficient rigidity cannot be attained, machine resonance is suppressed to some degree by installing dummy inertia as close to the actuator as possible. Examples of adding dummy inertia are shown below.

- As a reference, dummy inertia is [load inertia] × (0.2 to 1). [Fig. 3]


[Fig. 3] Dummy inertia installation example 1

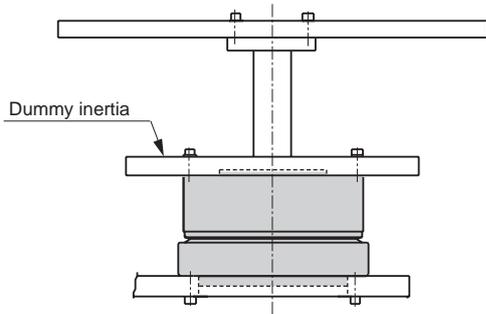


- When coupling with a belt, gears, or spline, or when joining with a key, dummy inertia should be [load inertia] × (0.5 to 2).
- If speed changes with belts or gears, use load inertia as the actuator output shaft conversion value, and install dummy inertia on the actuator. [Fig. 4] [Fig. 5]

(CAUTION) Install dummy inertia as large as possible within the actuator's capacity. (Use steel that has a large specific gravity.)

[Fig. 4] Dummy inertia installation example 2

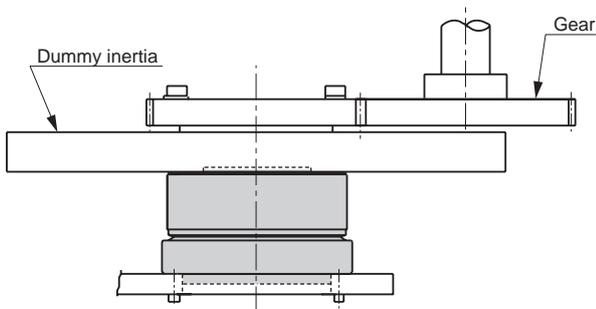

[Fig. 5] Dummy inertia installation example 3

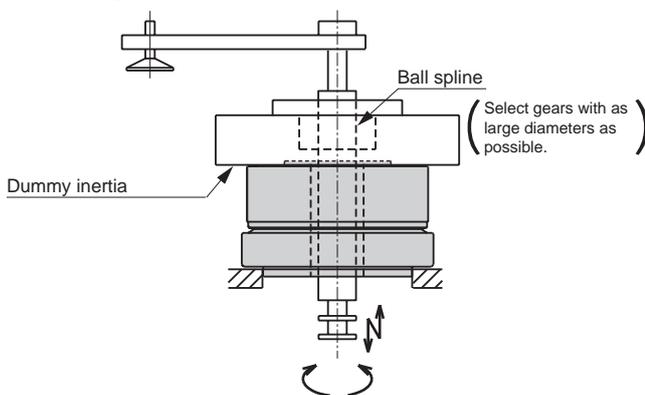

10 A resolver (magnetic position detector) is built into the ABSODEX product.


Do not place strong magnetic fields such as rare earth magnets near the actuator. Do not pass high-current wiring through the hollow hole. If you do, the full performance may not be achieved, and malfunction or fault may result.

11 We recommend that you install a surge protector if there is a possibility that the device may fail due to lightning-induced surges.

For other precautions, check the materials below.

1. On the Internet
CKD Component Products Website
<https://www.ckd.co.jp/kiki/en/>
• Instruction manuals
2. Please request the following materials:
ABSODEX AX Series TS/TH Type Technical Data
ABSODEX AX Series MU Type Technical Data



12 Electromagnetic brake connection
AX4000T-EB

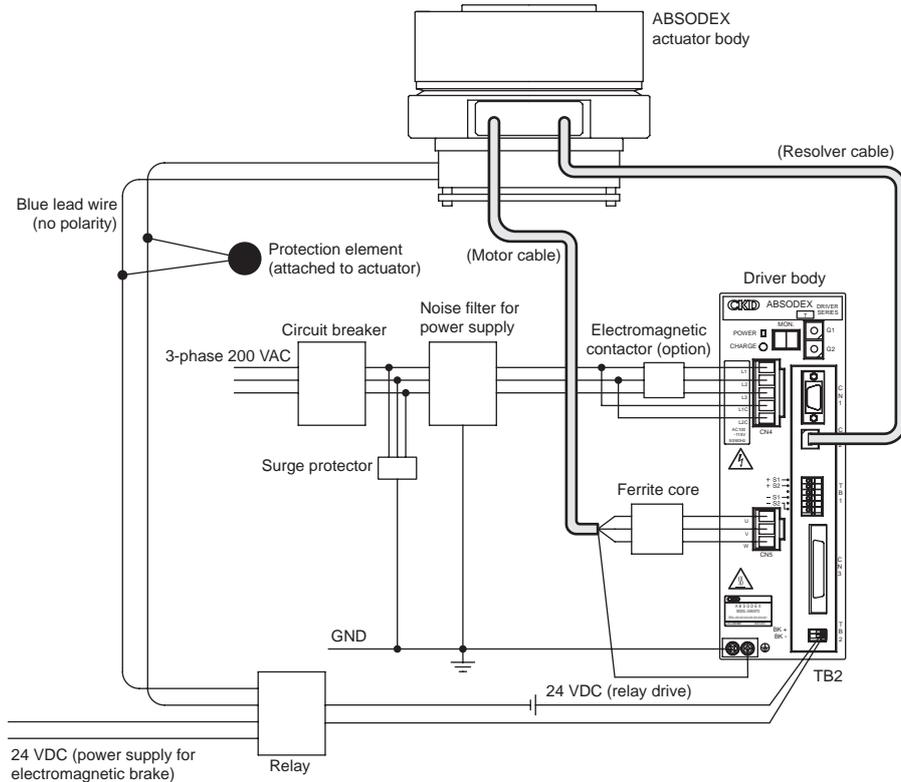

- 1) Do not use the electromagnetic brake to brake or stop the rotating output shaft.
- 2) Connecting the BK+ or BK- of the driver directly with the electromagnetic brake damages the driver.
- 3) To connect induction loads such as the relay shown below to the external contact, use ones with a rated coil voltage of 24 VDC and a rated current within 100 mA, and take a surge suppression measure.

Recommended circuit for electromagnetic brake

• For reed relay serial connection

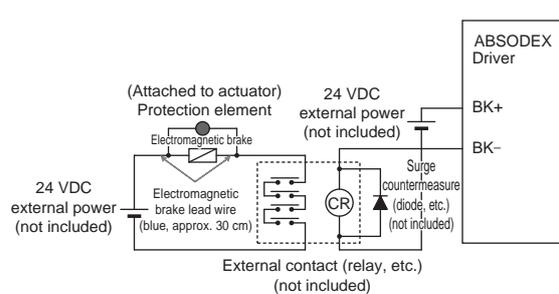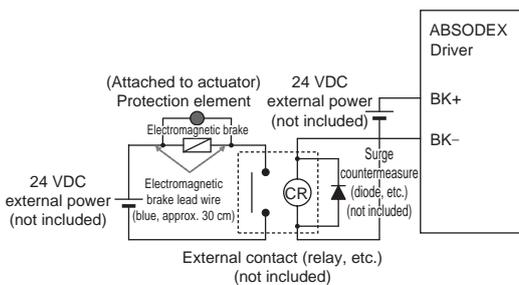

● Operating method

1. Control by the NC program (M68/M69)
When the "M68" code is executed, the current is stopped (brake activated) across BK+ and BK-, and when the "M69" code is executed, the current flows (brake released).
 2. Control by brake release input (I/O connector, 18 pin)
With the brake activated, when brake release is input, the current flows (brake released) across BK+ and BK-.
- When the electromagnetic brake is operated frequently (number times turned ON/OFF), use a solid state relays (SSR) for the external contact.
Recommended model G3NA-D210B-UTU DC5-24 (OMRON)
Read the instruction manual of SSR before use.

- Use a relay with the contact capacity of 10 times or more the rated current. For relays with less capacity than the above, use a multi-polar relay for two or more relay contacts to be serially connected. Connection in this way can extend the lifetime of the contact of the relay having contacts.

13 To pass a shaft through the hollow of the model equipped with an electromagnetic brake, use a non-magnetic material (such as SUS303). If a magnetic material (such as S45C) is used, the shaft will be magnetized, causing stuck iron powder on the equipment or giving magnetic effects on peripheral devices.

14 Note that the magnetic force of the electromagnetic brake may cause stuck iron powder or effects on measuring instruments, sensors or other devices.

15 For other precautions, refer to the instruction manual (technical data).



Safety precautions

Labor saving components: Warnings and Cautions

Be sure to read this section before use.



CAUTION

Mounting, installation and adjustment

- 1 Make sure to use the dedicated cable for connecting between the actuator and driver. Do not modify the length or material of the dedicated cable, as it could cause malfunction or failure.
- 2 Make sure to connect the proper power supply. Connecting a non-designated power supply could cause failure. When turning ON the power supply after it has been turned OFF, check that the actuator output shaft has stopped. Wait at least 10 seconds after turning OFF the power supply.
- 3 Before adjusting the gain, securely install the ABSODEX in the machine and securely mount the loads such as the table. Confirm that no interference occurs and that safety is ensured when movable parts are rotated.
- 4 Do not tap the output shaft with a hammer or apply excessive force during assembly. Doing so could prevent the achievement of full accuracy and performance, or cause failure.
- 5 Do not place objects that produce strong magnetic fields, such as rare earth magnets, near the actuator. It may not be possible to maintain the original accuracy.
- 6 The actuator may become hot, depending on the working conditions. Provide a cover or other means to prevent the actuator from being touched.
- 7 The driver surface may become hot, depending on the working conditions. Place it inside the switchboard or take other measures to prevent it from being touched.
- 8 Do not drill holes into the actuator. Contact CKD if machining is required.
- 9 Please do not perform maintenance work on the actuator, the rotary table attached to the actuator or other moving parts.
- 10 About combining the actuator and driver
 - If the actuator and driver are combined mistakenly after program input (after parameter settings are configured), alarm 3 is activated. Check the actuator and driver combination.
(Note) Alarm 3 occurs to prevent malfunction if the actuator and driver combination differs from when the program was input. Alarm 3 is reset when the program and parameters are input again.
 - If operation is started with an incorrect actuator and driver combination after the program input (after parameter settings are configured), malfunction could occur or equipment be damaged.
 - Order a separate cable when the length of the cable needs to be changed.
 - If a driver other than the compatible type is connected, it could cause the actuator to burn out.
- 11 When using a circuit breaker, select one that incorporates high-frequency measures for inverter use.
- 12 The position of the output shaft on the actuator dimensions does not represent the actuator's origin position. When using it at the output shaft shown in dimension drawings, the origin must be adjusted by the origin offset function.
- 13 The lead-out cable for the AX4009T, AX2000T Series, and AX6000M Series is not movable. Make sure to secure the cable at the connector so that it does not move. Do not lift up the body by the lead-out cable or apply excessive force to the cable. Doing so may activate the malfunction alarm or cause the connector to break or become disconnected.
- 14 For additional notes and conditions of compliance to international standards, please refer to the technical data (ABSODEX AX Series TS/TH Type Technical Data, ABSODEX AX Series MU Type Technical Data).
- 15 Do not pull strongly on the actuator lead-out cable or connector part, as it could cause the lead-out cable shield braid to become exposed.



CAUTION

Use/maintenance

- 1 Do not pull the cable forcibly, apply excessive force to it, or damage it.
- 2 Do not overhaul the actuator unit, as original functions may not be restored. In particular, taking apart the rotational position detection unit may cause malfunction or accuracy degradation.
- 3 When performing withstand voltage test on the machine with the ABSODEX installed, disconnect the main power cable to the ABSODEX driver and ensure that no voltage is applied to the driver. This may lead to failure.
- 4 If alarm 4 (actuator overload: electronic thermal) is activated, wait for the actuator temperature to drop before restarting. Alarm "4" may be activated in the cases described below. Remove the cause before resuming use.
 - If caused by resonance/vibration → Sufficiently secure mounting rigidity.
 - If tact/speed → Increase travel time/stop time.
 - When the structure constrains the output shaft, add → M68 and M69 commands.
- 5 The actuator coordinates are recognized after the power is turned ON. Make sure that the output shaft does not move for several seconds after the power is turned ON.
- 6 For additional notes and troubleshooting for the alarm display, please refer to the technical data (ABSODEX AX Series TS/TH Type Technical Data, ABSODEX AX Series MU Type Technical Data).

For other precautions, check the materials below.

1. CKD website
<https://www.ckd.co.jp/kiki/en/>
 - Instruction manual
2. Request the materials below.
 - ABSODEX AX Series TS/TH Type Technical Data
 - ABSODEX AX Series MU technical data

Related products

Direct drive motor

■ τ DISC Series

The Direct Drive Servo Motor boasts high performance. A varied lineup handling numerous demands for high precision, high speed, speed stability, etc. Achieves one level higher performance.



ABSODEX Actuator NX4 Series

Driver NXD Series

Actuator Actuator NX4 Series

- Flexible rotation positioning
- High rigidity
- Easy installation and centering
- Easy wiring and piping by securing a hollow hole
- Adopts an absolute resolver with superior environment conditions

Driver NXD Series

- Five types of interfaces are available



- Setting tool "NX-Tools" with extensive functionality

Optimal tuning is possible while viewing the real-time waveform

Electric Actuator Motorless General Catalog

Wide-ranging lineup of motorless electric actuators

■ Slider

- For high speed transport EBS-L Series
- For high load transport ETS/ECS Series
- For long stroke transport ETV/ECV Series
- For fast tact transport EKS-L Series

■ Rod

- For press fitting and hoisting EBR-L Series

Catalog No. CC-1456



*Japan only release

Catalog No. CB-055A



Electric actuator FLSH/FLCR/FGRC Series

- 2-Finger Gripper FLSH Series
For soft handling of various workpieces
- Table FLCR Series
For short-stroke workpiece transport and positioning
- Rotary FGRC Series
For indexing operation and workpiece inversion
- Controller ECR Series
"One controller" that connects to any actuator
- Controller ECG Series
"New Controller" with easy inventory management, easy design, and easy configuration

Catalog No. CC-1444A



Electric actuator D Series, G Series

New electric actuator inheriting the DNA of air Components

- D Series (screw drive method)
An actuator specialized for positioning between two points
- D Series (Spring drive method)
Clamp / gripping applications specialized
Spring integrated actuator
- G Series (screw drive method)
64-point positioning actuator

Catalog No. CC-1591



*Japanese catalog only

Electric actuator EJSG Series

Electric actuator that can be used in various environments

- Full lineup of the environment-resistant series
Five products in pursuit of ease of use and high rigidity
Standard Dust-proof / Low dust specifications
Compatible with rechargeable battery manufacturing processes and food manufacturing processes
- Compact and highly rigid body
High rigidity and space saving are realized simultaneously with the use of a wide guide that is integrated with the body.

Catalog No. CC-1569A





CKD Corporation

Website <https://www.ckd.co.jp/en/>

- ◻ 2-250 Uji, Komaki City, Aichi 485-8551, Japan
- ◻ PHONE +81-568-74-1338 FAX +81-568-77-3461

ASIA

喜開理(上海)機器有限公司

CKD(SHANGHAI)CORPORATION

●營業部/上海浦西事務所(SALES HEADQUARTERS / SHANGHAI PUXI OFFICE)
Room 601, 6th Floor, Yuanzhongkeyan Building, No. 1905
Hongmei Road, Xinhui District, Shanghai 200233, China
PHONE +86-21-61911888 FAX +86-21-60905356

- 上海浦東事務所(SHANGHAI PUDONG OFFICE)
- 寧波事務所(NINGBO OFFICE)
- 杭州事務所(HANGZHOU OFFICE)
- 無錫事務所(WUXI OFFICE)
- 昆山事務所(KUNSHAN OFFICE)
- 蘇州事務所(SUZHOU OFFICE)
- 南京事務所(NANJING OFFICE)
- 合肥事務所(HEFEI OFFICE)
- 成都事務所(CHENGDU OFFICE)
- 武漢事務所(WUHAN OFFICE)
- 鄭州事務所(ZHENGZHOU OFFICE)
- 長沙事務所(CHANGSHA OFFICE)
- 重慶事務所(CHONGQING OFFICE)
- 西安事務所(XIAN OFFICE)
- 廣州事務所(GUANGZHOU OFFICE)
- 中山事務所(ZHONGSHAN OFFICE)
- 深圳西事務所(WEST SHENZHEN OFFICE)
- 深圳東事務所(EAST SHENZHEN OFFICE)
- 東莞事務所(DONGGUAN OFFICE)
- 廈門事務所(XIAMEN OFFICE)
- 福州事務所(FUZHOU OFFICE)
- 瀋陽事務所(Shenyang OFFICE)
- 大連事務所(DALIAN OFFICE)
- 長春事務所(CHANGCHUN OFFICE)
- 北京事務所(BEIJING OFFICE)
- 天津事務所(TIANJIN OFFICE)
- 青島事務所(QINGDAO OFFICE)
- 濰坊事務所(WEIFANG OFFICE)
- 濟南事務所(JINAN OFFICE)
- 煙台事務所(YANTAI OFFICE)

CKD INDIA PRIVATE LTD.

- HEADQUARTERS
Unit No. 607, 6th Floor, WellDone Tech Park, Sector 48,
Sohna Road, Gurgaon-122018, Haryana, India
PHONE +91-124-418-8212
- BANGALORE OFFICE
- PUNE OFFICE

Revision details

- Deleted AX7000X and AX9000XS

PT CKD TRADING INDONESIA

- HEAD OFFICE
Menara Bidakara 2, 18th Floor, Jl. Jend. Gatot Subroto Kav.
71-73, Pancoran, Jakarta 12870, Indonesia
PHONE +62-21-2938-6601 FAX +62-21-2906-9470
- MEDAN OFFICE
- BEKASI OFFICE
- KARAWANG OFFICE
- SEMARANG OFFICE
- SURABAYA OFFICE

CKD KOREA CORPORATION

- HEADQUARTERS
(3rd Floor), 44, Sinsu-ro, Mapo-gu, Seoul 04088, Korea
PHONE +82-2-783-5201~5203 FAX +82-2-783-5204
- 水原營業所(SUWON OFFICE)
- 天安營業所(CHEONAN OFFICE)
- 蔚山營業所(ULSAN OFFICE)

M-CKD PRECISION SDN.BHD.

- HEAD OFFICE
Lot No.8,Jalan Modal 23/2, Seksyen 23, Kawasan MIEL,
Fasa 8, 40300 Shah Alam,Selangor Darul Ehsan, Malaysia
PHONE +60-3-5541-1468 FAX +60-3-5541-1533
- JOHOR BAHRU BRANCH OFFICE
- PENANG BRANCH OFFICE

CKD SINGAPORE PTE. LTD.

No.33 Tannery Lane #04-01 Hoesteel Industrial
Building, Singapore 347789, Singapore
PHONE +65-67442623 FAX +65-67442486

CKD CORPORATION BRANCH OFFICE

No.33 Tannery Lane #04-01 Hoesteel Industrial
Building, Singapore 347789, Singapore
PHONE +65-67447260 FAX +65-68421022

CKD THAI CORPORATION LTD.

- HEADQUARTERS
19th Floor, Smooth Life Tower, 44 North Sathorn Road,
Silom, Bangkok, Bangkok 10500, Thailand
PHONE +66-2-267-6300 FAX +66-2-267-6304-5
- NAVANAKORN OFFICE
- EASTERN SEABOARD OFFICE
- LAMPHUN OFFICE
- KORAT OFFICE
- AMATANAKORN OFFICE
- PRACHINBURI OFFICE
- SARABURI OFFICE

台灣喜開理股份有限公司

TAIWAN CKD CORPORATION

- HEADQUARTERS
16F-3, No. 7, Sec. 3, New Taipei Blvd., Xinzhuang Dist.,
New Taipei City 242, Taiwan
PHONE +886-2-8522-8198 FAX +886-2-8522-8128
- 新竹營業所(HSINCHU OFFICE)
- 台中營業所(TAICHUNG OFFICE)
- 台南營業所(TAINAN OFFICE)
- 高雄營業所(KAOHSIUNG OFFICE)

CKD VIETNAM ENGINEERING CO.,LTD.

- HEADQUARTERS
18th Floor, CMC Tower, Duy Tan Street, Cau Giay
District, Hanoi, Vietnam
PHONE +84-24-3795-7631 FAX +84-24-3795-7637
- HO CHI MINH OFFICE

EUROPE

CKD EUROPE B.V.

- HEADQUARTERS
Beechavenue 125A, 1119 RB Schiphol-Rijk, the Netherlands
PHONE +31-23-654-1490
- CKD EUROPE GERMANY OFFICE
- CKD EUROPE UK
- CKD EUROPE CZECH O.Z.
- CKD CORPORATION EUROPE BRANCH
Beechavenue 125A, 1119 RB Schiphol-Rijk, the Netherlands
PHONE +31-23-654-1490

NORTH AMERICA & LATIN AMERICA

CKD MEXICO, S. DE R.L. DE C.V.

Cerrada la Noria No. 200 Int. A-01, Querétaro Park II,
Parque Industrial Querétaro, Santa Rosa Jáuregui,
Querétaro, C.P. 76220, México
PHONE +52-442-161-0624

CKD USA CORPORATION

- HEADQUARTERS
1605 Penny Lane, Schaumburg, IL 60173, USA
PHONE +1-847-648-4400 FAX +1-847-565-4923
- LEXINGTON OFFICE
- SAN ANTONIO OFFICE
- SAN JOSE OFFICE/ TECHNICAL CENTER
- DETROIT OFFICE
- BOSTON OFFICE

The goods and/or their replicas, the technology and/or software found in this catalog are subject to complementary export regulations by Foreign Exchange and Foreign Trade Law of Japan.

If the goods and/or their replicas, the technology and/or software found in this catalog are to be exported from Japan, Japanese laws require the exporter makes sure that they will never be used for the development and/or manufacture of weapons for mass destruction.